



WIRING PIGTAIL KITS PASSENGER CAR

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD			
Contour			
1998-96	Actuator — Speed Control	10M	WPT-762
1997-95	Alternator	3M	WPT-535
1997-96	Coil — Ignition	3F	WPT-517
2000-99	Fuel Injector 2.5L	2F	WPT-159
2000-95	Fuel Injector 2.0L	2M	WPT-336
1998-95	Fuel Injector 2.5L	2M	WPT-336
2000-96	Lamp — Front Turn	3M	WPT-4771
1996-95	Sensor — Mass Air Flow	5M	WPT-686
	Switch — Backup Lamp MT	5M	WPT-623
Crown Victoria			
2004	AC Compressor Clutch	2F	WPT-159
2002-94	AC Compressor Clutch	2M	WPT-173
2004-98	Actuator — Door Lock — Decklid/Liftgate	3M	WPT-446
1996-95	Actuator — Door Lock — Decklid/Liftgate	3M	WPT-446
2004-93	Actuator — Door Lock — LH — Front	2M	WPT-312
2003-93	Actuator — Door Lock — LH — Rear	2M	WPT-312
2004-93	Actuator — Door Lock — RH — Front	2M	WPT-312
2003-93	Actuator — Door Lock — RH — Rear	2M	WPT-312
2002-96	Actuator — Electronic Variable Orifice (EVO)	2M	WPT-146
2000-98	Actuator — Electronic Variable Orifice (EVO)	14M	WPT-666
2005-93	Actuator — Speed Control	10M	WPT-762
2002-98	Alternator Police; w/6G Alternator	3M	WPT-118
1995	Alternator	3M	WPT-119
	1M	WPT-851
1997-93	Bulkhead — Transmission — In-line (Female)	9F	WPT-570
2004-98	Bulkhead — Transmission — In-line (Male)	7F	WPT-567
2004-93	CD Changer	14M	WPT-296
2002-98	CD Changer	12M	WPT-164
2003-92	Capacitor — Ignition / Radio	1M	WPT-352
2004-97	Cigar Lighter	1M	WPT-476
1995-93	Cigar Lighter	1M	WPT-476
2003-93	Clock	8F	WPT-100
1997-94	Coil — Ignition	3M	WPT-526
2003-95	Control Head — Electronic Automatic Temperature (EATC)	13F	WPT-176
1995	Element — Heated Seat	4M	WPT-307
2001	Floor Shifter — Inline (Female)	4F	WPT-467
1997-92	Fuel Injector	2M	WPT-372
2004-03	Fuel Pump / Sending Unit	10M	WPT-504
2001	Fuel Pump / Sending Unit	8M	WPT-172
1994-93	Fuel Pump / Sending Unit	4M	WPT-454
2003-01	Horn	2F	WPT-815
2000-95	Horn	2M	WPT-372
1994-92	Horn	1M	WPT-378
2004-01	Instrument Cluster Analog Plug B	16M	WPT-202
2004-95	Instrument Cluster Analog Plug A	16M	WPT-278
	Electronic	16M	WPT-341
	12M	WPT-613
1999-95	Instrument Cluster Analog Plug B	16M	WPT-202
2002-93	Junction Box — Relay	17F	WPT-183
2004-93	Lamp — CHMSL (Center High Mount Stop Lamp)	2M	WPT-314
1996-95	Lamp — Courtesy — Door	2F	WPT-212
1994-93	Lamp — Courtesy — Door	2F	WPT-356

WIRING PIGTAIL KITS

PASSENGER CAR



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD — Cont'd			
Crown Victoria — Cont'd			
2004-93	Lamp — Courtesy — Footwell	2F	WPT-356
2004-02	Lamp — Courtesy — Reading (Rear)	3M	WPT-239
1995-93	Lamp — Door Lock Cylinder	2F	WPT-783
2001-98	Lamp — Front Cornering / Turn	3M	WPT-105
2003-98	Lamp — Front Turn/Marker	3M	WPT-109
1997-93	Lamp — Headlamp High Beam	2F	WPT-107
1997-92	Lamp — Headlamp Low Beam	2F	WPT-248
2003-98	Lamp — Headlamp High/Low Beam	3M	WPT-110
2004-93	Lamp — Instrument	2M	WPT-597
1997-95	Lamp — License	2N/A	WPT-471
2004-95	Lamp — Map	1F	WPT-499
2004-98	Lamp — Park/Turn/Stop Gray	3N/A	WPT-151
2002-01	Lamp — Park/Turn/Stop	3N/A	WPT-120
1997-95	Lamp — Park/Turn/Stop	3N/A	WPT-120
1994-92	Lamp — Park/Turn/Stop	3F	WPT-429
	Lamp — Rear Park	3F	WPT-429
2004-98	Lamp — Rear Turn	2M	WPT-658
2004-95	Lamp — Reverse	2N/A	WPT-121
1994	Lamp — Reverse	2N/A	WPT-149
2003	Lamp — Side Marker	2F	WPT-150
2005-00	Lamp — Storage Compartment — Trunk	2F	WPT-316
1999-95	Lamp — Storage Compartment — Trunk	2M	WPT-355
2005	Lamp — Under Hood	2M	WPT-495
2004-96	Lamp — Under Hood	2M	WPT-4951
1995-93	Lamp — Under Hood	2M	WPT-370
2004-93	Mirror — Rearview (Electrochromatic)	3M	WPT-584
1996-95	Mirror — Rearview (Electrochromatic)	6M	WPT-193
2004-99	Mirror — Sideview	3F	WPT-409
1994-93	Mirror — Sideview	3F	WPT-409
2001-95	Mirror — Sideview / Heated	6F	WPT-599
2004-99	Mirror — Vanity	2F	WPT-479
1996-95	Mirror — Vanity	1F	WPT-562
1995	Module — Air Suspension Left	13M	WPT-610
	Right	13M	WPT-627
2004-98	Module — Anti-theft	16F	WPT-645
2005-03	Module — Auto Lamps	6F	WPT-502
2002-98	Module — Auto Lamps	6M	WPT-246
1997-96	Module — Auto Lamps	5M	WPT-300
1994-93	Module — Auto Lamps	5M	WPT-300
2005-99	Module — Daytime Running Lamp (DRL)	6F	WPT-455
1998-93	Module — Daytime Running Lamp (DRL)	8M	WPT-298
2005-95	Module — Drivers Door	12M	WPT-463
2002-93	Module — Drivers Door	5M	WPT-377
1997-93	Module — Ignition	12M	WPT-583
2004-95	Module — Lighting Control Right Lower	16M	WPT-242
	Left Upper	16M	WPT-632
1997-95	Module — Lighting Control	2M	WPT-374
2004-95	Module — Radio Power Antenna	1M	WPT-407
2000-96	Module — Remote Keyless Entry	8M	WPT-737
1995-93	Module — Remote Keyless Entry	8F	WPT-679
1994-93	Module — Remote Keyless Entry Left	13M	WPT-612
	Right	13M	WPT-625
	16M	WPT-632
1996-95	Module — Seat Memory	2M	WPT-374
	16M	WPT-242
1997-92	Module — Variable Assist Power Steering (VAPS)	14M	WPT-666
2003-98	Module — Variable Speed Blower Controller	5F	WPT-153



WIRING PIGTAIL KITS PASSENGER CAR

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD — Cont'd			
Crown Victoria — Cont'd			
2004-93	Module — Wiper Control	14M	WPT-666
2003-01	Motor — Adjustable Pedal	2M	WPT-370
2003-93	Motor — Air Suspension Compressor	4F	WPT-171
2004-03	Motor — Engine Cooling Fan	4M	WPT-750
2002-01	Motor — Engine Cooling Fan	4F	WPT-171
2000	Motor — Engine Cooling Fan		
	Before 4/8/00	3F	WPT-168
	From 4/8/00	4F	WPT-171
1999-98	Motor — Engine Cooling Fan	3F	WPT-168
1997-95	Motor — Engine Cooling Fan		
	With A/C	2F	WPT-361
2004-93	Motor — Fuel Filler Door	2M	WPT-370
2004-95	Motor — Heater/ AC Blend Door	8F	WPT-100
1994-93	Motor — Heater/ AC Blend Door	8F	WPT-117
2003-96	Motor — Idle Air Control	2M	WPT-357
1995-92	Motor — Idle Air Control	2M	WPT-684
2003-95	Motor — Power Window — LH — Front	2F	WPT-484
2004-95	Motor — Power Window — LH — Rear	2F	WPT-484
2003-95	Motor — Power Window — RH — Front	2F	WPT-484
	Motor — Power Window — RH — Rear	2F	WPT-484
1994-93	Motor — Radio Power Antenna	2N/A	WPT-471
2000-98	Motor — Seat Lumbar	2M	WPT-374
1995	Motor — Seat Lumbar	2M	WPT-374
1994-93	Motor — Seat Lumbar	2M	WPT-478
2004-98	Motor — Seat Recline	2M	WPT-370
1995	Motor — Seat Recline	2M	WPT-370
2004-00	Motor — Windshield Washer Fluid Pump	2M	WPT-357
1999-92	Motor — Windshield Washer Fluid Pump	2M	WPT-355
2005-03	Motor — Windshield Wiper	12F	WPT-850
2002-95	Motor — Windshield Wiper	7M	WPT-175
1994-93	Motor — Windshield Wiper	3M	WPT-333
2003-02	Overhead Console — In-line (Female)	12F	WPT-591
2004-00	Power Point	2M	WPT-355
1997-95	Power Point	2M	WPT-355
1996-95	Processor — Radio Audio Signal Control Unit	14M	WPT-296
2003-02	Pump — Fuel (External)	2M	WPT-357
2004-03	Radio	8F	WPT-219
	16F	WPT-221
2004-98	Radio	4M	WPT-380
2002-98	Radio	16F	WPT-186
	20F	WPT-184
	8F	WPT-185
1997-95	Radio	8M	WPT-730
2004-95	Radio — Amplifier	6M	WPT-375
1995	Radio — Amplifier	2M	WPT-478
2002-98	Relay — Flasher	3M	WPT-301
1995-93	Relay — Headlamp	6M	WPT-761
1995	Relay — Starter Motor	1M	WPT-378
1994-93	Relay — Starter Motor	1F	WPT-371
2004-99	Relay — Turn Signal Lamp	10F	WPT-367
2004-03	Resistor — Blower Motor (Front)	4M	WPT-114
2004-95	Sensor — Air Charge Temperature	2M	WPT-420
1994-93	Sensor — Air Charge Temperature	2M	WPT-428
2004-98	Sensor — Air Suspension — RH — Rear	3F	WPT-525
1997-95	Sensor — Air Suspension — RH — Rear	2F	WPT-373
2004-93	Sensor — Ambient Temp	2M	WPT-437
2003-97	Sensor — Brake Fluid Level	3M	WPT-118
1996-95	Sensor — Brake Fluid Level	3M	WPT-4591
1994-93	Sensor — Brake Fluid Level	3M	WPT-446
1992	Sensor — Brake Fluid Level	2M	WPT-372
2003-01	Sensor — Cam Shaft Position	2F	WPT-759

WIRING PIGTAIL KITS

PASSENGER CAR



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD — Cont'd			
Crown Victoria — Cont'd			
2000-99	Sensor — Cam Shaft Position	2F	WPT-579
1998-96	Sensor — Coolant Temperature	2M	WPT-206
1995-92	Sensor — Coolant Temperature	2M	WPT-437
2004-01	Sensor — Crank Shaft Position	2F	WPT-759
1998-96	Sensor — Crank Shaft Position	2F	WPT-579
2004-98	Sensor — Cylinder Head Temperature		
	4.6L	2M	WPT-338
2003	Sensor — Delta Pressure Feedback EGR	6F	WPT-435
2002	Sensor — Delta Pressure Feedback EGR	3F	WPT-393
2001-96	Sensor — Delta Pressure Feedback EGR	3F	WPT-188
1994-92	Sensor — Delta Pressure Feedback EGR	3M	WPT-458
2004	Sensor — EATC In Car Temperature	2M	WPT-420
2003	Sensor — EATC In Car Temperature		
	In Instrument Panel	2M	WPT-486
	In Plenum Chamber	2M	WPT-420
2002-95	Sensor — EATC In Car Temperature	2M	WPT-486
2000-98	Sensor — Fuel Tank Temp	2M	WPT-470
2004-03	Sensor — Knock	2M	WPT-351
2003-95	Sensor — Mass Air Flow	6M	WPT-102
1994-93	Sensor — Mass Air Flow	4M	WPT-511
1996-95	Sensor — Memory Seat (Horizontal)	3M	WPT-241
1995	Sensor — Memory Seat (Recline)	3M	WPT-241
1996-95	Sensor — Memory Seat Track Position	3M	WPT-241
2001-98	Sensor — O2 (HEGO/EGO)		
	Type - B; Round; Color - Gray	4M	WPT-111
1999-95	Sensor — O2 (HEGO/EGO)		
	Type - A; Round; Color - Blue	4M	WPT-112
2004-97	Sensor — Steering Rotation	4M	WPT-417
1996-93	Sensor — Steering Rotation	4M	WPT-703
2004-95	Sensor — Sunload	2M	WPT-314
2003-97	Sensor — Throttle Position	3F	WPT-170
1994-92	Sensor — Throttle Position	3M	WPT-445
2004-98	Sensor — Transmission Range	12M	WPT-806
2004-93	Sensor — Washer Fluid Level	2M	WPT-684
	Solenoid — Brake Shift Park Interlock	3M	WPT-210
2004-97	Solenoid — Canister Vent	2M	WPT-322
1995-92	Solenoid — Canister Vent	2M	WPT-441
2003-96	Solenoid — EGR Vacuum Regulator	2M	WPT-359
1995-92	Solenoid — EGR Vacuum Regulator	2M	WPT-374
1998-93	Speaker — Door (Front)	2M	WPT-416
2004-95	Speaker — Door (Rear)	2M	WPT-416
2004-93	Speaker — Rear	2M	WPT-416
2003-99	Speaker — Rear	2F	WPT-373
2004	Speaker — Subwoofer	2M	WPT-478
1997-96	Speaker — Subwoofer	2M	WPT-478
2004-02	Switch — A/C Compressor Clutch Cycling	4F	WPT-169
2002-98	Switch — A/C High Pressure	4M	WPT-303
2002-01	Switch — A/C Pressure Cut Off	4F	WPT-182
2000-99	Switch — A/C Pressure Cut Off	4F	WPT-169
2000-98	Switch — A/C Pressure Cut Off	4M	WPT-303
2003	Switch — Air Suspension	3M	WPT-617
2001-92	Switch — Air Suspension	3M	WPT-617
2004-98	Switch — Brake Deactivation	2M	WPT-422
2004-03	Switch — Brake Pressure	2M	WPT-322
1997-93	Switch — Brake Pressure	2M	WPT-232
2003-96	Switch — Coolant Temperature Sending Unit	2M	WPT-431
1994-92	Switch — Coolant Temperature Sending Unit	1M	WPT-476
2004-95	Switch — Courtesy Lamp	3M	WPT-4591
1995	Switch — Courtesy Lamp	1F	WPT-499
1994-93	Switch — Courtesy Lamp	3F	WPT-213
2004-93	Switch — Deck Lid / Hatch Release	2M	WPT-478



WIRING PIGTAIL KITS PASSENGER CAR

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD — Cont'd			
Crown Victoria — Cont'd			
1999-95	Switch — Deck Lid / Lift Gate Ajar 12 Gauge	2M	WPT-370
2004-95	Switch — Dimmer	8M	WPT-283
2002-93	Switch — Door Ajar / Interior Lamp	1F	WPT-499
2003	Switch — Door Lock (LH)	8F	WPT-485
	Switch — Door Lock (RH)	8F	WPT-485
1994-93	Switch — Door Lock (RH)	5M	WPT-346
2003-01	Switch — Fuel Filler Door	2M	WPT-370
1996-95	Switch — Fuel Filler Door	2M	WPT-370
1997-95	Switch — Gear Shift Select / Neutral Safety	8M	WPT-389
2004-95	Switch — Headlamp	12M	WPT-463
2003	Switch — Headlamp	10F	WPT-156
1995-93	Switch — Headlamp/Autolamp — In-line (Female)	3M	WPT-412
2000-95	Switch — Heated Back Light (Rear Defrost)	4M	WPT-293
1994-93	Switch — Heated Back Light (Rear Defrost)	5M	WPT-377
2003-95	Switch — Heater / A/C Blower (Front)	4M	WPT-103
1994-93	Switch — Heater / A/C Blower (Front)	4M	WPT-398
2004-95	Switch — Heater A/C Temp Control w/Manual AC	3M	WPT-328
1997	Switch — Heater A/C Temp Control w/ATC	4M	WPT-344
1997-96	Switch — Heater A/C Temp Control w/ATC AC	3M	WPT-328
1996	Switch — Heater A/C Temp Control	4M	WPT-344
1995	Switch — Heater A/C Temp Control w/Manual AC	4M	WPT-344
1994-93	Switch — Heater A/C Temp Control	4M	WPT-344
2004-03	Switch — Horn	8F	WPT-227
2003-02	Switch — Horn/Speed Controls/Radio Control — In-line (Female)	4M	WPT-543
2004-98	Switch — Ignition	15M	WPT-475
1997-93	Switch — Ignition	16M	WPT-577
2004-93	Switch — Inertia	3M	WPT-446
2004-01	Switch — Keyless Entry	8F	WPT-833
2004-95	Switch — Message Center	8M	WPT-283
2004-03	Switch — Multi Function	6F	WPT-440
	10F	WPT-501
	12F	WPT-503
2003-95	Switch — Multi Function	11M	WPT-178
2003-93	Switch — Multi Function	7F	WPT-179
1995-93	Switch — Multi Function	9M	WPT-611
2005	Switch — Oil Sending Unit Less Engine Oil Cooler	1M	WPT-439
2004-00	Switch — Oil Sending Unit	1M	WPT-439
1999-92	Switch — Oil Sending Unit	1M	WPT-616
2004-95	Switch — Overdrive Cancel	2F	WPT-226
2003	Switch — Park Brake	2F	WPT-479
2004-95	Switch — Power Mirror	8M	WPT-313
1994-93	Switch — Power Mirror	3F	WPT-580
2004-95	Switch — Power Steering Pressure	2M	WPT-372
2003	Switch — Power Window — Driver	8F	WPT-655
2002-98	Switch — Power Window — Driver	14F	WPT-402
2002-95	Switch — Power Window — Driver	5M	WPT-346
1994-93	Switch — Power Window — Driver	5M	WPT-528
2003	Switch — Power Window — Driver (Lockout) (421)	8F	WPT-561
2004-03	Switch — Power Window — LH — Rear	8F	WPT-655
2002-95	Switch — Power Window — LH — Rear	7M	WPT-588
2003	Switch — Power Window — Passenger (Front)	8F	WPT-655
2002-95	Switch — Power Window — Passenger (Front)	14F	WPT-402
1994-93	Switch — Power Window — Passenger (Front)	5M	WPT-346
2003	Switch — Power Window — RH — Rear	8F	WPT-655
2002-95	Switch — Power Window — RH — Rear	7M	WPT-588

WIRING PIGTAIL KITS

PASSENGER CAR



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD — Cont'd			
Crown Victoria — Cont'd			
1994-93	Switch — Power Window — RH — Rear	5M	WPT-528
	Switch — Radio Antenna	8F	WPT-100
2004-01	Switch — Seat (Driver)	8F	WPT-384
2003	Switch — Seat (Driver)	12F	WPT-691
2000-96	Switch — Seat (Driver)	12M	WPT-626
1995	Switch — Seat (Driver)	8F	WPT-679
2003	Switch — Seat (Passenger)	12F	WPT-691
2002-95	Switch — Seat (Passenger)	12M	WPT-626
1997-95	Switch — Seat Lumbar	2F	WPT-544
2003-98	Switch — Speed Control Deactivation	2F	WPT-195
2004-93	Switch — Stop Lamp	2M	WPT-197
2002-01	Switch — Traction Control	2M	WPT-370
2001	Switch — Traction Control	7F	WPT-821
2000-98	Switch — Traction Control	2M	WPT-4951
2004-98	Test Connector — Diagnostic	16F	WPT-615
2002-92	Test Connector — Diagnostic	6M	WPT-743
1996-95	Test Connector — Diagnostic	16F	WPT-615
2005-03	Transceiver — Passive Anti-Theft (PATS)	4F	WPT-261
2002-98	Transceiver — Passive Anti-Theft (PATS)	4M	WPT-293
2003	Transceiver — Passive Anti-Theft (PATS) — In-line (Female)	4F	WPT-261
1997-96	Valve — Vapor Management	2M	WPT-545
Escort/EXP			
2003-95	AC Compressor Clutch	2M	WPT-173
2003-97	Actuator — Door Lock — LH — Front	2M	WPT-312
	Actuator — Door Lock — RH — Rear	2F	WPT-849
	Cigar Lighter	1M	WPT-476
1999-97	Fuel Injector	2F	WPT-244
2003-98	Lamp — Fog / Driving	2M	WPT-122
	Lamp — Front Turn	2M	WPT-536
2003-97	Lamp — Front Turn/Marker	3M	WPT-109
2003-95	Lamp — Headlamp- High/Low Beam	3M	WPT-110
2003-97	Lamp — Park/Turn/Stop	3M	WPT-108
2002-97	Lamp — Reverse	3M	WPT-105
1996-93	Lamp — Reverse	3M	WPT-105
2003-97	Motor — Engine Cooling Fan	3F	WPT-168
2000-98	Motor — Idle Air Control		
	2.0L SOHC	2M	WPT-357
1996	Motor — Idle Air Control		
	1.9L SOHC	2M	WPT-357
2003-98	Motor — Power Window — LH — Front	2F	WPT-849
2003-97	Motor — Windshield Wiper	5F	WPT-158
2000-97	Sensor — Cam Shaft Position	2F	WPT-579
2002-99	Sensor — Catalyst Monitor		
	SOHC	4M	WPT-123
1999	Sensor — Catalyst Monitor		
	Coupe 2 Door	4M	WPT-112
1998-97	Sensor — Catalyst Monitor	4M	WPT-123
1996	Sensor — Coolant Temperature	2M	WPT-206
1995	Sensor — Coolant Temperature	2M	WPT-437
2003-96	Sensor — Crank Shaft Position	2F	WPT-579
2003-98	Sensor — Fuel Rail Pressure		
	Tin Terminal	3M	WPT-777
1999	Sensor — Fuel Rail Pressure		
	Gold Terminal	3M	WPT-118
2002-99	Sensor — Fuel Tank Pressure Transducer	3M	WPT-777
2003	Sensor — Intake Manifold Runner Control	4F	WPT-347
2000-97	Sensor — Intake Manifold Runner Control	4F	WPT-347
2002-98	Sensor — Knock	2F	WPT-776
2003-97	Sensor — O2 (HEGO/EGO)	4M	WPT-112
	Sensor — Power Steering Pressure	4F	WPT-169



WIRING PIGTAIL KITS PASSENGER CAR

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD — Cont'd			
Escort/EXP — Cont'd			
2002-00	Sensor — Throttle Position 2.0L	3F	WPT-754
1999	Sensor — Throttle Position	3F	WPT-170
1998	Sensor — Throttle Position 2.0L SOHC	3F	WPT-754
2003-95	Speaker — Door (Front)	2M	WPT-416
	Speaker — Door (Rear)	2M	WPT-416
2003-97	Switch — A/C Compressor Clutch Cycling	4F	WPT-169
1996	Switch — A/C Compressor Clutch Cycling	2M	WPT-438
2003-97	Switch — Heater / A/C Blower (Front)	4M	WPT-103
2003-95	Switch — Inertia	3M	WPT-446
2003-97	Switch — Power Mirror	8F	WPT-117
Focus			
2003-00	AC Compressor Clutch	2M	WPT-173
2004-00	Actuator — Speed Control	10M	WPT-762
	Alternator	3M	WPT-118
2003-02	Capacitor — Ignition / Radio 2.0L	1M	WPT-352
2003-00	Cigar Lighter	2M	WPT-633
	Fuel Injector All	2M	WPT-714
2002-00	Fuel Injector SOHC	2F	WPT-159
2004	Lamp — CHMSL (Center High Mount Stop Lamp)	2F	WPT-195
2004-00	Lamp — Dome	2M	WPT-719
2003-00	Lamp — Instrument	2M	WPT-790
2002-00	Lamp — Park/Turn/Stop	3M	WPT-108
	Lamp — Rear Turn Sedan 4 Door	3M	WPT-109
	Lamp — Reverse Coupe 3 Door	2F	WPT-150
	Sedan, Wagon	3M	WPT-105
2003-00	Lamp — Storage Compartment — Trunk	2F	WPT-768
2004-00	Mirror — Sideview	5M	WPT-697
2001	Module — Drivers Door	16F	WPT-645
2003-02	Module — Power Moonroof	10F	WPT-156
2003-00	Motor — Engine Cooling Fan 2.0L	2M	WPT-822
2004	Motor — Heater / AC Blower (Front)	2F	WPT-236
2002	Motor — Heater / AC Blower (Front)	2F	WPT-236
2000	Motor — Heater / AC Blower (Front)	2F	WPT-236
2004-00	Motor — Heater / AC Blend Door	4F	WPT-253
2004	Motor — Power Window — LH — Front	2F	WPT-824
	Motor — Power Window — RH — Front	2F	WPT-824
2004-00	Motor — Rear Window Washer Fluid Pump	2M	WPT-451
2004	Radio	8M	WPT-155
	17F	WPT-157
2003-00	Radio	6M	WPT-614
2004	Radio — Amplifier	10M	WPT-667
2004-00	Resistor — Blower Motor (Front)	4M	WPT-480
2003-00	Sensor — Cam Shaft Position	2M	WPT-717
2004	Sensor — Coolant Temperature	2M	WPT-206
2003-02	Sensor — Coolant Temperature 2.0L	2M	WPT-206
2000	Sensor — Coolant Temperature	2M	WPT-206
2003-02	Sensor — Crank Shaft Position	2M	WPT-717
2003-00	Sensor — Cylinder Head Temperature	2M	WPT-418
2003-02	Sensor — Delta Pressure Feedback EGR	3F	WPT-188
2000	Sensor — Delta Pressure Feedback EGR	3F	WPT-188

WIRING PIGTAIL KITS

PASSENGER CAR



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD — Cont'd			
Focus — Cont'd			
2003-02	Sensor — Fuel Rail Pressure		
	2.0L	3M	WPT-777
	Sensor — Knock		
	2.0L DOHC, SOHC	2M	WPT-707
2001-00	Sensor — Knock	2M	WPT-351
2004	Sensor — Mass Air Flow		
	2.3L DOHC	6F	WPT-795
2003-00	Sensor — Mass Air Flow	6M	WPT-102
2003	Sensor — Power Steering Pressure	4F	WPT-808
2003-00	Sensor — Throttle Position		
	2.0L	3M	WPT-777
	Sensor — Yaw	3F	WPT-796
2004-00	Solenoid — Canister Vent	2M	WPT-322
2003-00	Solenoid — EGR Vacuum Regulator	2M	WPT-359
	Speaker — Door (Front)	8M	WPT-155
2000	Speaker — Door (Rear)	2F	WPT-815
2003-02	Speaker — Subwoofer	10M	WPT-667
2003	Switch — A/C Compressor Clutch Cycling	4F	WPT-169
2001-00	Switch — A/C Compressor Clutch Cycling	4F	WPT-169
2003-00	Switch — A/C Pressure Cut Off	4M	WPT-303
2004-02	Switch — Backup Lamp		
	2.0L	3M	WPT-857
2003-02	Switch — Brake Pressure	2M	WPT-451
2002	Switch — Clutch Pedal Position	5M	WPT-721
2003-00	Switch — Deck Lid / Hatch Release		
	Sedan, Wagon	6M	WPT-276
2003-01	Switch — Deck Lid / Lift Gate Ajar	2M	WPT-441
2003-00	Switch — Deck Lid / Lift Gate Ajar	5M	WPT-827
	Switch — Door Ajar / Interior Lamp	2F	WPT-634
2004-00	Switch — Door Lock (LH)	7M	WPT-578
	Switch — Door Lock (RH)	7M	WPT-578
2003-02	Switch — Hazard Warning	6F	WPT-481
2002-01	Switch — Hazard Warning	11M	WPT-811
2003-00	Switch — Headlamp	16F	WPT-716
2004	Switch — Headlamp/Foglamp	16F	WPT-716
2003-00	Switch — Heated Back Light (Rear Defrost)	3M	WPT-4591
2004	Switch — Heated Seat — LH — Front	8M	WPT-167
2003-02	Switch — Heated Seat — RH — Front	8M	WPT-264
2004-00	Switch — Heater / A/C Blower (Front)	6M	WPT-832
	Switch — Ignition	7M	WPT-804
2003-01	Switch — Inertia	3F	WPT-414
2004-02	Switch — Moon Roof/ Sun Roof		
	Sedan	6M	WPT-276
2004	Switch — Multi Function	10F	WPT-516
2003-02	Switch — Oil Sending Unit	1M	WPT-538
2001-00	Switch — Oil Sending Unit	1M	WPT-439
2003-00	Switch — Park Brake	1M	WPT-748
2004-00	Switch — Power Mirror	8M	WPT-487
2003-02	Switch — Power Steering Pressure	2M	WPT-551
2004	Switch — Power Window — Driver	10F	WPT-516
2003-00	Switch — Power Window — Driver	4M	WPT-480
2003-01	Switch — Power Window — Passenger (Front)	7M	WPT-578
2003-02	Switch — Speed Control Deactivation	2M	WPT-451
	Switch — Traction Control	8M	WPT-220
2003-00	Switch — Turn Signal	10F	WPT-156
	Switch — Windshield Wiper/Washer	10F	WPT-516
2003-02	Terminal — Rear Window Defroster Grid	1M	WPT-461
2004-00	Transceiver — Passive Anti-Theft (PATS)	4M	WPT-668
2003-02	Valve — Vapor Management		
	2.0L	2M	WPT-545

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD — Cont'd			
GT			
2005	Power Point	3F	WPT-682
Mustang			
2003-94	AC Compressor Clutch	2M	WPT-173
2004-97	Actuator — Door Lock — Decklid/Liftgate	3M	WPT-446
2004-94	Actuator — Door Lock — LH — Front	2M	WPT-312
	Actuator — Door Lock — RH — Front	2M	WPT-312
2004-96	Actuator — Speed Control	10M	WPT-762
1995	Actuator — Speed Control	8M	WPT-382
2003-01	Alternator		
	16 Valve GT	3M	WPT-118
2000-96	Alternator	3M	WPT-119
1998	Alternator		
	4.6L SOHC	1M	WPT-851
1996	Alternator		
	4.6L SOHC	1M	WPT-851
1995-94	Amplifier — Speed Control	6M	WPT-268
1997	Bulkhead — Transmission — In-line (Female)		
	3.8L OHV	9F	WPT-570
1998	Bulkhead — Transmission — In-line (Male)	7F	WPT-567
2004-94	CD Changer	14M	WPT-296
	6M	WPT-636
	1M	WPT-352
1995-94	Capacitor — Ignition / Radio	1F	WPT-309
2004-03	Cigar Lighter		
	4.6L DOHC	1F	WPT-371
2003-01	Cigar Lighter	3F	WPT-329
2001	Cigar Lighter		
	4.6L DOHC	1F	WPT-371
1997-95	Cigar Lighter	1M	WPT-476
2004-94	Clock	8F	WPT-100
2002-01	Coil — Ignition		
	3.8L	4M	WPT-508
1998-96	Coil — Ignition		
	4.6L	3M	WPT-526
	3.8L OHV	4M	WPT-511
2000-99	Fuel Injector		
	4.6L 16 Valve	2M	WPT-372
	6 Cyl. 3.8L	2F	WPT-159
1998	Fuel Injector		
	4.6L	2M	WPT-372
1998-95	Fuel Injector		
	6 Cyl. 3.8L	2M	WPT-372
1995	Fuel Injector		
	8 Cyl. 5.0L	2M	WPT-372
2003-95	Horn	1F	WPT-371
2004-97	Instrument Cluster		
	Analog Plug A	16M	WPT-278
2003-02	Instrument Cluster	12F	WPT-673
1997	Instrument Cluster		
	Analog Plug B	16M	WPT-202
1994	Instrument Cluster		
	Analog Plug B	16M	WPT-202
	Analog Plug A	16M	WPT-278
2004-95	Lamp — Ash Tray	2F	WPT-251
2004-02	Lamp — CHMSL (Center High Mount Stop Lamp)	2N/A	WPT-471
2001-00	Lamp — CHMSL (Center High Mount Stop Lamp)	4F	WPT-847
1998-97	Lamp — CHMSL (Center High Mount Stop Lamp)	3M	WPT-594
1994	Lamp — Courtesy — Door	2F	WPT-212
2004-95	Lamp — Dome/ Map	3M	WPT-4591
2003-95	Lamp — Fog / Driving	2M	WPT-122

WIRING PIGTAIL KITS

PASSENGER CAR



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD — Cont'd			
Mustang — Cont'd			
2003-96	Lamp — Front Turn/Marker	3M	WPT-108
2003-95	Lamp — Headlamp- High/Low Beam	3M	WPT-110
2004-97	Lamp — Instrument	2M	WPT-597
1994	Lamp — Instrument	2M	WPT-597
2004-02	Lamp — License	2N/A	WPT-471
1998-97	Lamp — License	2N/A	WPT-471
2003-97	Lamp — Park/Turn/Stop	3N/A	WPT-120
1998-96	Lamp — Park/Turn/Stop	2N/A	WPT-121
1995-94	Lamp — Park/Turn/Stop	3F	WPT-429
2003-99	Lamp — Park/Turn/Stop/Reverse — Inline (Female)	6M	WPT-343
1998-96	Lamp — Rear Park	2N/A	WPT-166
2003-01	Lamp — Rear Turn	2N/A	WPT-121
2003-96	Lamp — Reverse	2N/A	WPT-121
2003-02	Lamp — Stop	3N/A	WPT-120
2003-01	Lamp — Stop	2N/A	WPT-166
1997	Lamp — Stop / Park	2N/A	WPT-166
2004-02	Lamp — Storage Compartment — Trunk	2F	WPT-316
1998-95	Lamp — Under Hood	2M	WPT-4951
2004-94	Mirror — Sideview	3F	WPT-229
2003-98	Mirror — Vanity	2F	WPT-226
1999-98	Module — Anti-theft	16M	WPT-632
	4M	WPT-293
1998-95	Module — Anti-theft	6F	WPT-639
1997	Module — Anti-theft	16M	WPT-632
1996-95	Module — Anti-theft	13M	WPT-610
2004-99	Module — Daytime Running Lamp (DRL)	6F	WPT-455
1998-95	Module — Daytime Running Lamp (DRL)	8M	WPT-298
2004-98	Module — Drivers Door	6M	WPT-375
1997-94	Module — Ignition		
	3.8L OHV	12M	WPT-540
1998-95	Module — Remote Keyless Entry	16M	WPT-632
1997	Module — Remote Keyless Entry		
	Left	13M	WPT-612
	Right	13M	WPT-625
2003-97	Motor — Convertible Top	2F	WPT-473
2003-02	Motor — Engine Cooling Fan	3F	WPT-168
2001	Motor — Engine Cooling Fan		
	6 Cyl. 3.8L (232)	3F	WPT-168
	4F	WPT-171
2000-99	Motor — Engine Cooling Fan	3F	WPT-168
1997	Motor — Engine Cooling Fan		
	3.8L	3M	WPT-362
1996	Motor — Engine Cooling Fan		
	3.8L, 4.6L 12, 16 Valve	3M	WPT-362
1994	Motor — Engine Cooling Fan		
	3.8L	3M	WPT-362
2004-00	Motor — Idle Air Control	2M	WPT-357
1998-96	Motor — Idle Air Control	2M	WPT-357
1995-94	Motor — Idle Air Control		
	5.0L	2M	WPT-684
2004-98	Motor — Power Window — LH — Front	2M	WPT-345
1997-95	Motor — Power Window — LH — Front		
	Convertible	2M	WPT-345
1996-94	Motor — Power Window — LH — Front		
	Coupe 4 Lite	2M	WPT-345
2004-97	Motor — Power Window — LH — Rear	2M	WPT-345
	Motor — Power Window — RH — Rear	2M	WPT-345
2003-96	Motor — Windshield Washer Fluid Pump	2M	WPT-357
2002-00	Motor — Windshield Wiper	5F	WPT-158
1998-97	Motor — Windshield Wiper		
	2 Door	6M	WPT-297



WIRING PIGTAIL KITS PASSENGER CAR

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD — Cont'd			
Mustang — Cont'd			
2000-98	Power Point	3F	WPT-682
2000	Pump — Exhaust Air Supply		
	Calif.	2F	WPT-361
1998	Pump — Exhaust Air Supply		
	AT Calif.	2F	WPT-361
1997	Pump — Exhaust Air Supply		
	4.6L	2F	WPT-361
2003-01	Radio	16F	WPT-186
2000-95	Radio		
	Polarity letter not specified; Rectangle; Gray	8M	WPT-646
1998-95	Radio		
	Polarity letter not specified; Rectangle; Black	8M	WPT-696
2004-01	Radio — Amplifier	6M	WPT-663
2000-95	Radio — Amplifier	10M	WPT-667
2004-95	Relay — Flasher	5F	WPT-662
	Relay — Oil Level	5M	WPT-515
1998-97	Resistor — Fuel Pump	2F	WPT-361
2004-97	Sensor — Air Charge Temperature	2M	WPT-420
2002-00	Sensor — Brake Fluid Level	3M	WPT-118
1998-95	Sensor — Brake Fluid Level	3M	WPT-4591
2004-01	Sensor — Cam Shaft Position	2F	WPT-759
2000	Sensor — Cam Shaft Position		
	4.6L SOHC	2F	WPT-579
2002-98	Sensor — Catalyst Monitor	4M	WPT-112
2004-00	Sensor — Coolant Temperature		
	4.6L	2M	WPT-206
1999	Sensor — Coolant Temperature		
	Gold Terminal	2M	WPT-206
1998-97	Sensor — Coolant Temperature	2M	WPT-206
1996	Sensor — Coolant Temperature		
	3.8L	2M	WPT-206
1995-94	Sensor — Coolant Temperature	2M	WPT-437
2004-01	Sensor — Crank Shaft Position	2F	WPT-759
2000-96	Sensor — Crank Shaft Position		
	3.8L, 4.6L OHV, SOHC	2F	WPT-579
2004-01	Sensor — Cylinder Head Temperature		
	4.6L	2M	WPT-338
2004-96	Sensor — Delta Pressure Feedback EGR	3F	WPT-188
1995	Sensor — EGR Valve Position		
	5.0L, 5.8L	4M	WPT-386
1994	Sensor — EGR Valve Position		
	5.0L	4M	WPT-386
2004-01	Sensor — Fuel Rail Pressure	3M	WPT-777
2004-00	Sensor — Fuel Rail Pressure		
	4.6L SOHC	3M	WPT-777
2002-01	Sensor — Fuel Rail Pressure		
	3.8L OHV	3M	WPT-777
2001	Sensor — Fuel Rail Pressure		
	4.6L DOHC	3M	WPT-777
2002-01	Sensor — Intake Manifold Runner Control		
	3.8L OHV	4F	WPT-347
1998-97	Sensor — Intake Manifold Runner Control		
	4.6L DOHC	6F	WPT-455
2004-03	Sensor — Knock		
	4.6L DOHC	2F	WPT-776
2001	Sensor — Knock		
	4.6L DOHC	2F	WPT-776
2000-99	Sensor — Knock	2F	WPT-776
1998-95	Sensor — Knock	2M	WPT-410
2003-95	Sensor — Mass Air Flow	6M	WPT-102

WIRING PIGTAIL KITS

PASSENGER CAR



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD — Cont'd			
Mustang — Cont'd			
1997	Sensor — O2 (HEGO/EGO) Gold Terminals / A Polarity	4M	WPT-112
2003-96	Sensor — Throttle Position	3F	WPT-170
1995-94	Sensor — Throttle Position	3M	WPT-445
2004-01	Sensor — Transmission Range	12M	WPT-806
1998	Sensor — Transmission Range AT	12M	WPT-806
1996-95	Solenoid — Brake Shift Park Interlock	3M	WPT-210
2004-98	Solenoid — Canister Vent Round Cavity	2M	WPT-322
1998	Solenoid — Canister Vent 4.6L Square Cavity	2M	WPT-441
1997-94	Solenoid — Canister Vent	2M	WPT-441
2004-96	Solenoid — EGR Vacuum Regulator	2M	WPT-359
2002	Solenoid — Super Charger Bypass	2M	WPT-146
2004-94	Speaker — Door (Front) Coupe	2M	WPT-416
1997-94	Speaker — Door (Front) Convertible	2M	WPT-416
2004	Speaker — Rear	2M	WPT-843
2003-99	Speaker — Rear Coupe	2M	WPT-416
2003-97	Speaker — Rear Convertible	2M	WPT-416
1997	Speaker — Rear Coupe	2M	WPT-416
2004-94	Speaker — Subwoofer	4M	WPT-376
2003-94	Speaker — Subwoofer	2M	WPT-370
2004-98	Speaker — Tweeter — LH — Front	2M	WPT-416
1997-94	Speaker — Tweeter — LH — Front Convertible	2M	WPT-416
1996-95	Speaker — Tweeter — LH — Front Coupe	2M	WPT-416
2004-98	Speaker — Tweeter — RH — Front	2M	WPT-416
2003-96	Switch — A/C Compressor Clutch Cycling	4F	WPT-169
1995-94	Switch — A/C Compressor Clutch Cycling	2M	WPT-438
2004-03	Switch — A/C Pressure Cut Off	4F	WPT-169
2002	Switch — A/C Pressure Cut Off	4F	WPT-182
2001	Switch — A/C Pressure Cut Off 4.6L Square Cavity	4F	WPT-182
2001-95	Switch — A/C Pressure Cut Off Round Cavity	4F	WPT-169
2002	Switch — Backup Lamp	2F	WPT-494
2004-97	Switch — Clutch Pedal Position Convertible, Coupe	2M	WPT-836
2003-01	Switch — Convertible Top	5M	WPT-524
2000-97	Switch — Convertible Top	5F	WPT-662
1996-95	Switch — Convertible Top	5M	WPT-524
1998-96	Switch — Coolant Temperature Sending Unit	2M	WPT-431
1998-94	Switch — Coolant Temperature Sending Unit	1M	WPT-476
2004-99	Switch — Courtesy Lamp	3F	WPT-213
1998-95	Switch — Courtesy Lamp Coupe	3F	WPT-213
1997-94	Switch — Courtesy Lamp Convertible	3F	WPT-213
2004-95	Switch — Courtesy Lamp — LH	3F	WPT-213
2004-97	Switch — Courtesy Lamp — RH	3F	WPT-213
2004-94	Switch — Deck Lid / Hatch Release	2M	WPT-478
1998-97	Switch — Deck Lid / Lift Gate Ajar	2M	WPT-370
	Switch — Decklid / Liftgate (Anti-theft)	2M	WPT-715
2003-99	Switch — Door Ajar / Interior Lamp	2M	WPT-146



WIRING PIGTAIL KITS PASSENGER CAR

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD — Cont'd			
Mustang — Cont'd			
1995	Switch — Door Ajar / Interior Lamp	2M	WPT-441
2004-98	Switch — Door Lock (LH)	16M	WPT-621
1997-94	Switch — Door Lock (LH)	16M	WPT-621
2004	Switch — Door Lock (RH)	M	WPT-619
2004-01	Switch — Fog Lamp	8M	WPT-199
2003-94	Switch — Headlamp	9F	WPT-165
2003-01	Switch — Heated Back Light (Rear Defrost)	8M	WPT-167
1998-94	Switch — Heated Back Light (Rear Defrost)	5M	WPT-377
2003-94	Switch — Heater / A/C Blower (Front)	4M	WPT-103
2004-97	Switch — Heater A/C Temp Control	4M	WPT-344
1994	Switch — Heater A/C Temp Control	4M	WPT-344
2003-97	Switch — Horn/Speed Controls/Radio Control — In-line (Female)	4M	WPT-543
1994	Switch — Horn/Speed Controls/Radio Control — In-line (Female)	4M	WPT-543
2004-00	Switch — Ignition	16M	WPT-577
1999-97	Switch — Ignition	15M	WPT-475
1996-95	Switch — Ignition	16M	WPT-577
2004-95	Switch — Inertia	3M	WPT-446
	Switch — Multi Function	7F	WPT-179
2004-03	Switch — Oil Sending Unit	1M	WPT-439
2000-96	Switch — Oil Sending Unit	1M	WPT-439
1995-94	Switch — Oil Sending Unit	1M	WPT-616
2004-97	Switch — Overdrive Cancel	4M	WPT-307
1996-95	Switch — Overdrive Cancel	6F	WPT-587
2005	Switch — Park Brake	2F	WPT-479
2003-01	Switch — Park Brake	2F	WPT-479
2004-94	Switch — Power Mirror	8M	WPT-313
2002-01	Switch — Power Steering Pressure	2M	WPT-260
2004-95	Switch — Power Window — Passenger (Front)	M	WPT-619
2004-99	Switch — Seat (Driver)	8F	WPT-379
2005	Switch — Speed Control Deactivation	2F	WPT-479
2004-97	Switch — Speed Control Deactivation	2F	WPT-340
2005	Switch — Stop Lamp	2F	WPT-404
2004-95	Switch — Stop Lamp	2M	WPT-197
2004-01	Switch — Traction Control	8M	WPT-220
2004-99	Terminal — Rear Window Defroster Grid	1F	WPT-371
1998-95	Terminal — Rear Window Defroster Grid	1F	WPT-434
2004-97	Test Connector — Diagnostic	16F	WPT-615
1994	Test Connector — Diagnostic	16F	WPT-615
2004-03	Transceiver — Passive Anti-Theft (PATS)	4F	WPT-261
2002-00	Transceiver — Passive Anti-Theft (PATS)	4M	WPT-293
2003	Valve — Vapor Management 4.6L DOHC	2M	WPT-545
2003-00	Valve — Vapor Management 3.8L, 4.6L 12, 16 Valve	2M	WPT-545
2001-00	Valve — Vapor Management 4.6L DOHC	2M	WPT-545
1998	Valve — Vapor Management 3.8L OHV	2M	WPT-545
Taurus			
2004-00	AC Compressor Clutch	4F	WPT-182
2003-93	AC Compressor Clutch	2M	WPT-173
1995-93	AC Compressor Clutch w/o AC	2M	WPT-416
1995-92	AC Compressor Clutch 3.0L OHV	2M	WPT-416
1999-96	Actuator — Door Lock — Decklid/Liftgate	2M	WPT-312
2004-00	Actuator — Door Lock — LH — Front	2M	WPT-312
1995-92	Actuator — Door Lock — LH — Front	2M	WPT-312
2004-92	Actuator — Door Lock — LH — Rear	2M	WPT-312
2004-00	Actuator — Door Lock — RH — Front	2M	WPT-312

WIRING PIGTAIL KITS

PASSENGER CAR



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD — Cont'd			
Taurus — Cont'd			
2004-01	Actuator — Door Lock — RH — Rear	2M	WPT-312
1999-90	Actuator — Door Lock — RH — Rear	2M	WPT-312
2004-93	Actuator — Speed Control	10M	WPT-762
2004-00	Alternator		
	12 Valve	3M	WPT-118
	24 Valve	3M	WPT-119
1999	Alternator		
	3.0L OHV	1M	WPT-852
1999-96	Alternator	3M	WPT-119
1995	Alternator	1M	WPT-851
1995-92	Amplifier — Speed Control	6M	WPT-268
2004-00	Bulkhead — Transmission — In-line (Female)	9F	WPT-570
1995-93	Bulkhead — Transmission — In-line (Female)		
	3.2L DOHC SHO	9F	WPT-570
1995-92	Bulkhead — Transmission — In-line (Female)		
	OHV	9F	WPT-570
2001-00	CD Changer	12M	WPT-164
1995-92	CD Changer	14M	WPT-296
2004-00	Capacitor — Ignition / Radio		
	3.0L DOHC	1M	WPT-352
2003-00	Capacitor — Ignition / Radio		
	3.0L OHV	1M	WPT-352
1995-94	Capacitor — Ignition / Radio		
	3.0L OHV	1M	WPT-352
1995-93	Capacitor — Ignition / Radio		
	3.2L DOHC SHO	1M	WPT-352
1995-92	Capacitor — Ignition / Radio	1F	WPT-309
	3.0L DOHC SHO	1M	WPT-352
2005-00	Cigar Lighter	3F	WPT-329
1995-92	Cigar Lighter	1M	WPT-476
1995-93	Clock	8F	WPT-100
1993-92	Clock	3M	WPT-446
2004-01	Coil — Ignition		
	DOHC	4M	WPT-508
2003-01	Coil — Ignition		
	OHV	4M	WPT-508
2000	Coil — Ignition		
	OHV	4M	WPT-511
1995-94	Control Head — Electronic Automatic Temperature (EATC)	13F	WPT-176
1993-92	Control Head — Electronic Automatic Temperature (EATC)		
	With ATC Air Conditioner	13M	WPT-308
2003-00	Fuel Injector	2F	WPT-159
1998-92	Fuel Injector		
	3.0L 12 Valve Polarity letter not specified; Rectangle; Black; Injector #1, #2, #3, #4, #5	2M	WPT-260
1997-96	Fuel Injector		
	8 Cyl. 3.4L (207)	2M	WPT-260
	3.0L 24 Valve	2M	WPT-336
1995-93	Fuel Injector		
	3.2L SHO	2M	WPT-372
1995-92	Fuel Injector		
	3.0L SHO	2M	WPT-372
1995-90	Fuel Injector		
	3.8L	2M	WPT-372
2004-00	Fuel Pump / Sending Unit	10M	WPT-504
2003-00	Fuel Pump / Sending Unit	8M	WPT-172
1995-92	Fuel Pump / Sending Unit	4M	WPT-454
1999-98	Horn	1M	WPT-378
2004-98	Instrument Cluster		
	Analog Plug B	16M	WPT-202
	Analog Plug A	16M	WPT-278
2003-00	Lamp — Ash Tray	2F	WPT-251



WIRING PIGTAIL KITS PASSENGER CAR

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD — Cont'd			
Taurus — Cont'd			
1995-92	Lamp — Ash Tray	3F	WPT-348
2004-02	Lamp — CHMSL (Center High Mount Stop Lamp) Sedan, Wagon Back Glass or Liftgate	4F	WPT-465
2003-00	Lamp — CHMSL (Center High Mount Stop Lamp) For Vehicles With Lamp Located in the Spoiler	2M	WPT-529
2001-90	Lamp — CHMSL (Center High Mount Stop Lamp) Sedan, Wagon Back Glass or Liftgate	2F	WPT-194
1995-92	Lamp — CHMSL (Center High Mount Stop Lamp) SHO	2F	WPT-783
2004-96	Lamp — Courtesy — Door	2M	WPT-113
1995-92	Lamp — Courtesy — Door	2F	WPT-212
1999-92	Lamp — Courtesy — Footwell	2F	WPT-356
1995-93	Lamp — Dimmer Switch	2F	WPT-342
2004-00	Lamp — Dome	3F	WPT-203
1995-94	Lamp — Fog / Driving 3.0L DOHC SHO	2F	WPT-360
	2M	WPT-536
1995-93	Lamp — Fog / Driving 3.2L DOHC SHO	2M	WPT-365
2003-96	Lamp — Front Cornering / Turn Polarity letter not specified; Oval; Gray	3M	WPT-105
2001-00	Lamp — Front Cornering / Turn	3N/A	WPT-151
1997-96	Lamp — Front Turn/Marker	3M	WPT-109
2004-96	Lamp — Glove Box	2M	WPT-314
1995-93	Lamp — Headlamp Switch	2F	WPT-342
2003-92	Lamp — Headlamp- High/Low Beam	3M	WPT-110
1995-92	Lamp — Instrument	2M	WPT-597
2003-00	Lamp — License Sedan	2F	WPT-292
2000	Lamp — License Wagon 4 Door	2F	WPT-292
1995-90	Lamp — License	2N/A	WPT-471
2004-00	Lamp — Map	3F	WPT-203
1995	Lamp — Map	2M	WPT-4951
2004-00	Lamp — PRDNL Indicator — Inline (Male)	2M	WPT-422
2003-00	Lamp — Park/Turn/Stop	3N/A	WPT-120
2003-96	Lamp — Park/Turn/Stop Wagon	3M	WPT-105
1995-92	Lamp — Park/Turn/Stop	3F	WPT-430
2003-96	Lamp — Rear Turn	3M	WPT-105
1995	Lamp — Rear Turn	3F	WPT-429
2004-01	Lamp — Reverse DOHC, OHV	2M	WPT-773
2000	Lamp — Reverse	2N/A	WPT-149
1996	Lamp — Side Marker	2N/A	WPT-149
1995-92	Lamp — Side Marker	2N/A	WPT-471
2003-96	Lamp — Stop	3M	WPT-108
2002-00	Lamp — Storage Compartment — Cargo	3F	WPT-203
2005-00	Lamp — Storage Compartment — Trunk	2M	WPT-355
1995-92	Lamp — Storage Compartment — Trunk	2M	WPT-370
1995	Lamp — Under Hood	2M	WPT-370
2004-02	Mirror — Rearview (Electrochromatic)	6M	WPT-193
	Mirror — Sideview	8M	WPT-382
1995-92	Mirror — Sideview	3F	WPT-348
2004-00	Mirror — Vanity	2F	WPT-479
1998-96	Mirror — Vanity	1F	WPT-562
1999-96	Module — Anti-theft	16M	WPT-632
2005-00	Module — Auto Lamps	6F	WPT-502
1999-95	Module — Auto Lamps	5M	WPT-300
1999	Module — Daytime Running Lamp (DRL)	6F	WPT-455
1998-94	Module — Daytime Running Lamp (DRL)	8M	WPT-298

WIRING PIGTAIL KITS

PASSENGER CAR



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD — Cont'd			
Taurus — Cont'd			
1995-92	Module — Drivers Door	5M	WPT-377
2003-00	Module — Flex Fuel Vehicle (FFV)	6M	WPT-281
1995-93	Module — Flex Fuel Vehicle (FFV)	8M	WPT-313
	Module — Ignition		
	3.2L, 3.8L	6M	WPT-297
	3.2L DOHC SHO	6M	WPT-514
1995-92	Module — Ignition		
	3.0L	6M	WPT-297
	3.0L DOHC SHO	6M	WPT-514
1995-93	Module — Radio Power Antenna	8F	WPT-100
2000	Module — Remote Keyless Entry	8M	WPT-737
1995-93	Module — Remote Keyless Entry		
	Left	13M	WPT-612
	16M	WPT-632
1995-92	Module — Remote Keyless Entry		
	Right	13M	WPT-625
2004-00	Module — Variable Speed Blower Controller	5M	WPT-566
1995-92	Module — Wiper Control	14M	WPT-666
2002-01	Motor — Adjustable Pedal		
	Sedan	2F	WPT-544
	Wagon	2F	WPT-783
2000	Motor — Adjustable Pedal	2F	WPT-544
2004-00	Motor — Engine Cooling Fan	3F	WPT-168
1997-94	Motor — Engine Cooling Fan		
	3.0L	3M	WPT-362
1996	Motor — Engine Cooling Fan		
	3.0L DOHC	3M	WPT-362
1995-93	Motor — Engine Cooling Fan		
	3.8L	3F	WPT-706
2004-96	Motor — Heater/ AC Blend Door	8F	WPT-100
1995-93	Motor — Heater/ AC Blend Door	8F	WPT-117
1995-92	Motor — Heater/ AC Blend Door	6M	WPT-592
2004-00	Motor — Idle Air Control	2M	WPT-357
1995-93	Motor — Idle Air Control	2M	WPT-684
1992	Motor — Idle Air Control		
	3.0L	2M	WPT-684
2002-00	Motor — Moon Roof / Sun Roof	6M	WPT-375
2004-97	Motor — Power Seat Track	6F	WPT-599
2004-96	Motor — Power Window — LH — Front	2F	WPT-520
1995-92	Motor — Power Window — LH — Front	2F	WPT-484
2004-96	Motor — Power Window — LH — Rear	2F	WPT-520
1995	Motor — Power Window — LH — Rear	2F	WPT-466
2004-96	Motor — Power Window — RH — Front	2F	WPT-520
1995	Motor — Power Window — RH — Front	2F	WPT-484
2004-01	Motor — Power Window — RH — Rear	2F	WPT-520
1999-96	Motor — Power Window — RH — Rear	2F	WPT-520
1995	Motor — Power Window — RH — Rear	2F	WPT-466
2004-96	Motor — Radio Power Antenna	4F	WPT-234
2004-02	Motor — Rear Window Washer Fluid Pump		
	Wagon 4 Door	2M	WPT-357
2001-96	Motor — Rear Window Washer Fluid Pump		
	Wagon 4 Door	2M	WPT-355
2004-96	Motor — Rear Window Wiper		
	Wagon 4 Door	3M	WPT-4591
1999-97	Motor — Seat Lumbar	2M	WPT-374
1995	Motor — Seat Lumbar	2F	WPT-473
1995-90	Motor — Seat Lumbar	2M	WPT-374
2004-00	Motor — Windshield Washer Fluid Pump	2M	WPT-357
1996	Motor — Windshield Washer Fluid Pump	2M	WPT-355
1995-92	Motor — Windshield Washer Fluid Pump	2M	WPT-288
2003-96	Motor — Windshield Wiper	5F	WPT-158



WIRING PIGTAIL KITS PASSENGER CAR

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD — Cont'd			
Taurus — Cont'd			
1995	Motor — Windshield Wiper	7M	WPT-175
1993-92	Motor — Windshield Wiper	3M	WPT-333
2003-00	Power Point	3F	WPT-329
1999-97	Power Point	2M	WPT-355
2000	Pump — Exhaust Air Supply	2F	WPT-361
1999-98	Radio		
	8 Pin	8M	WPT-624
1997-96	Radio	8M	WPT-624
1995-92	Radio	2M	WPT-247
	8M	WPT-696
1995	Radio — Amplifier	4F	WPT-457
2004-00	Radio — Rear Audio Control Wagon 4 Door	14M	WPT-296
2003-00	Radio — Rear Audio Control Sedan	14M	WPT-296
1993-92	Relay — Flasher	3M	WPT-801
1995-94	Relay — Oil Level 3.0L DOHC SHO	5M	WPT-515
1995-93	Relay — Oil Level 3.2L DOHC SHO	5M	WPT-515
1995-94	Relay — Starter Motor	1F	WPT-371
1995-92	Relay — Starter Motor 3.0L OHV	1M	WPT-378
1993	Relay — Starter Motor 3.2L DOHC SHO	1M	WPT-378
	3.8L OHV	1M	WPT-378
2003	Resistor — Blower Motor (Front)	4M	WPT-114
2003-96	Resistor — Blower Motor (Front)	4F	WPT-115
1995	Resistor — Blower Motor (Front)	4M	WPT-114
2004-00	Resistor — Daytime Running Lamp (DRL)	4M	WPT-152
2004-01	Resistor — Fan Dropping Grey	2F	WPT-778
2001	Resistor — Fan Dropping	2M	WPT-428
2001-00	Resistor — Fan Dropping Black	2F	WPT-361
1997-92	Resistor — Fan Dropping	2M	WPT-428
1999	Sensor — Air Charge Temperature	2M	WPT-420
1999-96	Sensor — Air Charge Temperature 3.4L SHO	2M	WPT-428
2004-00	Sensor — Ambient Temp	2M	WPT-437
1996-92	Sensor — Ambient Temp	2M	WPT-437
1995-94	Sensor — Barometric Absolute Pressure (BAP) 3.0L DOHC SHO	3M	WPT-263
2003-97	Sensor — Brake Fluid Level Tin Terminal	3M	WPT-118
1996	Sensor — Brake Fluid Level 18 Gauge	3M	WPT-4591
1995-93	Sensor — Brake Fluid Level 3.2L SHO	2M	WPT-372
2004-01	Sensor — Cam Shaft Position	2F	WPT-759
2003-00	Sensor — Coolant Temperature 3.0L	2M	WPT-206
1999-96	Sensor — Coolant Temperature	2M	WPT-206
1995-92	Sensor — Coolant Temperature	2M	WPT-437
2004-01	Sensor — Crank Shaft Position	2F	WPT-759
2000-95	Sensor — Crank Shaft Position	2F	WPT-579
1995-92	Sensor — Crank Shaft Position 3.0L DOHC SHO	1M	WPT-280
2004-02	Sensor — Delta Pressure Feedback EGR 3.0L DOHC	3F	WPT-393
2001-96	Sensor — Delta Pressure Feedback EGR	3F	WPT-188

WIRING PIGTAIL KITS

PASSENGER CAR



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD — Cont'd			
Taurus — Cont'd			
1995-92	Sensor — Delta Pressure Feedback EGR	3M	WPT-458
2005-00	Sensor — EATC In Car Temperature	3M	WPT-4591
1995	Sensor — EATC In Car Temperature	3M	WPT-4591
2004-02	Sensor — Fuel Rail Pressure 3.0L Tin Terminal	3M	WPT-777
2003-02	Sensor — Fuel Rail Pressure Gold Terminal	3M	WPT-118
2004	Sensor — Intake Manifold Runner Control	2M	WPT-545
2004-02	Sensor — Knock	2F	WPT-490
2004-00	Sensor — Knock	2M	WPT-351
1999	Sensor — Knock 3.4L	2M	WPT-410
1998	Sensor — Knock	2M	WPT-410
1997	Sensor — Knock 3.4L	2M	WPT-410
1996	Sensor — Knock	2M	WPT-410
1995-92	Sensor — Knock DOHC SHO	2M	WPT-462
2004-96	Sensor — Low Coolant	2M	WPT-372
2003-96	Sensor — Mass Air Flow	6M	WPT-102
1995-92	Sensor — Mass Air Flow 3.0L OHV	4M	WPT-511
1993	Sensor — Mass Air Flow 3.2L DOHC SHO	4M	WPT-511
	3.8L OHV	4M	WPT-511
1993-92	Sensor — Mass Air Flow 3.0L DOHC SHO	4M	WPT-511
2004-02	Sensor — Memory Seat Track Position	3M	WPT-290
1999	Sensor — O ₂ (HEGO/EGO)	4M	WPT-112
1995-93	Sensor — Oil Level 3.2L	1M	WPT-237
1995-92	Sensor — Oil Level 3.0L	1M	WPT-237
2004	Sensor — Power Steering Pressure	4F	WPT-808
2003-00	Sensor — Power Steering Pressure	4F	WPT-169
2004-02	Sensor — Seat Track Position	2F	WPT-490
2003-00	Sensor — Throttle Position	3F	WPT-170
1997-96	Sensor — Throttle Position	3F	WPT-170
1995-92	Sensor — Throttle Position	3M	WPT-445
2005-00	Sensor — Transmission Range	12M	WPT-803
1999	Sensor — Transmission Range	12M	WPT-806
1995-94	Sensor — Transmission Range AT 4 Spd AX4N, AX4S	8M	WPT-389
1993	Sensor — Transmission Range	8M	WPT-389
1996-92	Sensor — Washer Fluid Level	2M	WPT-684
2004-92	Solenoid — Brake Shift Park Interlock	3M	WPT-210
2004-97	Solenoid — Canister Vent	2M	WPT-322
1995-92	Solenoid — Canister Vent	2M	WPT-441
2004-00	Solenoid — EGR Vacuum Regulator	2M	WPT-359
1997-96	Solenoid — EGR Vacuum Regulator	2M	WPT-359
1995-93	Solenoid — EGR Vacuum Regulator 3.2L SHO, 3.8L	2M	WPT-374
1995-92	Solenoid — EGR Vacuum Regulator 3.0L	2M	WPT-374
	Speaker — Door (Front)	2M	WPT-416
2003-00	Speaker — Door (Rear) Sedan	2F	WPT-373
2000	Speaker — Door (Rear) Wagon 4 Door	2F	WPT-373
1999-96	Speaker — Front	2M	WPT-416



WIRING PIGTAIL KITS PASSENGER CAR

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD — Cont'd			
Taurus — Cont'd			
2004-01	Speaker — Rear Wagon 4 Door	2F	WPT-373
1999-96	Speaker — Rear	2M	WPT-416
1995-92	Speaker — Rear	2M	WPT-416
2004-96	Speaker — Tweeter — LH — Front	2M	WPT-819
	Speaker — Tweeter — RH — Front	2M	WPT-819
2003-97	Switch — A/C Compressor Clutch Cycling	4F	WPT-169
1999-98	Switch — A/C Compressor Clutch Cycling	4M	WPT-303
1995-92	Switch — A/C Compressor Clutch Cycling	2M	WPT-438
1999-96	Switch — A/C High Pressure	4M	WPT-303
1995	Switch — A/C High Pressure	4M	WPT-303
	Switch — A/C Pressure Cut Off	2M	WPT-438
2004-02	Switch — Adjustable Pedal	4F	WPT-306
1995-92	Switch — Brake Pressure	2M	WPT-232
1995	Switch — Clutch Pedal Position	2M	WPT-370
1999-92	Switch — Coolant Temperature Sending Unit	1M	WPT-476
1995-92	Switch — Courtesy Lamp	3F	WPT-213
2004	Switch — Deck Lid / Hatch Release	2M	WPT-469
2003-98	Switch — Deck Lid / Hatch Release	2M	WPT-478
1997-96	Switch — Deck Lid / Hatch Release	2M	WPT-469
1995	Switch — Deck Lid / Hatch Release	3M	WPT-446
2003-01	Switch — Deck Lid / Lift Gate Ajar	2M	WPT-441
1999-92	Switch — Deck Lid / Lift Gate Ajar	2M	WPT-441
2003-00	Switch — Decklid / Liftgate (Anti-theft)	2M	WPT-715
2000-98	Switch — Dimmer	7F	WPT-179
1995-92	Switch — Dimmer	4M	WPT-556
2002-96	Switch — Door Ajar / Interior Lamp	2M	WPT-146
1995-92	Switch — Door Ajar / Interior Lamp	1F	WPT-499
2004-03	Switch — Door Lock (LH)	8F	WPT-485
2002-00	Switch — Door Lock (LH)	8F	WPT-683
1999-96	Switch — Door Lock (LH)	7F	WPT-400
1995-92	Switch — Door Lock (LH)	8F	WPT-679
2004-03	Switch — Door Lock (RH)	8F	WPT-485
2002-00	Switch — Door Lock (RH)	8F	WPT-683
1999-96	Switch — Door Lock (RH)	7F	WPT-400
1995	Switch — Door Lock (RH)	3F	WPT-580
	8F	WPT-679
1995-92	Switch — Fog Lamp	8M	WPT-245
1997-96	Switch — Gear Shift Select / Neutral Safety	8M	WPT-389
2004-00	Switch — Headlamp	12F	WPT-396
	6F	WPT-262
1999-98	Switch — Headlamp	6F	WPT-510
1999-96	Switch — Headlamp	6F	WPT-845
1995-93	Switch — Headlamp Dimmer	7F	WPT-179
1995-92	Switch — Heated Back Light (Rear Defrost)	6M	WPT-449
2004-01	Switch — Heater / A/C Blower (Front)	6M	WPT-363
2000-93	Switch — Heater / A/C Blower (Front)	4M	WPT-103
2003-01	Switch — Heater A/C Temp Control w/Manual AC	8F	WPT-275
2001-00	Switch — Heater A/C Temp Control	4M	WPT-448
1995-94	Switch — Heater A/C Temp Control w/Manual AC; w/o AC	3M	WPT-328
1995-92	Switch — Heater A/C Temp Control	4M	WPT-448
1993	Switch — Heater A/C Temp Control	3M	WPT-328
1992	Switch — Heater A/C Temp Control w/Manual AC; w/o AC	3M	WPT-328
1999-96	Switch — Hood Ajar	2M	WPT-536
2004-02	Switch — Horn	8F	WPT-227
1999-98	Switch — Horn/Speed Controls/Radio Control — In-line (Female)	4M	WPT-543
1995-94	Switch — Horn/Speed Controls/Radio Control — In-line (Female)	4M	WPT-543
1999-92	Switch — Ignition	16M	WPT-577

WIRING PIGTAIL KITS

PASSENGER CAR



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD — Cont'd			
Taurus — Cont'd			
2004-92	Switch — Inertia	3M	WPT-446
2005-03	Switch — Lift Gate Glass Ajar	2M	WPT-146
1995-92	Switch — Lift Gate Glass Ajar Wagon 4 Door	4F	WPT-306
2004	Switch — Message Center	4F	WPT-465
2004-00	Switch — Moon Roof/ Sun Roof DOHC, OHV	3F	WPT-224
1999-96	Switch — Moon Roof/ Sun Roof	8F	WPT-628
1995	Switch — Moon Roof/ Sun Roof	2M	WPT-345
2003-00	Switch — Multi Function	7F	WPT-179
2004-00	Switch — Oil Sending Unit	1M	WPT-413
1999-92	Switch — Oil Sending Unit	1M	WPT-616
1999-96	Switch — Overdrive Cancel	6M	WPT-375
1995	Switch — Overdrive Cancel	2F	WPT-226
2003-02	Switch — Park Brake	2F	WPT-479
2003-00	Switch — Power Mirror	8F	WPT-117
1999-96	Switch — Power Mirror	8F	WPT-117
1995-92	Switch — Power Mirror	3F	WPT-580
2001-92	Switch — Power Steering Pressure	2M	WPT-260
2004-00	Switch — Power Window — Driver	6F	WPT-622
1999-96	Switch — Power Window — Driver	7F	WPT-546
2004-00	Switch — Power Window — LH — Rear Switch — Power Window — Passenger (Front)	6F 6F	WPT-622 WPT-622
1995-94	Switch — Power Window — Passenger (Front)	14F	WPT-402
2004-00	Switch — Power Window — RH — Rear	6F	WPT-622
1995	Switch — Power Window — RH — Rear	7F	WPT-549
1993-92	Switch — Power Window — RH — Rear	7F	WPT-549
1995-92	Switch — Redundant Radio Control	6M	WPT-636
2004-00	Switch — Seat (Driver)	8M	WPT-399
1999-97	Switch — Seat (Driver)	8F	WPT-379
1995-94	Switch — Seat (Driver)	8F	WPT-379
2004-00	Switch — Seat (Passenger)	8M	WPT-399
1999-96	Switch — Seat (Passenger)	8F	WPT-379
1999-97	Switch — Seat Lumbar	2F	WPT-544
1995	Switch — Seat Lumbar	2F	WPT-473
1994	Switch — Seat Lumbar GL, LX	2F	WPT-364
1994-90	Switch — Seat Lumbar SHO; w/Power Lumbar and Bolster	2F	WPT-473
1993-90	Switch — Seat Lumbar GL, L, LX; w/Power Lumbar	2F	WPT-364
2004-00	Switch — Speed Control Deactivation	2F	WPT-195
	Switch — Stop Lamp Wagon	2F	WPT-373
	Sedan	2F	WPT-489
1999-92	Switch — Stop Lamp	2M	WPT-197
2004	Switch — Traction Control DOHC	6F	WPT-285
2003-00	Switch — Traction Control	6F	WPT-285
	Switch — Turn Signal	11M	WPT-813
1998-95	Switch — Turn Signal	11M	WPT-813
1994-93	Switch — Turn Signal	11M	WPT-178
2004-96	Switch — Wiper Washer — Rear	6M	WPT-246
1995-92	Switch — Wiper Washer — Rear	8M	WPT-245
2004-00	Terminal — Rear Window Defroster Grid	1F	WPT-371
1997-90	Terminal — Rear Window Defroster Grid	1F	WPT-371
2004-98	Test Connector — Diagnostic	16F	WPT-615
2005	Transceiver — Passive Anti-Theft (PATS)	4F	WPT-261
2004-96	Transceiver — Passive Anti-Theft (PATS)	4M	WPT-293

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD — Cont'd			
Thunderbird			
1997	AC Compressor Clutch	2M	WPT-173
2004-02	Actuator — Door Lock — Decklid/Liftgate	3M	WPT-4591
	Actuator — Door Lock — LH — Front	2M	WPT-312
	Actuator — Door Lock — RH — Front	2M	WPT-312
1997-96	Actuator — Electronic Variable Orifice (EVO)	14M	WPT-666
1997	Actuator — Power Steering Pump	2M	WPT-146
2002	Actuator — Speed Control	6F	WPT-271
1997	Actuator — Speed Control	10M	WPT-762
2004-02	Alternator	3M	WPT-118
2002	Alternator		
	3.9L DOHC	3M	WPT-777
1997	Alternator	3M	WPT-119
	4.6L SOHC	1M	WPT-851
2002	Capacitor — Ignition / Radio		
	DOHC	1M	WPT-352
1997	Capacitor — Ignition / Radio	1M	WPT-352
2004-02	Cigar Lighter	3F	WPT-329
1997	Clock	8F	WPT-100
	Coil — Ignition		
	4.6L SOHC	3M	WPT-526
	3.8L OHV	4M	WPT-511
	Control Head — Electronic Automatic Temperature (EATC)	13F	WPT-176
1997-95	Fuel Injector		
	3.8L (232), 4.6L (281)	2M	WPT-372
2002	Fuel Pump / Sending Unit	4M	WPT-152
2003-02	Fuel Pump/Sending Unit — In-Line (Female)	8F	WPT-160
	Fuel Pump/Sending Unit — In-Line (Male)	8M	WPT-162
1997	Horn	1M	WPT-378
	Instrument Cluster		
	Analog Plug B	16M	WPT-202
	Analog Plug A	16M	WPT-278
2004-02	Junction Box — Relay	16F	WPT-736
2002	Junction Box — Relay	6F	WPT-600
1997-96	Junction Box — Relay	10M	WPT-782
1997	Lamp — Ash Tray	2F	WPT-251
2004-02	Lamp — CHMSL (Center High Mount Stop Lamp)	2F	WPT-226
	Lamp — Courtesy — Footwell	2F	WPT-356
1997	Lamp — Courtesy — Footwell	2F	WPT-356
2004-02	Lamp — Dome/ Map	6M	WPT-193
2002	Lamp — Fog / Driving	2F	WPT-150
1997	Lamp — Fog / Driving	2M	WPT-122
2003-02	Lamp — Front Turn/Marker	3M	WPT-108
1997	Lamp — Front Turn/Marker	3M	WPT-109
1993-90	Lamp — Front Turn/Marker	3F	WPT-442
2004-02	Lamp — Glove Box	2M	WPT-314
2003-02	Lamp — Headlamp High Beam	3M	WPT-110
1997	Lamp — Headlamp- High/Low Beam	3M	WPT-110
1997-96	Lamp — Instrument	2M	WPT-597
2002	Lamp — Park/Turn/Stop	3M	WPT-108
2004-03	Lamp — Rear Park	3M	WPT-671
	Lamp — Reverse	2M	WPT-702
2002	Lamp — Reverse	3M	WPT-105
2004-02	Lamp — Storage Compartment — Trunk	2M	WPT-355
	Module — Anti-theft	4M	WPT-668
2002	Module — Auto Lamps	6M	WPT-246
1997	Module — Auto Lamps	5M	WPT-300
	Module — Daytime Running Lamp (DRL)	8M	WPT-298
2004-02	Module — Drivers Door	12F	WPT-673
	Module — Isolator Antenna	1M	WPT-700
	Module — Remote Keyless Entry	12F	WPT-673

WIRING PIGTAIL KITS

PASSENGER CAR



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD — Cont'd			
Thunderbird — Cont'd			
1997-96	Module — Variable Speed Blower Controller	5M	WPT-566
2004-02	Motor — Heater/ AC Blend Door	6F	WPT-502
	Motor — Steering Column (Tilt/Telescope)	4M	WPT-293
2002	Motor — Windshield Wiper	5F	WPT-158
1997	Motor — Windshield Wiper	5F	WPT-158
	6M	WPT-297
2004-02	Radio	16F	WPT-186
2002	Radio	20F	WPT-184
2004-02	Radio — Amplifier	16F	WPT-645
1997-96	Relay — Flasher	3M	WPT-801
1997	Relay — Starter Motor	2M	WPT-428
2002	Sensor — Air Charge Temperature	2M	WPT-420
2004-02	Sensor — Ambient Temp	2M	WPT-437
1997	Sensor — Ambient Temp	2M	WPT-437
	Sensor — Brake Fluid Level	3M	WPT-118
	Sensor — Cam Shaft Position		
	3.8L	3M	WPT-196
	Sensor — Coolant Temperature	2M	WPT-206
	Sensor — Crank Shaft Position	2F	WPT-579
2002	Sensor — Delta Pressure Feedback EGR	3F	WPT-188
2004-02	Sensor — EATC In Car Temperature	2F	WPT-195
2002	Sensor — Fuel Rail Pressure		
	3.9L DOHC	3M	WPT-777
1997	Sensor — Fuel Rail Pressure	3M	WPT-118
2004-02	Sensor — Fuel Tank Pressure Transducer	3F	WPT-393
	Sensor — Knock	2M	WPT-351
2004-03	Sensor — Mass Air Flow	6F	WPT-795
2002	Sensor — Mass Air Flow	6M	WPT-102
1996	Sensor — Mass Air Flow	6M	WPT-102
1997	Sensor — Steering Rotation	4M	WPT-417
2004-03	Sensor — Sunload	6F	WPT-502
1997	Sensor — Sunload	2M	WPT-314
	Sensor — Throttle Position	3F	WPT-170
2004-02	Sensor — Transmission Range	12M	WPT-806
	Sensor — Washer Fluid Level	2M	WPT-684
1997	Sensor — Washer Fluid Level	2M	WPT-684
2004-02	Solenoid — Brake Shift Park Interlock	2M	WPT-675
1997-96	Solenoid — Brake Shift Park Interlock	3M	WPT-210
2004-03	Solenoid — Canister Vent	2M	WPT-322
1997	Solenoid — Canister Vent	2M	WPT-441
2002	Solenoid — EGR Vacuum Regulator	2M	WPT-359
1997	Solenoid — EGR Vacuum Regulator	2M	WPT-359
2005-02	Speaker — Door (Front)	2F	WPT-815
2005	Speaker — Subwoofer	2F	WPT-815
2004-02	Speaker — Subwoofer	10M	WPT-667
	Speaker — Tweeter — LH — Front	2M	WPT-416
	Speaker — Tweeter — RH — Front	2M	WPT-416
1997	Switch — Cold Engine Lockout	1M	WPT-476
2004-02	Switch — Convertible Top	8F	WPT-683
	Switch — Deck Lid / Hatch Release	2M	WPT-478
2005-02	Switch — Deck Lid / Lift Gate Ajar	2M	WPT-146
2004-02	Switch — Deck Lid / Lift Gate Ajar		
	14 Gauge	2F	WPT-159
	Switch — Dimmer	6F	WPT-502
1997	Switch — Dimmer	9M	WPT-238
2005-02	Switch — Door Ajar / Interior Lamp	2M	WPT-146
2004-02	Switch — Door Lock (LH)	8F	WPT-683
	Switch — Door Lock (RH)	8F	WPT-683
	Switch — Gear Shift Select / Neutral Safety	10F	WPT-156
	Switch — Headlamp	10F	WPT-156
1997	Switch — Headlamp	8M	WPT-534

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD — Cont'd			
Thunderbird — Cont'd			
1997	Switch — Heated Back Light (Rear Defrost)	5M	WPT-377
	Switch — Heater / A/C Blower (Front)	4M	WPT-103
	Switch — Heater A/C Temp Control w/ATC AC, w/Manual AC	3M	WPT-328
	Switch — Horn/Speed Controls/Radio Control — In-line (Female)	4M	WPT-543
2002	Switch — Ignition	8F	WPT-769
1997-96	Switch — Ignition	16M	WPT-577
2004-02	Switch — Inertia	3M	WPT-4591
2004-03	Switch — Multi Function	12F	WPT-834
2002	Switch — Oil Sending Unit	1M	WPT-452
1997	Switch — Oil Sending Unit	1M	WPT-616
2004-03	Switch — Park Brake	2F	WPT-479
2004-02	Switch — Park Brake	1F	WPT-371
	Switch — Power Mirror	8F	WPT-117
2004-03	Switch — Power Steering Pressure	2M	WPT-372
2004-02	Switch — Power Window — Driver	8F	WPT-498
	Switch — Power Window — Passenger (Front)	6F	WPT-600
	Switch — Seat (Driver)	8M	WPT-399
	Switch — Seat (Passenger)	4M	WPT-788
	Switch — Speed Control Deactivation	2F	WPT-195
1997	Switch — Speed Control Deactivation	2F	WPT-340
2004-02	Switch — Stop Lamp	2F	WPT-294
1997	Switch — Stop Lamp	2M	WPT-197
2004-02	Terminal — Rear Window Defroster Grid		WPT-797
1997-96	Test Connector — Diagnostic	16F	WPT-615
2004-02	Trailer Tow — Vehicle Side	4F	WPT-358
	Transceiver — Passive Anti-Theft (PATS)	4M	WPT-668
2002	Valve — Vapor Management	2M	WPT-545
LINCOLN			
Continental			
2001-93	AC Compressor Clutch	2M	WPT-173
2002-95	Actuator — Door Lock — LH — Front	2M	WPT-312
1993	Actuator — Door Lock — LH — Front	2M	WPT-312
2002-95	Actuator — Door Lock — LH — Rear	2M	WPT-312
1993	Actuator — Door Lock — LH — Rear	2M	WPT-312
2002-95	Actuator — Door Lock — RH — Front	2M	WPT-312
1993	Actuator — Door Lock — RH — Front	2M	WPT-312
2002-95	Actuator — Door Lock — RH — Rear	2M	WPT-312
1993	Actuator — Door Lock — RH — Rear	2M	WPT-312
2002-98	Actuator — Speed Control	10M	WPT-762
1994-93	Amplifier — Speed Control	6M	WPT-268
2002-01	Bulkhead — Transmission — In-line (Female) DOHC	9F	WPT-570
1994-93	Bulkhead — Transmission — In-line (Female)	9F	WPT-570
2002-99	CD Changer	12M	WPT-164
1994-93	CD Changer	6M	WPT-636
2002-01	Capacitor — Ignition / Radio	1M	WPT-352
1994-93	Capacitor — Ignition / Radio	1M	WPT-352
2002-99	Cigar Lighter	3F	WPT-329
1997-95	Cigar Lighter	1M	WPT-476
2002-01	Clock	6M	WPT-276
2000	Control Head — Electronic Automatic Temperature (EATC)	13F	WPT-176
2001-99	Element — Heated Seat	4M	WPT-307
2002-00	Floor Shifter — In-line (Female)	4F	WPT-467
2001	Fuel Injector	2F	WPT-159
1994-91	Fuel Injector 3.8L	2M	WPT-372
2002-99	Fuel Pump / Sending Unit	8M	WPT-817
1997	Fuel Pump / Sending Unit	4M	WPT-152

WIRING PIGTAIL KITS

PASSENGER CAR



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
LINCOLN — Cont'd			
Continental — Cont'd			
1993	Fuel Pump / Sending Unit	4M	WPT-454
2002-99	Horn	2M	WPT-372
1998-95	Horn	1M	WPT-378
2002-01	Instrument Cluster	16M	WPT-198
1994-93	Lamp — Anti-Theft	2F	WPT-757
2002-98	Lamp — Ash Tray	2F	WPT-251
1994-93	Lamp — Ash Tray	3F	WPT-348
2002-95	Lamp — CHMSL (Center High Mount Stop Lamp)	2M	WPT-314
1993	Lamp — CHMSL (Center High Mount Stop Lamp)	2F	WPT-194
2002-95	Lamp — Courtesy — Door	2M	WPT-370
1993	Lamp — Courtesy — Door	2F	WPT-212
2002-98	Lamp — Courtesy — Footwell	2F	WPT-356
1994-93	Lamp — Courtesy — Footwell	2F	WPT-356
2002-97	Lamp — Front Cornering / Turn	2F	WPT-823
2000	Lamp — Front Cornering / Turn	2N/A	WPT-121
2002-95	Lamp — Front Turn/Marker	3F	WPT-660
	Lamp — Glove Box	2M	WPT-314
1994-93	Lamp — Headlamp Switch	2F	WPT-342
2000-98	Lamp — Headlamp- High/Low Beam	3M	WPT-110
2002-98	Lamp — License	N/A	WPT-492
1993-91	Lamp — License	2N/A	WPT-471
2002-98	Lamp — Overhead Console	3F	WPT-553
	2F	WPT-757
2000	Lamp — Park/Turn/Stop	3N/A	WPT-151
1998-95	Lamp — Park/Turn/Stop	3N/A	WPT-120
1993	Lamp — Park/Turn/Stop	3F	WPT-442
2002-98	Lamp — Side Marker	N/A	WPT-492
1997	Lamp — Side Marker	N/A	WPT-492
2002-00	Lamp — Storage Compartment — Trunk	2F	WPT-316
1993-91	Lamp — Storage Compartment — Trunk	2M	WPT-370
2002-98	Lamp — Tire Pressure Warning	2F	WPT-342
	Message Center (16 Way)	6M	WPT-563
2002-00	Mirror — Rearview (Electrochromatic)	6M	WPT-193
1999-98	Mirror — Rearview (Electrochromatic)	8M	WPT-557
1993	Mirror — Sideview	2N/A	WPT-471
2002-95	Mirror — Sideview / Heated	10F	WPT-568
1993	Mirror — Sideview / Heated	6F	WPT-599
2002-00	Module — Air Suspension	12F	WPT-647
2002-98	Module — Auto Lamps	6M	WPT-246
1997-95	Module — Auto Lamps	5M	WPT-300
1993	Module — Auto Lamps	5M	WPT-300
1995	Module — Daytime Running Lamp (DRL)	8M	WPT-298
2002-99	Module — Drivers Door	14M	WPT-608
2002-98	Module — Drivers Door	16M	WPT-198
2002-00	Module — Emergency Message System	12F	WPT-647
2002-99	Module — Heated Seat (Drivers)	14M	WPT-608
1994-93	Module — Ignition	6M	WPT-297
1993	Module — Instrument Panel Dimmer	6M	WPT-663
2002-00	Module — Radio Power Antenna	1F	WPT-371
1993	Module — Radio Power Antenna	8F	WPT-100
	Module — Remote Keyless Entry		
	Left	13M	WPT-612
	Right	13M	WPT-625
	8F	WPT-679
	16M	WPT-632
	Module — Seat Memory	8M	WPT-519
1994-91	Module — Variable Assist Power Steering (VAPS)	14M	WPT-666
2002-98	Module — Wiper Control	14M	WPT-331
1994-93	Module — Wiper Control	14M	WPT-666
2001	Motor — Engine Cooling Fan	3F	WPT-168
1994-93	Motor — Engine Cooling Fan	3F	WPT-706



WIRING PIGTAIL KITS PASSENGER CAR

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
LINCOLN — Cont'd			
Continental — Cont'd			
2002-00	Motor — Fuel Filler Door	2M	WPT-370
1993	Motor — Fuel Filler Door	2M	WPT-370
1998-95	Motor — Heater/ AC Blend Door	8F	WPT-100
1994-93	Motor — Heater/ AC Blend Door	8F	WPT-117
2002-01	Motor — Idle Air Control	2M	WPT-357
1994-93	Motor — Idle Air Control	2M	WPT-684
2002-98	Motor — Moon Roof / Sun Roof	2M	WPT-370
2002-95	Motor — Power Window — LH — Front	2F	WPT-473
1993	Motor — Power Window — LH — Front	2F	WPT-484
2002-00	Motor — Power Window — LH — Rear	2F	WPT-473
1999-95	Motor — Power Window — LH — Rear	2F	WPT-473
1993	Motor — Power Window — LH — Rear	2F	WPT-484
2002-95	Motor — Power Window — RH — Front	2F	WPT-473
1993	Motor — Power Window — RH — Front	2F	WPT-484
2002-95	Motor — Power Window — RH — Rear	2F	WPT-473
1993	Motor — Power Window — RH — Rear	2F	WPT-484
	Motor — Radio Power Antenna	2M	WPT-416
1994-93	Motor — Seat Lumbar	2M	WPT-374
2002-98	Motor — Seat Recline	2M	WPT-370
1994-93	Motor — Seat Recline	2F	WPT-484
2002-01	Motor — Windshield Washer Fluid Pump	2M	WPT-357
2000	Motor — Windshield Wiper	5F	WPT-158
1994-93	Motor — Windshield Wiper	3M	WPT-333
1997	Power Point	2M	WPT-355
2000-98	Radio	16F	WPT-186
	8F	WPT-185
	20F	WPT-184
2002-01	Radio — Amplifier	4M	WPT-222
1995	Radio — Amplifier	3M	WPT-4591
1994-93	Relay — Flasher	3M	WPT-301
1993	Relay — Headlamp	6M	WPT-761
1994-91	Relay — Starter Motor	1M	WPT-616
2002-95	Sensor — Air Charge Temperature	2M	WPT-420
1994-93	Sensor — Air Charge Temperature	2M	WPT-428
2002-95	Sensor — Air Suspension — LH — Front	4M	WPT-152
	Sensor — Air Suspension — LH — Rear	4M	WPT-152
	Sensor — Air Suspension — RH — Front	4M	WPT-152
	Sensor — Air Suspension — RH — Rear	4M	WPT-152
2002-93	Sensor — Ambient Temp	2M	WPT-437
2002-01	Sensor — Cam Shaft Position	2F	WPT-759
2002-95	Sensor — Coolant Temperature	2M	WPT-206
1994-93	Sensor — Coolant Temperature	2M	WPT-437
2002	Sensor — Crank Shaft Position	2F	WPT-759
1994-93	Sensor — Cylinder Head Temperature 3.8L	2M	WPT-338
2002-00	Sensor — Delta Pressure Feedback EGR	3F	WPT-188
1994-93	Sensor — Delta Pressure Feedback EGR	3M	WPT-458
2002-95	Sensor — EATC In Car Temperature	3M	WPT-4591
2002-01	Sensor — Fuel Rail Pressure Tin Terminal	3M	WPT-777
2001	Sensor — Fuel Rail Pressure Gold Terminal	3M	WPT-118
2002-01	Sensor — Knock	4F	WPT-225
1998	Sensor — Knock 4.6L	2M	WPT-410
2002-00	Sensor — Low Coolant	2M	WPT-372
1999-95	Sensor — Mass Air Flow	6M	WPT-102
1994-93	Sensor — Mass Air Flow	4M	WPT-511
2002-99	Sensor — Memory Seat Track Position	3M	WPT-241
2001	Sensor — O2 (HEGO/EGO) Gold Terminals / A Polarity	4M	WPT-112

WIRING PIGTAIL KITS

PASSENGER CAR



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
LINCOLN — Cont'd			
Continental — Cont'd			
2000-96	Sensor — O2 (HEGO/EGO)	4F	WPT-225
2002-00	Sensor — Oil Level	1M	WPT-237
1993	Sensor — Seat Height — Rear	4M	WPT-376
1994-93	Sensor — Steering Rotation	4M	WPT-417
2001	Sensor — Throttle Position	3F	WPT-170
1994-93	Sensor — Throttle Position	3M	WPT-445
2002-01	Sensor — Transmission Range	12M	WPT-803
1997-93	Sensor — Transmission Range	8M	WPT-389
2002-01	Sensor — Washer Fluid Level	2M	WPT-684
1993	Solenoid — Air Suspension (Front)	2M	WPT-589
	Solenoid — Air Suspension (Rear)	2M	WPT-589
2002-98	Solenoid — Brake Shift Park Interlock	3M	WPT-210
1994-93	Solenoid — Brake Shift Park Interlock	3M	WPT-210
2002-00	Solenoid — Canister Vent	2M	WPT-322
1998	Solenoid — Canister Vent	2M	WPT-322
1994-93	Solenoid — Canister Vent	2M	WPT-441
2002-01	Solenoid — EGR Vacuum Regulator	2M	WPT-359
1994-93	Solenoid — EGR Vacuum Regulator	2M	WPT-374
2001	Solenoid — Variable Assist Power Steering (VAPS)	2M	WPT-146
2002-99	Speaker — Door (Front)	2F	WPT-815
1998-95	Speaker — Door (Front)	2M	WPT-416
1993	Speaker — Door (Front)	2M	WPT-416
2002-99	Speaker — Door (Rear)	2F	WPT-815
1998-95	Speaker — Door (Rear)	2M	WPT-416
1993	Speaker — Front	2M	WPT-416
2002-00	Speaker — Rear	2F	WPT-373
1993	Speaker — Rear	2M	WPT-416
2002-00	Speaker — Subwoofer	6M	WPT-663
2001	Switch — A/C Compressor Clutch Cycling	4F	WPT-169
1995-93	Switch — A/C Compressor Clutch Cycling	2M	WPT-438
2001	Switch — A/C Pressure Cut Off	4F	WPT-169
2002-00	Switch — Air Suspension	3M	WPT-617
1993	Switch — Air Suspension	3M	WPT-617
2002-95	Switch — Courtesy Lamp	2M	WPT-441
1993	Switch — Courtesy Lamp	3F	WPT-213
2002-95	Switch — Deck Lid / Hatch Release	2M	WPT-478
2002-00	Switch — Decklid / Liftgate (Anti-theft)	2M	WPT-715
1993-91	Switch — Decklid / Liftgate (Anti-theft)	2M	WPT-715
1994-93	Switch — Dimmer	4M	WPT-556
2002-01	Switch — Door Ajar / Interior Lamp	2M	WPT-146
1993	Switch — Door Ajar / Interior Lamp	1M	WPT-327
	Switch — Door Cylinder Disarm (Anti-Theft)	2M	WPT-428
2002-95	Switch — Door Lock (LH)	8M	WPT-252
2002-98	Switch — Door Lock (RH)	8M	WPT-252
2002-95	Switch — Fuel Filler Door	2M	WPT-572
1997-95	Switch — Gear Shift Select / Neutral Safety	8M	WPT-389
2002-93	Switch — Heated Back Light (Rear Defrost)	5M	WPT-377
2002-99	Switch — Heated Seat — LH — Front	8M	WPT-652
1997-95	Switch — Heated Seat — LH — Front	6M	WPT-343
2002-99	Switch — Heated Seat — RH — Front	6M	WPT-343
1997-95	Switch — Heated Seat — RH — Front	8M	WPT-652
1994-93	Switch — Heater / A/C Blower (Front)	4M	WPT-103
2002-99	Switch — Hood Ajar	2M	WPT-269
1998-95	Switch — Hood Ajar	4M	WPT-152
1994-93	Switch — Horn/Speed Controls/Radio Control — In-line (Female)	4M	WPT-543
2002-98	Switch — Ignition	15M	WPT-475
2002-95	Switch — Inertia	3M	WPT-446
1993	Switch — Inertia	3M	WPT-446
2002-98	Switch — Message Center	8M	WPT-217
1994-93	Switch — Message Center	8M	WPT-215
2002-98	Switch — Moon Roof/ Sun Roof	4F	WPT-457



WIRING PIGTAIL KITS PASSENGER CAR

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
LINCOLN — Cont'd			
Continental — Cont'd			
2002-00	Switch — Multi Function	11M	WPT-813
1998	Switch — Multi Function	11M	WPT-813
1995	Switch — Multi Function	11M	WPT-178
2002-01	Switch — Oil Sending Unit	1M	WPT-413
1994-93	Switch — Oil Sending Unit	1M	WPT-616
2002-95	Switch — Power Mirror	8M	WPT-313
1993	Switch — Power Mirror	8M	WPT-366
2002-01	Switch — Power Steering Pressure	2M	WPT-372
1998	Switch — Power Window — Driver	4M	WPT-103
2002-00	Switch — Power Window — LH — Rear	4M	WPT-417
1999	Switch — Power Window — LH — Rear	4M	WPT-703
1997-95	Switch — Power Window — LH — Rear	4M	WPT-417
2002-99	Switch — Power Window — Passenger (Front) Rectangular	4M	WPT-703
2002-95	Switch — Power Window — Passenger (Front) Square	4M	WPT-103
1998	Switch — Power Window — Passenger (Front) Rectangular	4M	WPT-417
1997-95	Switch — Power Window — Passenger (Front) Rectangular	4M	WPT-703
1999	Switch — Power Window — RH — Rear	4M	WPT-703
1997-95	Switch — Power Window — RH — Rear	4M	WPT-703
2002-95	Switch — Seat (Driver)	10M	WPT-667
1998-95	Switch — Seat (Passenger)	10M	WPT-504
2002-98	Switch — Seat Lumbar	5M	WPT-387
1994-93	Switch — Seat Lumbar Driver and Passenger Low Back	2F	WPT-364
1993	Switch — Seat Lumbar Split Bench	2F	WPT-364
2002-99	Switch — Speed Control Deactivation	2F	WPT-195
2002-95	Switch — Stop Lamp	2M	WPT-197
1994-93	Switch — Stop Lamp	2M	WPT-197
	Switch — Turn Signal	11M	WPT-178
	Switch — Turn Signal / Windshield Wiper / Washer	7F	WPT-179
2002-01	Test Connector — Diagnostic	16F	WPT-615
	Transceiver — Passive Anti-Theft (PATS)	4M	WPT-293
2002-98	Valve — Vapor Management	2M	WPT-545
LS			
2004-00	AC Compressor Clutch	2F	WPT-161
2002	Actuator — Door Lock — Decklid/Liftgate	3M	WPT-4591
2000	Actuator — Door Lock — Decklid/Liftgate	3M	WPT-4591
2002-00	Actuator — Door Lock — LH — Rear	10F	WPT-289
	Actuator — Door Lock — RH — Rear	10F	WPT-289
2004-03	Actuator — Speed Control	6F	WPT-271
2002-01	Actuator — Speed Control 6 Cyl.	6F	WPT-271
2000	Actuator — Speed Control MT	6F	WPT-271
2004-00	Alternator	3M	WPT-118
2002-00	Alternator 3.9L DOHC	3M	WPT-777
2003-00	CD Changer	12M	WPT-164
2004-00	Capacitor — Ignition / Radio 3.9L	1M	WPT-352
2003-01	Capacitor — Ignition / Radio 3.0L	1M	WPT-352
2002-01	Cigar Lighter	3F	WPT-329
2002-00	Element — Heated Seat	2M	WPT-548
2003-00	Fuel Injector	2F	WPT-159
	Fuel Pump / Sending Unit	4M	WPT-152

WIRING PIGTAIL KITS

PASSENGER CAR



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
LINCOLN — Cont'd			
LS — Cont'd			
2003-00	Fuel Pump/Sending Unit — In-Line (Female)	8F	WPT-160
	Fuel Pump/Sending Unit — In-Line (Male)	8M	WPT-162
2002-01	Horn	1F	WPT-434
2004-00	Junction Box — Relay	6F	WPT-600
2002-00	Junction Box — Relay	16F	WPT-736
	Lamp — CHMSL (Center High Mount Stop Lamp)	3M	WPT-105
2004-00	Lamp — Courtesy — Door	2F	WPT-356
2002-00	Lamp — Courtesy — Footwell	2F	WPT-356
2004-03	Lamp — Courtesy — Reading (Rear)	2F	WPT-194
2004-00	Lamp — Dome	6F	WPT-502
2004-03	Lamp — Dome/ Map	2F	WPT-194
2004	Lamp — Fog / Driving	2F	WPT-781
2003-00	Lamp — Fog / Driving	2M	WPT-148
	Lamp — Front Turn	2N/A	WPT-147
2000	Lamp — Front Turn/Marker	3N/A	WPT-151
2005	Lamp — Glove Box	2M	WPT-841
2004-00	Lamp — Glove Box	2M	WPT-314
2004-03	Lamp — Headlamp — High/Low Beam — In-Line (Female)		
	3.0L	6F	WPT-758
2003-00	Lamp — Headlamp — High/Low Beam — In-Line (Female)	8F	WPT-160
	Lamp — Headlamp — High/Low Beam — In-Line (Male)	8M	WPT-162
2000	Lamp — Headlamp High Beam	2M	WPT-148
2004-00	Lamp — Headlamp Low Beam	2M	WPT-772
2003-00	Lamp — License	2F	WPT-150
2005-00	Lamp — Map	6F	WPT-502
2003-00	Lamp — Park/Turn/Stop	3N/A	WPT-151
2002-00	Lamp — Rear Park	2N/A	WPT-149
2003	Lamp — Rear Turn	3N/A	WPT-151
2003-00	Lamp — Rear Turn	2N/A	WPT-147
2003	Lamp — Reverse	2F	WPT-150
2002-00	Lamp — Reverse	3M	WPT-105
2003-00	Lamp — Side Marker	2F	WPT-150
2002-00	Lamp — Stop / Park	2F	WPT-150
2000	Lamp — Stop / Park	2N/A	WPT-149
2005-00	Lamp — Storage Compartment — Trunk	2M	WPT-355
2004-03	Mirror — Rearview (Electrochromatic)	16M	WPT-242
2002-01	Mirror — Rearview (Electrochromatic)	6M	WPT-193
2000	Mirror — Rearview (Electrochromatic)	3M	WPT-584
2004-00	Mirror — Vanity	2M	WPT-272
2004-02	Module — Anti-theft	4M	WPT-668
2004-00	Module — Auto Lamps	6M	WPT-246
	Module — Drivers Door	4F	WPT-408
2002-00	Module — Drivers Door	12F	WPT-673
	Module — Emergency Message System	12F	WPT-647
	Module — Heated Seat (Drivers)	10F	WPT-156
	Module — Heated Seat (Passenger)	10F	WPT-156
	Module — Radio Power Antenna	1F	WPT-371
	Module — Remote Keyless Entry	4M	WPT-222
2004-00	Module — Seat Memory	4F	WPT-408
2002-00	Module — Variable Speed Blower Controller	5F	WPT-153
2004-02	Motor — Electronic Throttle Control		
	3.0L	2F	WPT-837
2002-00	Motor — Fuel Filler Door	2M	WPT-370
2004-00	Motor — Heater/ AC Blend Door	6F	WPT-502
2000	Motor — Idle Air Control		
	3.9L DOHC	2M	WPT-304
2002-00	Motor — Power Seat Track	2M	WPT-370
2004-03	Motor — Power Window — LH — Front	8F	WPT-521
2002-00	Motor — Power Window — LH — Front	2F	WPT-824
2004-03	Motor — Power Window — RH — Front	8F	WPT-521
2002-00	Motor — Power Window — RH — Front	2F	WPT-824



WIRING PIGTAIL KITS PASSENGER CAR

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
LINCOLN — Cont'd			
LS — Cont'd			
2002-00	Motor — Seat Height (Front)	2M	WPT-370
	Motor — Seat Height (Rear)	2M	WPT-370
	Motor — Steering Column (Tilt/Telescope)	4M	WPT-293
2004-00	Motor — Windshield Washer Fluid Pump	2M	WPT-334
2003-00	Motor — Windshield Wiper	5F	WPT-158
	Motor — Windshield Wiper (Inline)	6M	WPT-163
2002-01	Pump — Exhaust Air Supply		
	3.0L	2F	WPT-361
2000	Pump — Exhaust Air Supply		
	MT Calif. only	2F	WPT-361
2004-00	Radio	16F	WPT-186
2002	Radio	8F	WPT-185
	12F	WPT-647
2002-00	Radio	7M	WPT-154
	8M	WPT-155
	17F	WPT-157
	20F	WPT-184
2005-03	Radio — Amplifier	10M	WPT-667
2004-03	Radio — Amplifier	6M	WPT-663
2004-00	Relay — Trailer Tow	5F	WPT-662
2002-00	Sensor — Accelerator Pedal Position	3F	WPT-734
2004-00	Sensor — Air Charge Temperature	2M	WPT-420
	Sensor — Ambient Temp	2M	WPT-437
	Sensor — Brake Pressure	3F	WPT-230
2002-01	Sensor — Cam Shaft Position		
	3.0L DOHC	2F	WPT-759
2003	Sensor — Coolant Temperature		
	3.0L	2M	WPT-206
2000	Sensor — Coolant Temperature		
	3.9L	2M	WPT-206
2004-01	Sensor — Cylinder Head Temperature		
	3.0L	2M	WPT-338
2004	Sensor — Delta Pressure Feedback EGR	3F	WPT-188
2003	Sensor — Delta Pressure Feedback EGR		
	3.0L DOHC	6F	WPT-435
2002-00	Sensor — Delta Pressure Feedback EGR	3F	WPT-188
	Sensor — EATC In Car Temperature	2F	WPT-195
2004-01	Sensor — Fuel Rail Pressure		
	3.9L DOHC	3M	WPT-777
2003-01	Sensor — Intake Manifold Runner Control	2M	WPT-545
2004-02	Sensor — Knock		
	3.9L	2M	WPT-351
2001	Sensor — Knock	2M	WPT-351
2000	Sensor — Knock		
	3.9L	2M	WPT-351
2004-03	Sensor — Mass Air Flow		
	8 Cyl.	6F	WPT-795
2004-00	Sensor — Mass Air Flow		
	6 Cyl.	6M	WPT-102
2002-00	Sensor — Memory Seat Track Position	3M	WPT-241
2004-03	Sensor — Throttle Position		
	3.0L	4F	WPT-205
2002-00	Sensor — Throttle Position	3F	WPT-170
2004-00	Sensor — Transmission Range	12M	WPT-806
	Sensor — Washer Fluid Level	2M	WPT-684
2002-00	Sensor — Yaw	3F	WPT-250
2005-00	Solenoid — Brake Shift Park Interlock	2M	WPT-675
2004-00	Solenoid — Canister Vent	2M	WPT-322
	Solenoid — EGR Vacuum Regulator	2M	WPT-359
2005-03	Speaker — Door (Front)	2F	WPT-815
2005-00	Speaker — Door (Rear)	2F	WPT-815

WIRING PIGTAIL KITS

PASSENGER CAR



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
LINCOLN — Cont'd			
LS — Cont'd			
2004-00	Speaker — Subwoofer	10M	WPT-667
2002-00	Speaker — Tweeter — LH — Front	2M	WPT-416
	Speaker — Tweeter — RH — Front	2M	WPT-416
2003-02	Switch — A/C Compressor Clutch Cycling	4F	WPT-169
2004-03	Switch — Adjustable Pedal	8F	WPT-204
2002-00	Switch — Clutch Pedal Position	5M	WPT-721
2004-00	Switch — Dimmer	6F	WPT-502
	Switch — Door Ajar / Interior Lamp	10F	WPT-289
2004-03	Switch — Door Lock (LH)	4F	WPT-465
2004-00	Switch — Door Lock (LH)	6F	WPT-586
2004-03	Switch — Door Lock (RH)	4F	WPT-465
2004-00	Switch — Door Lock (RH)	6F	WPT-586
	Switch — Gear Shift Select / Neutral Safety	10F	WPT-156
	Switch — Headlamp	10F	WPT-156
2002-00	Switch — Ignition	8F	WPT-769
2004-00	Switch — Inertia	3M	WPT-446
2004-03	Switch — Keyless Entry	8F	WPT-833
2005-00	Switch — Message Center	6F	WPT-586
2004-00	Switch — Moon Roof/ Sun Roof	6F	WPT-586
2005-03	Switch — Multi Function	12F	WPT-834
2004-00	Switch — Oil Sending Unit	1M	WPT-452
2002-01	Switch — Park Brake	1F	WPT-434
2004-00	Switch — Power Mirror	10F	WPT-640
2004-03	Switch — Power Window — Driver	8F	WPT-219
2002-00	Switch — Power Window — Driver	16F	WPT-645
	Switch — Power Window — LH — Rear	6F	WPT-502
	Switch — Power Window — Passenger (Front)	6F	WPT-502
	Switch — Power Window — RH — Rear	6F	WPT-502
2004-00	Switch — Seat (Driver)	12F	WPT-396
2002-00	Switch — Seat (Passenger)	12F	WPT-396
	Switch — Seat Lumbar	6F	WPT-285
2004-03	Switch — Seat Memory	8F	WPT-699
2004-00	Switch — Speed Control Deactivation	2F	WPT-195
2003-00	Switch — Stop Lamp	2F	WPT-294
2002-00	Switch — Traction Control	6F	WPT-502
	Trailer Tow — Vehicle Side	4F	WPT-358
	Transceiver — Cell Phone	12F	WPT-647
2004-00	Transceiver — Passive Anti-Theft (PATS)	4M	WPT-668
	Valve — Vapor Management	2M	WPT-545
Mark			
1997-95	AC Compressor Clutch	2M	WPT-173
1998-93	Actuator — Door Lock — LH — Front	2M	WPT-312
	Actuator — Door Lock — RH — Front	2M	WPT-312
1997-95	Actuator — Electronic Variable Orifice (EVO)	2M	WPT-146
1998-93	Actuator — Speed Control	10M	WPT-762
1996-95	Brush Assy — Horn/Speed Control	8F	WPT-227
1997	Bulkhead — Transmission — In-line (Female)	9F	WPT-570
1995-94	Bulkhead — Transmission — In-line (Female)	9F	WPT-570
1998	Bulkhead — Transmission — In-line (Male)	7F	WPT-567
1998-93	CD Changer	14M	WPT-296
1994-93	CD Changer	6M	WPT-636
1998-94	Capacitor — Ignition / Radio	1M	WPT-352
1998-93	Cigar Lighter	1M	WPT-476
1995-94	Coil — Ignition		
	DOHC	3M	WPT-526
1998-94	Control Head — Electronic Automatic Temperature (EATC)	13F	WPT-176
1993	Control Head — Electronic Automatic Temperature (EATC)	13M	WPT-308
1998-97	Element — Heated Seat	4M	WPT-307
1998-95	Fuel Injector	2M	WPT-372
1998	Fuel Pump / Sending Unit	8M	WPT-817

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
LINCOLN — Cont'd			
Mark — Cont'd			
1998-97	Fuel Pump / Sending Unit	8M	WPT-172
1998-93	Horn	1M	WPT-378
1998-97	Instrument Cluster	12M	WPT-164
	16M	WPT-332
1998-93	Lamp — Ash Tray	2F	WPT-251
1996-93	Lamp — Courtesy — Door	2F	WPT-212
1998-93	Lamp — Courtesy — Footwell	2F	WPT-356
1998	Lamp — Dome	3M	WPT-4591
1998-97	Lamp — Dome	1F	WPT-295
1993	Lamp — Dome	1F	WPT-295
1998-97	Lamp — Front Cornering / Turn	3M	WPT-105
	Lamp — Front Turn/Marker	3M	WPT-109
1996-93	Lamp — Headlamp High Beam	2M	WPT-148
	Lamp — Headlamp Low Beam	2M	WPT-148
1998-93	Lamp — Headlamp Switch	2F	WPT-757
	Lamp — License	2N/A	WPT-149
1998	Lamp — PRNDL Indicator	14M	WPT-296
1998-95	Lamp — PRNDL Indicator	4M	WPT-307
1995-93	Lamp — PRNDL Indicator	2N/A	WPT-471
1997-95	Lamp — Park/Turn/Stop	3M	WPT-109
1998-95	Lamp — Side Marker	2M	WPT-432
1998-93	Lamp — Storage Compartment — Trunk	2M	WPT-314
1995-93	Lamp — Under Hood	2M	WPT-370
1998-97	Mirror — Rearview (Electrochromatic)	6M	WPT-193
1993	Mirror — Rearview (Electrochromatic)	2M	WPT-565
1995-94	Mirror — Sideview	4F	WPT-306
1998-93	Mirror — Sideview / Heated	3F	WPT-580
1998-96	Mirror — Vanity	2F	WPT-479
1998-93	Module — Air Suspension	16M	WPT-644
1996-94	Module — Anti-theft		
	Left	13M	WPT-610
	Right	13M	WPT-627
1998-93	Module — Auto Lamps	5M	WPT-300
1996-93	Module — Auto Lamps	9M	WPT-238
1998-97	Module — Daytime Running Lamp (DRL)	8M	WPT-298
1996-95	Module — Daytime Running Lamp (DRL)	9M	WPT-672
1998-93	Module — Drivers Door	5M	WPT-377
1998-97	Module — Heated Seat (Drivers)	14M	WPT-608
1995-94	Module — Ignition		
	DOHC	12M	WPT-583
1997	Module — Lighting Control	16M	WPT-632
1998-97	Module — Power Moonroof	6M	WPT-375
1996-93	Module — Radio Power Antenna	8F	WPT-100
1998-93	Module — Remote Keyless Entry	8F	WPT-679
	16M	WPT-632
1996-93	Module — Remote Keyless Entry		
	Left	13M	WPT-612
	Right	13M	WPT-625
1998-97	Module — Seat Memory	16M	WPT-242
1996-93	Module — Variable Speed Blower Controller	5M	WPT-566
1998-93	Module — Wiper Control	14M	WPT-666
1998-95	Motor — Air Suspension Compressor	4F	WPT-171
1997	Motor — Engine Cooling Fan	3M	WPT-362
1998-93	Motor — Fuel Filler Door	2M	WPT-370
1996-93	Motor — Heater/ AC Blend Door	8F	WPT-100
1995-94	Motor — Idle Air Control	2M	WPT-684
1998	Motor — Moon Roof / Sun Roof	2M	WPT-370
1993	Motor — Moon Roof / Sun Roof	2M	WPT-370
1998-95	Motor — Power Seat Track	6M	WPT-375
1993	Motor — Power Seat Track	6M	WPT-375
1998-97	Motor — Power Window — LH — Front	2F	WPT-466

WIRING PIGTAIL KITS

PASSENGER CAR



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
LINCOLN — Cont'd			
Mark — Cont'd			
1998-97	Motor — Power Window — RH — Front	2F	WPT-466
1996-93	Motor — Radio Power Antenna	2M	WPT-173
1998-97	Motor — Seat Lumbar	2M	WPT-370
1998-96	Motor — Seat Recline	2M	WPT-370
1993	Motor — Seat Recline	2M	WPT-370
1998-97	Motor — Steering Column (Tilt/Telescope)	4M	WPT-293
1998-93	Motor — Windshield Washer Fluid Pump	2M	WPT-355
1998-95	Motor — Windshield Wiper	7M	WPT-175
	Pump — Exhaust Air Supply	2F	WPT-361
	Radio	16M	WPT-332
1998-97	Radio — Amplifier	8M	WPT-283
1996-95	Radio — Amplifier	8M	WPT-215
1998-95	Relay — Air Suspension Compressor	4M	WPT-831
1994-93	Relay — Air Suspension Compressor	4M	WPT-392
1996-93	Relay — Flasher	3M	WPT-801
1998-97	Relay — Starter Motor	2M	WPT-428
1995-93	Relay — Starter Motor	2M	WPT-428
1998-97	Relay — Telescoping Steering Column	15M	WPT-732
1995-94	Sensor — Air Charge Temperature	2M	WPT-428
1998-93	Sensor — Ambient Temp	2M	WPT-437
1998	Sensor — Brake Fluid Level	3M	WPT-118
1994-93	Sensor — Brake Pressure	2M	WPT-232
1995	Sensor — Catalyst Monitor	4M	WPT-112
1995-94	Sensor — Coolant Temperature	2M	WPT-437
	Sensor — Delta Pressure Feedback EGR	3M	WPT-458
1998-96	Sensor — Knock		
	4.6L	2M	WPT-410
1998-93	Sensor — Low Coolant	2M	WPT-372
1995	Sensor — Mass Air Flow	4M	WPT-511
1994	Sensor — Mass Air Flow		
	DOHC	4M	WPT-511
1993	Sensor — Mass Air Flow	4M	WPT-511
1998-93	Sensor — Memory Seat (Horizontal)	3M	WPT-241
	Sensor — Memory Seat (Recline)	3M	WPT-241
	Sensor — Memory Seat Track Position	3M	WPT-241
1998	Sensor — O ₂ (HEGO/EGO)	4M	WPT-112
1998-93	Sensor — Oil Level	3M	WPT-235
	Sensor — Steering Rotation	4M	WPT-417
	Sensor — Sunload	2M	WPT-314
1997	Sensor — Throttle Position	3F	WPT-170
1995-94	Sensor — Throttle Position	3M	WPT-445
1998	Sensor — Transmission Range	12M	WPT-806
1995-94	Sensor — Transmission Range	8M	WPT-389
1998-93	Sensor — Washer Fluid Level	2M	WPT-684
	Solenoid — Air Suspension (Front)	2M	WPT-589
	Solenoid — Air Suspension (Rear)	2M	WPT-589
1998-97	Solenoid — Brake Shift Park Interlock	2M	WPT-675
1996-93	Solenoid — Brake Shift Park Interlock	3M	WPT-210
1998	Solenoid — Canister Vent	2M	WPT-322
1995-94	Solenoid — Canister Vent	2M	WPT-441
1998-96	Solenoid — EGR Vacuum Regulator	2M	WPT-359
1995-94	Solenoid — EGR Vacuum Regulator		
	4.6L DOHC	2M	WPT-374
1998-93	Speaker — Door (Front)	2M	WPT-416
	Speaker — Rear	2M	WPT-416
	Speaker — Tweeter — LH — Front	2M	WPT-314
	Speaker — Tweeter — LH — Rear	2M	WPT-314
	Speaker — Tweeter — RH — Front	2M	WPT-314
	Speaker — Tweeter — RH — Rear	2M	WPT-314
1998	Switch — A/C Compressor Clutch Cycling	4F	WPT-169
1995-94	Switch — A/C Compressor Clutch Cycling	2M	WPT-438

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
LINCOLN — Cont'd			
Mark — Cont'd			
1998	Switch — A/C Pressure Cut Off	4F	WPT-169
1998-93	Switch — Air Suspension	3M	WPT-617
1998-95	Switch — Brake Pressure	2M	WPT-260
1995-94	Switch — Cold Engine Lockout	1M	WPT-476
	Switch — Coolant Temperature Sending Unit	1M	WPT-476
1998-93	Switch — Courtesy Lamp	3F	WPT-213
	Switch — Deck Lid / Hatch Release	2M	WPT-478
	Switch — Decklid / Liftgate (Anti-theft)	2M	WPT-715
1998-97	Switch — Dimmer	9M	WPT-238
1998-95	Switch — Door Ajar / Interior Lamp	2M	WPT-146
1998-97	Switch — Door Lock (LH)	7F	WPT-400
1996-93	Switch — Door Lock (LH)	5M	WPT-423
1998-97	Switch — Door Lock (RH)	7F	WPT-400
1995-93	Switch — Door Lock (RH)	5M	WPT-483
1998-93	Switch — Fuel Filler Door	2M	WPT-370
1998-97	Switch — Headlamp	12M	WPT-463
1998-93	Switch — Heated Back Light (Rear Defrost)	5M	WPT-377
	Switch — Hood Ajar	4M	WPT-152
1996-93	Switch — Ignition	16M	WPT-577
1998-93	Switch — Inertia	3M	WPT-446
1998-97	Switch — Message Center	8M	WPT-217
1998-93	Switch — Message Center	16M	WPT-341
	12M	WPT-613
1996-93	Switch — Message Center	8M	WPT-215
	Switch — Multi Function	7F	WPT-179
1994-93	Switch — Multi Function	11M	WPT-178
1998-94	Switch — Oil Sending Unit	1M	WPT-616
1998	Switch — Power Mirror	10F	WPT-640
1995-93	Switch — Power Mirror	8M	WPT-366
1998	Switch — Power Window — Driver	4F	WPT-669
1998-93	Switch — Power Window — Driver	14M	WPT-482
	Switch — Power Window — Passenger (Front)	7M	WPT-588
1998-97	Switch — Seat (Driver)	12M	WPT-463
1996-95	Switch — Seat (Driver)	12M	WPT-626
1993	Switch — Seat (Driver)	12M	WPT-626
1998-97	Switch — Seat Lumbar	5M	WPT-387
1998-93	Switch — Stop Lamp	2M	WPT-197
1995-93	Switch — Traction Control	5M	WPT-515
1998-94	Terminal — Rear Window Defroster Grid	1F	WPT-371
1998	Test Connector — Diagnostic	16F	WPT-615
1998-97	Transceiver — Cell Phone	12F	WPT-647
1998-96	Valve — Vapor Management	2M	WPT-545
Town Car			
1999-94	AC Compressor Clutch	2M	WPT-173
2002-98	Actuator — Door Lock — Decklid/Liftgate	3M	WPT-446
1997-90	Actuator — Door Lock — Decklid/Liftgate	5M	WPT-771
2004-98	Actuator — Door Lock — LH — Front	2M	WPT-312
2004-95	Actuator — Door Lock — LH — Rear	2M	WPT-312
2004-98	Actuator — Door Lock — RH — Front	2M	WPT-312
2004-95	Actuator — Door Lock — RH — Rear	2M	WPT-312
1999	Actuator — Electronic Variable Orifice (EVO)	2M	WPT-146
2005-95	Actuator — Speed Control	10M	WPT-762
1999-98	Alternator	3M	WPT-118
1995	Alternator	1M	WPT-851
2004-98	Bulkhead — Transmission — In-line (Male)	7F	WPT-567
2003-98	CD Changer	12M	WPT-164
1995-93	Capacitor — Ignition / Radio	1M	WPT-352
2003	Cell Phone/Cell Phone Antenna — inline	14M	WPT-666
2004-03	Cigar Lighter	3F	WPT-329
2004-95	Cigar Lighter	1M	WPT-476

WIRING PIGTAIL KITS

PASSENGER CAR



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
LINCOLN — Cont'd			
Town Car — Cont'd			
2004-03	Clock	6M	WPT-276
1997-95	Clock	8F	WPT-100
1995-94	Coil — Ignition	3M	WPT-526
2002-95	Control Head — Electronic Automatic Temperature (EATC)	13F	WPT-176
2004	Element — Heated Back Window	1M	WPT-352
2003	Element — Heated Back Window With Dual Zone Automatic Temperature Control AC	1M	WPT-352
2005-98	Element — Heated Seat	4M	WPT-307
1998-93	Fuel Injector	2M	WPT-372
2004-03	Fuel Pump / Sending Unit	10M	WPT-504
2003-99	Fuel Pump / Sending Unit	8M	WPT-172
1995	Fuel Pump / Sending Unit	4M	WPT-152
2002	Horn	2F	WPT-815
2001-98	Horn	2M	WPT-372
2004-98	Instrument Cluster Type - A; Square; Color - Black	12F	WPT-673
	Type - B; Square; Color - Gray	12F	WPT-637
2002-98	Junction Box — Relay	20F	WPT-180
1998-95	Lamp — CHMSL (Center High Mount Stop Lamp)	2F	WPT-194
2004-98	Lamp — Courtesy — Door	2M	WPT-314
1997-95	Lamp — Courtesy — Door	2F	WPT-356
2004-98	Lamp — Courtesy — Footwell	2F	WPT-356
2001-98	Lamp — Dome	6F	WPT-502
2003	Lamp — Fog / Driving	2M	WPT-148
2003-98	Lamp — Front Cornering / Turn	3M	WPT-105
2001	Lamp — Front Cornering / Turn	3N/A	WPT-151
2003-98	Lamp — Front Turn/Marker	3M	WPT-109
2003	Lamp — Headlamp High Beam	2M	WPT-148
2001-00	Lamp — Headlamp High/Low Beam	3M	WPT-110
1998-95	Lamp — Headlamp High/Low Beam	3M	WPT-110
2001-98	Lamp — Park/Turn/Stop	3N/A	WPT-151
1997-95	Lamp — Park/Turn/Stop	3F	WPT-442
2003-98	Lamp — Reverse	3M	WPT-106
1997-95	Lamp — Reverse	3M	WPT-105
2003	Lamp — Side Marker	2F	WPT-150
1997-94	Lamp — Stop / Park	2M	WPT-460
2004-00	Lamp — Storage Compartment — Trunk	2F	WPT-316
1999-98	Lamp — Storage Compartment — Trunk	2M	WPT-355
1997-95	Lamp — Storage Compartment — Trunk	2M	WPT-4951
2004-03	Lamp — Under Hood	2F	WPT-150
2002-00	Lamp — Under Hood	2M	WPT-4951
1996-95	Lamp — Under Hood	2M	WPT-4951
2004-98	Mirror — Rearview (Electrochromatic)	6M	WPT-193
2002-98	Mirror — Sideview / Heated	6F	WPT-599
	10F	WPT-825
1997-95	Mirror — Sideview / Heated	10M	WPT-504
2004-01	Mirror — Vanity	2M	WPT-272
1998	Mirror — Vanity	2M	WPT-272
2004-01	Module — Adjustable Pedal Memory	3M	WPT-241
2003-02	Module — Air Suspension	12F	WPT-647
2004-03	Module — Auto Lamps	6F	WPT-502
2002-98	Module — Auto Lamps	6M	WPT-246
1997-95	Module — Auto Lamps	5M	WPT-300
	Module — Daytime Running Lamp (DRL)	8M	WPT-298
2004-00	Module — Drivers Door	4F	WPT-574
1999-98	Module — Drivers Door	4F	WPT-411
2004-03	Module — Heated Seat (Drivers)	12F	WPT-503
2002-98	Module — Heated Seat (Drivers)	14M	WPT-608
2002-00	Module — Heated Seat (Passenger)	14M	WPT-608
2004-03	Module — Isolator Antenna	1M	WPT-700
2003-98	Module — Isolator Antenna	1F	WPT-371

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
LINCOLN — Cont'd			
Town Car — Cont'd			
2004-98	Module — Lighting Control	12F	WPT-647
1997-95	Module — Lighting Control	16M	WPT-242
	2M	WPT-374
2004-03	Module — Power Decklid	12F	WPT-396
	4F	WPT-408
2004-98	Module — Power Moonroof	6M	WPT-375
2004	Module — Remote Keyless Entry	8M	WPT-737
2000-99	Module — Remote Keyless Entry	8M	WPT-737
2004-03	Module — Reverse Park Aid (RPA)	12F	WPT-673
2001-00	Module — Seat Memory	16M	WPT-632
2001-95	Module — Seat Memory	2M	WPT-374
2003-98	Module — Variable Speed Blower Controller	5F	WPT-153
2002-99	Module — Wiper Control	14M	WPT-331
2004-01	Motor — Adjustable Pedal	2M	WPT-370
2003	Motor — Air Suspension Compressor	4F	WPT-171
2002-98	Motor — Air Suspension Compressor	4F	WPT-756
2003	Motor — Deck Lid / Lift Gate	2F	WPT-161
2002-00	Motor — Engine Cooling Fan	4F	WPT-171
1999-98	Motor — Engine Cooling Fan	3F	WPT-168
2004-98	Motor — Fuel Filler Door	2M	WPT-370
	Motor — Heater/ AC Blend Door	6F	WPT-502
1997-95	Motor — Heater/ AC Blend Door	8F	WPT-100
2004-98	Motor — Idle Air Control	2M	WPT-357
1995-93	Motor — Idle Air Control	2M	WPT-684
2004-95	Motor — Power Window — LH — Front	2F	WPT-484
	Motor — Power Window — LH — Rear	2F	WPT-484
	Motor — Power Window — RH — Front	2F	WPT-484
	Motor — Power Window — RH — Rear	2F	WPT-484
2004	Motor — Seat Lumbar	2F	WPT-473
1998	Motor — Seat Lumbar	2M	WPT-374
2004-98	Motor — Seat Recline	2M	WPT-370
	Motor — Windshield Washer Fluid Pump	2M	WPT-357
2005-03	Motor — Windshield Wiper	12F	WPT-850
2004-03	Overhead Console — In-line (Female)	16F	WPT-201
2005	Power Point	3F	WPT-682
2004-95	Power Point	2M	WPT-355
2004-03	Radio	8F	WPT-219
	16F	WPT-221
2002-98	Radio	8F	WPT-185
	16F	WPT-186
	20F	WPT-184
1997-95	Radio — Amplifier	2M	WPT-478
	Relay — Trailer Tow	5M	WPT-638
2002-98	Sensor — Air Charge Temperature	2M	WPT-420
2004-03	Sensor — Air Suspension — RH — Rear	3F	WPT-525
2004-95	Sensor — Ambient Temp	2M	WPT-437
2004-98	Sensor — Brake Fluid Level	3M	WPT-118
1997-95	Sensor — Brake Fluid Level	3M	WPT-4591
2004-01	Sensor — Cam Shaft Position	2F	WPT-759
2000-98	Sensor — Catalyst Monitor	4M	WPT-112
2004-98	Sensor — Coolant Temperature	2M	WPT-431
1995-93	Sensor — Coolant Temperature	2M	WPT-437
2004-01	Sensor — Crank Shaft Position	2F	WPT-759
1999-98	Sensor — Crank Shaft Position	2F	WPT-579
1995	Sensor — Crank Shaft Position	2F	WPT-579
2004-98	Sensor — Cylinder Head Temperature	2M	WPT-338
2004-03	Sensor — Delta Pressure Feedback EGR	6F	WPT-435
2002-01	Sensor — Delta Pressure Feedback EGR	3F	WPT-393
2000-98	Sensor — Delta Pressure Feedback EGR	3F	WPT-188
1994-93	Sensor — Delta Pressure Feedback EGR	3M	WPT-458
2004-03	Sensor — EATC In Car Temperature	2F	WPT-294

WIRING PIGTAIL KITS

PASSENGER CAR



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
LINCOLN — Cont'd			
Town Car — Cont'd			
2002-95	Sensor — EATC In Car Temperature	2M	WPT-486
1999	Sensor — Knock	4F	WPT-390
2004-98	Sensor — Mass Air Flow	6M	WPT-102
1995	Sensor — Mass Air Flow	6M	WPT-102
2001-98	Sensor — Memory Seat (Horizontal)	3M	WPT-241
2004-98	Sensor — Memory Seat (Recline)	3M	WPT-241
2001-95	Sensor — Memory Seat Track Position	3M	WPT-241
1999-98	Sensor — O2 (HEGO/EGO)	4M	WPT-111
2004-03	Sensor — Reverse Park Aid (RPA)	3F	WPT-223
2002-98	Sensor — Steering Rotation	4M	WPT-417
	Sensor — Sunload	2M	WPT-314
1999-98	Sensor — Throttle Position	3F	WPT-170
1994-93	Sensor — Throttle Position	3M	WPT-445
2003-98	Sensor — Transmission Range	12M	WPT-806
1997-95	Sensor — Transmission Range	8M	WPT-389
2004-98	Sensor — Washer Fluid Level	2M	WPT-684
1997-95	Solenoid — Brake Shift Park Interlock	3M	WPT-210
2004-98	Solenoid — Canister Vent	2M	WPT-322
1994-93	Solenoid — Canister Vent	2M	WPT-441
2004-98	Solenoid — EGR Vacuum Regulator	2M	WPT-359
1997-95	Solenoid — EGR Vacuum Regulator	2M	WPT-374
1998-95	Speaker — Door (Front)	2M	WPT-416
2004-99	Speaker — Door (Rear)	2F	WPT-373
1998-95	Speaker — Door (Rear)	2M	WPT-416
2004-99	Speaker — Rear	2F	WPT-373
1998	Speaker — Rear	2M	WPT-416
2004-98	Speaker — Subwoofer	10M	WPT-667
2004-02	Switch — A/C Compressor Clutch Cycling	4F	WPT-169
1997-95	Switch — A/C Compressor Clutch Cycling	4F	WPT-169
2003-02	Switch — A/C Pressure Cut Off	4F	WPT-169
2000-98	Switch — A/C Pressure Cut Off	4M	WPT-303
1997-95	Switch — A/C Pressure Cut Off	4F	WPT-169
2004-02	Switch — Adjustable Pedal	7M	WPT-578
2004-98	Switch — Air Suspension	3M	WPT-617
	Switch — Brake Deactivation	2F	WPT-195
1997-95	Switch — Brake Pressure	2M	WPT-232
2002-98	Switch — Deck Lid / Hatch Release	2M	WPT-478
1995	Switch — Deck Lid / Hatch Release	2M	WPT-478
2004-00	Switch — Deck Lid / Lift Gate Ajar	3M	WPT-446
1999-98	Switch — Deck Lid / Lift Gate Ajar	2M	WPT-370
2004-03	Switch — Dimmer	6F	WPT-502
2002-98	Switch — Dimmer	8M	WPT-283
2004-03	Switch — Door Ajar / Interior Lamp	1M	WPT-378
1997-95	Switch — Door Ajar / Interior Lamp	2F	WPT-342
2004-03	Switch — Door Lock (LH)	8F	WPT-485
2002-98	Switch — Door Lock (LH)	7F	WPT-814
2004-03	Switch — Door Lock (RH)	8F	WPT-485
2002-98	Switch — Door Lock (RH)	7F	WPT-814
	Switch — Fuel Filler Door	2M	WPT-370
1997-95	Switch — Gear Shift Select / Neutral Safety	8M	WPT-389
2003	Switch — Headlamp	10F	WPT-156
2002-98	Switch — Headlamp	12M	WPT-463
2004	Switch — Heated Seat — LH — Front	8F	WPT-628
2003	Switch — Heated Seat — LH — Front	6F	WPT-649
2002-98	Switch — Heated Seat — LH — Front	8F	WPT-628
1997-95	Switch — Heated Seat — LH — Front	8M	WPT-652
2002-00	Switch — Heated Seat — LH — Rear	8F	WPT-628
2004-98	Switch — Heated Seat — RH — Front	8F	WPT-628
1997-95	Switch — Heated Seat — RH — Front	8M	WPT-652
	Switch — Hood Ajar	4M	WPT-152
2004-03	Switch — Horn	8F	WPT-227

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
LINCOLN — Cont'd			
Town Car — Cont'd			
2004-03	Switch — Ignition	16M	WPT-577
2002-95	Switch — Ignition	15M	WPT-475
2004-95	Switch — Inertia	3M	WPT-446
2004-01	Switch — Keyless Entry	8F	WPT-833
2004-98	Switch — Message Center	6F	WPT-502
1997-95	Switch — Message Center	8M	WPT-283
2004-98	Switch — Moon Roof/ Sun Roof	5M	WPT-527
1997-95	Switch — Moon Roof/ Sun Roof	2M	WPT-314
2004-03	Switch — Multi Function	6F	WPT-440
	10F	WPT-501
	12F	WPT-503
2003-98	Switch — Multi Function	11M	WPT-178
1997-95	Switch — Multi Function	11M	WPT-813
2005	Switch — Oil Sending Unit Less Engine Oil Cooler	1M	WPT-439
2004-00	Switch — Oil Sending Unit	1M	WPT-439
1999-93	Switch — Oil Sending Unit	1M	WPT-616
2004-95	Switch — Overdrive Cancel	2F	WPT-226
2004-03	Switch — Park Brake	2F	WPT-479
2001-98	Switch — Park Brake	1M	WPT-488
2003	Switch — Power Mirror	8F	WPT-117
2002-98	Switch — Power Mirror	10F	WPT-640
1997-95	Switch — Power Mirror	8M	WPT-313
2004-03	Switch — Power Window — Driver	8F	WPT-655
2002-98	Switch — Power Window — Driver Rear	7F	WPT-496
	Front	7F	WPT-606
1997-95	Switch — Power Window — Driver	5M	WPT-528
2004-03	Switch — Power Window — Driver (Lockout) (421)	8F	WPT-561
2000-98	Switch — Power Window — LH — Rear	6M	WPT-375
2004-03	Switch — Power Window — Passenger (Front)	8F	WPT-655
2002-98	Switch — Power Window — Passenger (Front)	7F	WPT-400
1997-95	Switch — Power Window — RH — Rear	5M	WPT-528
2004-00	Switch — Redundant Radio Control	5M	WPT-705
2004-03	Switch — Seat (Driver)	16F	WPT-689
2004-98	Switch — Seat (Driver)	14M	WPT-296
2003	Switch — Seat (Driver)	12F	WPT-691
2001-99	Switch — Seat (Driver)	12M	WPT-626
2004-03	Switch — Seat (Passenger)	12F	WPT-691
	Switch — Seat Lumbar	8M	WPT-399
1997-95	Switch — Seat Lumbar	2F	WPT-544
2004-03	Switch — Speed Control	8F	WPT-227
2004-98	Switch — Speed Control Deactivation	2F	WPT-195
2004-95	Switch — Stop Lamp	2M	WPT-197
2005-03	Switch — Traction Control	7M	WPT-839
2002-01	Switch — Traction Control	7F	WPT-821
2004-03	Terminal — Rear Window Defroster Grid	1F	WPT-371
2004-98	Test Connector — Diagnostic	16F	WPT-615
	Transceiver — Cell Phone	12F	WPT-647
2004-03	Transceiver — Passive Anti-Theft (PATS)	4F	WPT-261
2002-98	Transceiver — Passive Anti-Theft (PATS)	4M	WPT-293
MERCURY			
Cougar			
2002-99	AC Compressor Clutch	2M	WPT-173
1997-96	Actuator — Electronic Variable Orifice (EVO)	14M	WPT-666
1997	Actuator — Speed Control	10M	WPT-762
2001-00	Alternator	3M	WPT-118
1999	Alternator 2.5L From 5/25/99	3M	WPT-118

WIRING PIGTAIL KITS

PASSENGER CAR



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
MERCURY — Cont'd			
Cougar — Cont'd			
1997	Alternator		
	4.6L	1M	WPT-851
	Capacitor — Ignition / Radio	1M	WPT-352
	Cigar Lighter	1M	WPT-476
	Coil — Ignition		
	4.6L	3M	WPT-526
	3.8L OHV	4M	WPT-511
2002-99	Fuel Injector		
	2.5L	2F	WPT-159
1997-95	Fuel Injector		
	3.8L, 4.6L	2M	WPT-372
2001-99	Horn	1M	WPT-461
1997	Horn	1M	WPT-378
	Instrument Cluster		
	Analog Plug B	16M	WPT-202
	Analog Plug A	16M	WPT-278
1997-96	Junction Box — Relay	10M	WPT-782
1997	Lamp — Ash Tray	2F	WPT-251
2001-99	Lamp — CHMSL (Center High Mount Stop Lamp)	2F	WPT-634
1997	Lamp — Courtesy — Footwell	2F	WPT-356
2002-01	Lamp — Fog / Driving	2F	WPT-107
2000	Lamp — Front Cornering / Turn	3M	WPT-105
2002-01	Lamp — Front Turn	3M	WPT-105
2000-99	Lamp — Front Turn/Marker	3M	WPT-108
1993-90	Lamp — Front Turn/Marker	3F	WPT-442
2002-99	Lamp — Headlamp High Beam	2F	WPT-107
2000-99	Lamp — Headlamp High/Low Beam	7M	WPT-596
1996-95	Lamp — Headlamp High/Low Beam	3M	WPT-110
1997-96	Lamp — Instrument	2M	WPT-597
1996	Lamp — License	2N/A	WPT-471
2002-99	Lamp — Park/Turn/Stop	3M	WPT-108
1997	Module — Auto Lamps	5M	WPT-300
	Module — Daytime Running Lamp (DRL)	8M	WPT-298
2001-99	Module — Drivers Door	4M	WPT-376
1997-96	Module — Variable Speed Blower Controller	5M	WPT-566
2002-99	Motor — Heater/ AC Blend Door	8F	WPT-100
	Motor — Windshield Wiper	5F	WPT-158
1997	Motor — Windshield Wiper	6M	WPT-297
2002-99	Radio	7M	WPT-154
	8M	WPT-155
1997-96	Relay — Flasher	3M	WPT-801
1997	Relay — Starter Motor	2M	WPT-428
2001-99	Resistor — Blower Motor (Front)	4M	WPT-480
	Sensor — Air Charge Temperature	2M	WPT-420
1997	Sensor — Ambient Temp	2M	WPT-437
	Sensor — Cam Shaft Position		
	3.8L	3M	WPT-196
2001-99	Sensor — Catalyst Monitor	4M	WPT-123
	Sensor — Coolant Temperature	2M	WPT-206
1997	Sensor — Coolant Temperature	2M	WPT-206
2001-99	Sensor — Crank Shaft Position		
	2.5L	2F	WPT-579
1999	Sensor — Crank Shaft Position		
	2.0L	2M	WPT-231
1997	Sensor — Crank Shaft Position	2F	WPT-579
2001-99	Sensor — Knock	2M	WPT-351
2001-00	Sensor — Mass Air Flow	6M	WPT-102
1999	Sensor — Mass Air Flow		
	Before 5/25/99	5M	WPT-686
	From 5/25/99	6M	WPT-102
1997	Sensor — Steering Rotation	4M	WPT-417

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
MERCURY — Cont'd			
Cougar — Cont'd			
1997	Sensor — Sunload	2M	WPT-314
2002-99	Sensor — Throttle Position	3F	WPT-170
1997	Sensor — Washer Fluid Level	2M	WPT-684
	Solenoid — Canister Vent	2M	WPT-441
	Solenoid — EGR Vacuum Regulator	2M	WPT-359
2001-99	Speaker — Door (Front)	2M	WPT-416
	Switch — A/C Pressure Cut Off	4M	WPT-303
1997	Switch — Dimmer	9M	WPT-238
2001-99	Switch — Door Ajar / Interior Lamp	2F	WPT-634
	Switch — Door Lock (LH)	7M	WPT-578
1997	Switch — Headlamp	8M	WPT-534
	Switch — Heated Back Light (Rear Defrost)	5M	WPT-377
	Switch — Heater A/C Temp Control w/ATC AC, w/Manual AC	3M	WPT-328
2001-99	Switch — Hood Ajar	2M	WPT-529
1997	Switch — Horn/Speed Controls/Radio Control — In-line (Female)	4M	WPT-543
1997-96	Switch — Ignition	16M	WPT-577
2001-99	Switch — Message Center	6M	WPT-276
	Switch — Oil Sending Unit	1M	WPT-413
1997	Switch — Oil Sending Unit	1M	WPT-616
2001-99	Switch — Power Mirror	8M	WPT-240
1997	Switch — Speed Control Deactivation	2F	WPT-340
2001-99	Switch — Stop Lamp	3M	WPT-4771
1997	Switch — Stop Lamp	2M	WPT-197
2002-99	Switch — Windshield Wiper/Washer	2F	WPT-812
1997-96	Test Connector — Diagnostic	16F	WPT-615
2001-99	Transceiver — Passive Anti-Theft (PATS)	4M	WPT-668
Grand Marquis			
2001-94	AC Compressor Clutch	2M	WPT-173
2004-95	Actuator — Door Lock — Decklid/Liftgate	3M	WPT-446
1993	Actuator — Door Lock — Decklid/Liftgate	3M	WPT-446
2004-03	Actuator — Door Lock — LH — Front	2M	WPT-312
2001-93	Actuator — Door Lock — LH — Front	2M	WPT-312
2004-03	Actuator — Door Lock — LH — Rear	2M	WPT-312
2001-93	Actuator — Door Lock — LH — Rear	2M	WPT-312
2003	Actuator — Door Lock — RH — Front	2M	WPT-312
2001-93	Actuator — Door Lock — RH — Front	2M	WPT-312
2004-03	Actuator — Door Lock — RH — Rear	2M	WPT-312
2001-93	Actuator — Door Lock — RH — Rear	2M	WPT-312
2002-96	Actuator — Electronic Variable Orifice (EVO)	2M	WPT-146
2000-98	Actuator — Electronic Variable Orifice (EVO)	14M	WPT-666
2005-93	Actuator — Speed Control	10M	WPT-762
1998	Alternator	3M	WPT-118
2004-98	Bulkhead — Transmission — In-line (Male)	7F	WPT-567
2004-93	CD Changer	14M	WPT-296
2002-98	CD Changer	12M	WPT-164
1997-92	Capacitor — Ignition / Radio	1M	WPT-352
2004-93	Cigar Lighter	1M	WPT-476
2003-93	Clock	8F	WPT-100
1997-94	Coil — Ignition	3M	WPT-526
2003-95	Control Head — Electronic Automatic Temperature (EATC)	13F	WPT-176
2004-03	Element — Heated Seat	4F	WPT-394
1995	Element — Heated Seat	4M	WPT-307
2004-01	Floor Shifter — In-line (Female)	4F	WPT-467
1998-92	Fuel Injector	2M	WPT-372
2003-97	Fuel Pump / Sending Unit	8M	WPT-172
1997	Fuel Pump / Sending Unit	4M	WPT-152
1994-93	Fuel Pump / Sending Unit	4M	WPT-454
2002-01	Horn	2F	WPT-815
2000-96	Horn	2M	WPT-372

WIRING PIGTAIL KITS

PASSENGER CAR



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
MERCURY — Cont'd			
Grand Marquis — Cont'd			
1995-92	Horn	1M	WPT-378
2004-00	Instrument Cluster		
	Analog Plug B	16M	WPT-202
2004-95	Instrument Cluster		
	Analog Plug A	16M	WPT-278
	Electronic	16M	WPT-341
2002-95	Instrument Cluster	12M	WPT-613
1996-95	Instrument Cluster		
	Analog Plug B	16M	WPT-202
1994-93	Instrument Cluster	14M	WPT-383
2002-93	Junction Box — Relay	17F	WPT-183
2004-98	Lamp — Ash Tray	2F	WPT-251
2004-03	Lamp — CHMSL (Center High Mount Stop Lamp)	2M	WPT-314
2001-93	Lamp — CHMSL (Center High Mount Stop Lamp)	2M	WPT-314
1996-95	Lamp — Courtesy — Door	2F	WPT-212
1994-93	Lamp — Courtesy — Door	2F	WPT-356
2004-03	Lamp — Courtesy — Footwell	2F	WPT-356
2004-99	Lamp — Courtesy — Reading (Rear)	3M	WPT-239
1993-92	Lamp — Courtesy — Reading (Rear)	3M	WPT-239
2004-99	Lamp — Dome/ Map	3M	WPT-4591
1998-96	Lamp — Dome/ Map	3M	WPT-446
1995	Lamp — Dome/ Map	3M	WPT-4591
1995-93	Lamp — Door Lock Cylinder	2F	WPT-783
2004-03	Lamp — Front Cornering / Turn	2F	WPT-823
	3M	WPT-109
2001-98	Lamp — Front Cornering / Turn	3M	WPT-105
2004-03	Lamp — Front Turn/Marker	3F	WPT-660
2003-98	Lamp — Front Turn/Marker	3M	WPT-109
1994-92	Lamp — Front Turn/Marker	3F	WPT-442
1997-93	Lamp — Headlamp High Beam	2F	WPT-107
1997-92	Lamp — Headlamp Low Beam	2F	WPT-248
2003-98	Lamp — Headlamp High/Low Beam	3M	WPT-110
2004-93	Lamp — Instrument	2M	WPT-597
1993	Lamp — License	2N/A	WPT-471
2004-98	Lamp — Park/Turn/Stop	3N/A	WPT-151
1996-95	Lamp — Park/Turn/Stop	3N/A	WPT-120
2004-95	Lamp — Reverse	2N/A	WPT-121
1994	Lamp — Reverse	2N/A	WPT-149
2003	Lamp — Side Marker	2F	WPT-150
2005-03	Lamp — Storage Compartment — Trunk	2F	WPT-316
2001-00	Lamp — Storage Compartment — Trunk	2F	WPT-316
1999-95	Lamp — Storage Compartment — Trunk	2M	WPT-355
2004-00	Lamp — Under Hood	2M	WPT-4951
1997-96	Lamp — Under Hood	2M	WPT-4951
1995	Lamp — Under Hood	2M	WPT-495
1995-93	Lamp — Under Hood	2M	WPT-370
2004-95	Mirror — Rearview (Electrochromatic)	6M	WPT-193
1993	Mirror — Rearview (Electrochromatic)	3M	WPT-584
2004-93	Mirror — Sideview	3F	WPT-409
2001-95	Mirror — Sideview / Heated	6F	WPT-599
2004-99	Mirror — Vanity	2F	WPT-479
1997-95	Mirror — Vanity	1F	WPT-562
1993-92	Mirror — Vanity	1F	WPT-562
1995	Module — Air Suspension		
	Left	13M	WPT-610
	Right	13M	WPT-627
2004-98	Module — Anti-theft	16F	WPT-645
2005-03	Module — Auto Lamps	6F	WPT-502
2002-98	Module — Auto Lamps	6M	WPT-246
1997-93	Module — Auto Lamps	5M	WPT-300
2005-99	Module — Daytime Running Lamp (DRL)	6F	WPT-455

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
MERCURY — Cont'd			
Grand Marquis — Cont'd			
1998-93	Module — Daytime Running Lamp (DRL)	8M	WPT-298
2005-95	Module — Drivers Door	12M	WPT-463
2004	Module — Drivers Door	4M	WPT-103
2003	Module — Drivers Door	5M	WPT-377
2002	Module — Drivers Door	4M	WPT-103
2001-93	Module — Drivers Door	5M	WPT-377
2004-03	Module — EGR System	6F	WPT-435
	Module — Heated Seat (Drivers)	12F	WPT-503
1998-93	Module — Ignition	12M	WPT-583
2004-95	Module — Lighting Control		
	Right Lower	16M	WPT-242
	Left Upper	16M	WPT-632
1997-95	Module — Lighting Control	2M	WPT-374
2004-95	Module — Radio Power Antenna	1M	WPT-407
2000-96	Module — Remote Keyless Entry	8M	WPT-737
1995-93	Module — Remote Keyless Entry	8F	WPT-679
1994-93	Module — Remote Keyless Entry		
	Left	13M	WPT-612
	Right	13M	WPT-625
		16M	WPT-632
1995	Module — Seat Memory	2M	WPT-374
1997-92	Module — Variable Assist Power Steering (VAPS)	14M	WPT-666
2003-98	Module — Variable Speed Blower Controller	5F	WPT-153
2004-93	Module — Wiper Control	14M	WPT-666
2003	Motor — Adjustable Pedal	2M	WPT-370
2001-00	Motor — Adjustable Pedal	2M	WPT-370
2003-93	Motor — Air Suspension Compressor	4F	WPT-171
2004-03	Motor — Engine Cooling Fan	4M	WPT-750
2002-00	Motor — Engine Cooling Fan	4F	WPT-171
2000-98	Motor — Engine Cooling Fan	3F	WPT-168
1997-95	Motor — Engine Cooling Fan		
	w/AC	2F	WPT-361
2003	Motor — Fuel Filler Door	2M	WPT-370
2001-00	Motor — Fuel Filler Door	2M	WPT-370
1997-93	Motor — Fuel Filler Door	2M	WPT-370
2004-95	Motor — Heater/ AC Blend Door	8F	WPT-100
1994-93	Motor — Heater/ AC Blend Door	8F	WPT-117
2003-96	Motor — Idle Air Control	2M	WPT-357
1994-92	Motor — Idle Air Control	2M	WPT-684
2003	Motor — Power Window — LH — Front	2F	WPT-484
2001-95	Motor — Power Window — LH — Front	2F	WPT-484
2004-03	Motor — Power Window — LH — Rear	2F	WPT-484
2001-98	Motor — Power Window — LH — Rear	2F	WPT-484
2003	Motor — Power Window — RH — Front	2F	WPT-484
2001-95	Motor — Power Window — RH — Front	2F	WPT-484
2003	Motor — Power Window — RH — Rear	2F	WPT-484
2001-95	Motor — Power Window — RH — Rear	2F	WPT-484
1995-93	Motor — Radio Power Antenna	2N/A	WPT-471
2000-95	Motor — Seat Lumbar	2M	WPT-374
1994-93	Motor — Seat Lumbar	2M	WPT-478
2004-95	Motor — Seat Recline	2M	WPT-370
2004-00	Motor — Windshield Washer Fluid Pump	2M	WPT-357
1999-92	Motor — Windshield Washer Fluid Pump	2M	WPT-355
2005-03	Motor — Windshield Wiper	12F	WPT-850
2002-95	Motor — Windshield Wiper	7M	WPT-175
1994-93	Motor — Windshield Wiper	3M	WPT-333
2003-02	Overhead Console — In-line (Female)	12F	WPT-591
2004-00	Power Point	2M	WPT-355
1997-95	Power Point	2M	WPT-355
1996-95	Processor — Radio Audio Signal Control Unit	14M	WPT-296
2004-03	Radio	8F	WPT-219

WIRING PIGTAIL KITS

PASSENGER CAR



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
MERCURY — Cont'd			
Grand Marquis — Cont'd			
2004-03	Radio — Cont'd	16F	WPT-221
2003-98	Radio	8F	WPT-185
2002-98	Radio	16F	WPT-186
	20F	WPT-184
1997-95	Radio	8M	WPT-730
2004-95	Radio — Amplifier	6M	WPT-375
1995	Radio — Amplifier	2M	WPT-478
1997-93	Relay — Headlamp	6M	WPT-761
1995	Relay — Starter Motor	1M	WPT-378
1994-93	Relay — Starter Motor	1F	WPT-371
2004-03	Resistor — Blower Motor (Front)	4M	WPT-114
2002-95	Sensor — Air Charge Temperature	2M	WPT-420
1994-93	Sensor — Air Charge Temperature	2M	WPT-428
2004-98	Sensor — Air Suspension — RH — Rear	3F	WPT-525
2004-93	Sensor — Ambient Temp	2M	WPT-437
2003-97	Sensor — Brake Fluid Level	3M	WPT-118
1996-95	Sensor — Brake Fluid Level	3M	WPT-4591
1994-93	Sensor — Brake Fluid Level	2M	WPT-372
	3M	WPT-446
2003-00	Sensor — Cam Shaft Position	2F	WPT-759
1999	Sensor — Cam Shaft Position	2F	WPT-579
2004-98	Sensor — Coolant Temperature	2M	WPT-431
1997-96	Sensor — Coolant Temperature	2M	WPT-206
1995-92	Sensor — Coolant Temperature	2M	WPT-437
2004-00	Sensor — Crank Shaft Position	2F	WPT-759
1999-95	Sensor — Crank Shaft Position	2F	WPT-579
2004-98	Sensor — Cylinder Head Temperature		
	4.6L	2M	WPT-338
2003	Sensor — Delta Pressure Feedback EGR	6F	WPT-435
2002	Sensor — Delta Pressure Feedback EGR	3F	WPT-393
2000-96	Sensor — Delta Pressure Feedback EGR	3F	WPT-188
1994-92	Sensor — Delta Pressure Feedback EGR	3M	WPT-458
2004	Sensor — EATC In Car Temperature	2M	WPT-420
2003	Sensor — EATC In Car Temperature		
	In Plenum Chamber	2M	WPT-420
	In Instrument Panel	2M	WPT-486
2002-95	Sensor — EATC In Car Temperature	2M	WPT-486
2003-98	Sensor — Fuel Rail Pressure	4F	WPT-169
2004-03	Sensor — Knock	2M	WPT-351
2004-95	Sensor — Mass Air Flow	6M	WPT-102
1994-93	Sensor — Mass Air Flow	4M	WPT-511
1995	Sensor — Memory Seat (Horizontal)	3M	WPT-241
	Sensor — Memory Seat (Recline)	3M	WPT-241
	Sensor — Memory Seat Track Position	3M	WPT-241
2001-98	Sensor — O ₂ (HEGO/EGO)		
	Gold Terminals / B Polarity	4M	WPT-111
1999-95	Sensor — O ₂ (HEGO/EGO)		
	Gold Terminals / A Polarity	4M	WPT-112
2004-97	Sensor — Steering Rotation	4M	WPT-417
1996-93	Sensor — Steering Rotation	4M	WPT-703
2004-95	Sensor — Sunload	2M	WPT-314
2003-97	Sensor — Throttle Position	3F	WPT-170
1994-92	Sensor — Throttle Position	3M	WPT-445
2004-98	Sensor — Transmission Range	12M	WPT-806
2004-93	Sensor — Washer Fluid Level	2M	WPT-684
	Solenoid — Brake Shift Park Interlock	3M	WPT-210
2004-97	Solenoid — Canister Vent	2M	WPT-322
1995-92	Solenoid — Canister Vent	2M	WPT-441
2003-96	Solenoid — EGR Vacuum Regulator	2M	WPT-359
1995-92	Solenoid — EGR Vacuum Regulator		
	4.6L SOHC	2M	WPT-374

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
MERCURY — Cont'd			
Grand Marquis — Cont'd			
1998-93	Speaker — Door (Front)	2M	WPT-416
2003	Speaker — Rear	2F	WPT-373
2001-99	Speaker — Rear	2F	WPT-373
1998-93	Speaker — Rear	2M	WPT-416
1997-96	Speaker — Subwoofer	2M	WPT-478
2003-02	Switch — A/C Compressor Clutch Cycling	4F	WPT-169
2002-01	Switch — A/C Pressure Cut Off	4F	WPT-182
2000-98	Switch — A/C Pressure Cut Off	4M	WPT-303
2003	Switch — Air Suspension	3M	WPT-617
2001-93	Switch — Air Suspension	3M	WPT-617
2002-93	Switch — Brake Pressure	2M	WPT-232
1997-96	Switch — Coolant Temperature Sending Unit	2M	WPT-431
1994-92	Switch — Coolant Temperature Sending Unit	1M	WPT-476
1995	Switch — Courtesy Lamp	1F	WPT-499
1994-93	Switch — Courtesy Lamp	3F	WPT-213
1999-95	Switch — Deck Lid / Lift Gate Ajar	2M	WPT-370
2004-95	Switch — Dimmer	8M	WPT-283
2004	Switch — Door Ajar / Interior Lamp	1M	WPT-378
2003	Switch — Door Ajar / Interior Lamp	1F	WPT-499
2001-93	Switch — Door Ajar / Interior Lamp	1F	WPT-499
2003	Switch — Door Lock (LH)	8F	WPT-485
	Switch — Door Lock (RH)	8F	WPT-485
1997-95	Switch — Gear Shift Select / Neutral Safety	8M	WPT-389
2004-95	Switch — Headlamp	12M	WPT-463
2003	Switch — Headlamp	10F	WPT-156
1996-93	Switch — Headlamp/Autolamp — In-line (Female)	3M	WPT-412
2000-95	Switch — Heated Back Light (Rear Defrost)	4M	WPT-293
1994-93	Switch — Heated Back Light (Rear Defrost)	5M	WPT-377
2004-03	Switch — Heated Seat — LH — Front	6F	WPT-649
2003-95	Switch — Heater / A/C Blower (Front)	4M	WPT-103
1994-93	Switch — Heater / A/C Blower (Front)	4M	WPT-398
2004-03	Switch — Heater A/C Temp Control w/ATC AC	3M	WPT-328
2004-95	Switch — Heater A/C Temp Control w/Manual AC	3M	WPT-328
1997-96	Switch — Heater A/C Temp Control w/ATC AC	4M	WPT-344
		3M	WPT-328
1995-93	Switch — Heater A/C Temp Control w/Manual A/C	4M	WPT-344
2004-03	Switch — Horn	8F	WPT-227
2004-01	Switch — Horn/Speed Controls/Radio Control — In-line (Female)	8F	WPT-227
2004-98	Switch — Ignition	15M	WPT-475
1997-94	Switch — Ignition	16M	WPT-577
2004-93	Switch — Inertia	3M	WPT-446
2004-01	Switch — Keyless Entry	8F	WPT-833
2004-95	Switch — Message Center	8M	WPT-283
2003	Switch — Multi Function	10F	WPT-501
		12F	WPT-503
2003-95	Switch — Multi Function	11M	WPT-178
2003-93	Switch — Multi Function	7F	WPT-179
1997-93	Switch — Multi Function	9M	WPT-611
2005	Switch — Oil Sending Unit 4.6L	1M	WPT-439
2004-00	Switch — Oil Sending Unit	1M	WPT-439
1999-92	Switch — Oil Sending Unit	1M	WPT-616
2004-95	Switch — Overdrive Cancel	2F	WPT-226
2003	Switch — Park Brake	2F	WPT-479
2004-03	Switch — Power Mirror	8M	WPT-313
2003	Switch — Power Mirror	3F	WPT-580
2001-95	Switch — Power Mirror	8M	WPT-313
1994-93	Switch — Power Mirror	3F	WPT-580

WIRING PIGTAIL KITS

PASSENGER CAR



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
MERCURY — Cont'd			
Grand Marquis — Cont'd			
2004	Switch — Power Window — Driver	5M	WPT-346
2003	Switch — Power Window — Driver	8F	WPT-655
2002-95	Switch — Power Window — Driver	5M	WPT-346
1994-93	Switch — Power Window — Driver	5M	WPT-528
2003	Switch — Power Window — Driver (Lockout) (421)	8F	WPT-561
2004-03	Switch — Power Window — LH — Rear	8F	WPT-655
2001-95	Switch — Power Window — LH — Rear	7M	WPT-588
2003	Switch — Power Window — Passenger (Front)	8F	WPT-655
2001-95	Switch — Power Window — Passenger (Front)	14F	WPT-402
1994-93	Switch — Power Window — Passenger (Front)	5M	WPT-346
2001-95	Switch — Power Window — RH — Rear	7M	WPT-588
1994-93	Switch — Power Window — RH — Rear	5M	WPT-528
	Switch — Radio Antenna	8F	WPT-100
2003	Switch — Seat (Driver)	12F	WPT-691
2001-96	Switch — Seat (Driver)	12M	WPT-626
1995	Switch — Seat (Driver)	8F	WPT-679
2003	Switch — Seat (Passenger)	12F	WPT-691
2002-95	Switch — Seat (Passenger)	12M	WPT-626
1997-95	Switch — Seat Lumbar	2F	WPT-544
2003	Switch — Speed Control Deactivation	2F	WPT-195
2001-98	Switch — Speed Control Deactivation	2F	WPT-195
2004-93	Switch — Stop Lamp	2M	WPT-197
2002-01	Switch — Traction Control	2M	WPT-370
2000-98	Switch — Traction Control	2M	WPT-4951
2001	Switch — Traction Control	7F	WPT-821
2004-95	Test Connector — Diagnostic	16F	WPT-615
2001-93	Test Connector — Diagnostic	6M	WPT-743
2005-03	Transceiver — Passive Anti-Theft (PATS)	4F	WPT-261
2002-98	Transceiver — Passive Anti-Theft (PATS)	4M	WPT-293
2004-03	Transceiver — Passive Anti-Theft (PATS) — In-line (Female)	4F	WPT-261
1997-96	Valve — Vapor Management	2M	WPT-545
Marauder			
2003	Sensor — Cam Shaft Position		
	DOHC	2F	WPT-759
	Sensor — Crank Shaft Position	2F	WPT-759
	Valve — Vapor Management	2M	WPT-545
Mystique			
1998-96	Actuator — Speed Control	10M	WPT-762
1997-95	Alternator	3M	WPT-535
1997-96	Coil — Ignition	3F	WPT-517
2000-99	Fuel Injector		
	2.5L	2F	WPT-159
2000-95	Fuel Injector		
	2.0L	2M	WPT-336
1998-95	Fuel Injector		
	2.5L	2M	WPT-336
2000-97	Lamp — Front Turn	3M	WPT-4771
1996-95	Sensor — Mass Air Flow	5M	WPT-686
	Switch — Backup Lamp		
	MT	5M	WPT-623
Sable			
1999-96	AC Compressor Clutch	2M	WPT-173
1995	AC Compressor Clutch		
	3.8L OHV	2M	WPT-416
1995-93	AC Compressor Clutch		
	3.0L OHV	2M	WPT-416
2004-00	Actuator — Door Lock — Decklid/Liftgate	2M	WPT-312
1998-96	Actuator — Door Lock — Decklid/Liftgate	2M	WPT-312
2004-00	Actuator — Door Lock — LH — Front	2M	WPT-312



WIRING PIGTAIL KITS PASSENGER CAR

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
MERCURY — Cont'd			
Sable — Cont'd			
1995-92	Actuator — Door Lock — LH — Front	2M	WPT-312
2004-96	Actuator — Door Lock — LH — Rear	2M	WPT-312
1995-92	Actuator — Door Lock — LH — Rear	2M	WPT-312
2004-00	Actuator — Door Lock — RH — Front	2M	WPT-312
2004-01	Actuator — Door Lock — RH — Rear	2M	WPT-312
1999-90	Actuator — Door Lock — RH — Rear	2M	WPT-312
2004-96	Actuator — Speed Control	10M	WPT-762
1995	Actuator — Speed Control	6M	WPT-375
2004-00	Alternator		
	12 Valve	3M	WPT-118
	24 Valve	3M	WPT-119
1999	Alternator		
	3.0L OHV	1M	WPT-852
1999-96	Alternator	3M	WPT-119
1995	Alternator	1M	WPT-851
1995-92	Amplifier — Speed Control	6M	WPT-268
2004-00	Bulkhead — Transmission — In-line (Female)	9F	WPT-570
1995-93	Bulkhead — Transmission — In-line (Female)	9F	WPT-570
	CD Changer	14M	WPT-296
2004-00	Capacitor — Ignition / Radio		
	DOHC	1M	WPT-352
2003-00	Capacitor — Ignition / Radio		
	OHV	1M	WPT-352
1995-94	Capacitor — Ignition / Radio	1M	WPT-352
1993	Capacitor — Ignition / Radio	1F	WPT-309
1995-93	Cigar Lighter	1M	WPT-476
	Clock	8F	WPT-100
2003-01	Coil — Ignition		
	OHV	4M	WPT-508
2000	Coil — Ignition		
	OHV	4M	WPT-511
1995-94	Control Head — Electronic Automatic Temperature (EATC)	13F	WPT-176
1993-92	Control Head — Electronic Automatic Temperature (EATC)		
	w/ATC AC	13M	WPT-308
1999	Fuel Injector		
	24 Valve	2F	WPT-159
1999-92	Fuel Injector		
	3.0L Spark Plug #2-#6	2M	WPT-260
1998	Fuel Injector		
	3.0L	2M	WPT-372
1997-96	Fuel Injector		
	3.0L 24 Valve	2M	WPT-336
1995-92	Fuel Injector		
	3.0L Spark Plug #1	2M	WPT-372
1995-90	Fuel Injector		
	3.8L	2M	WPT-372
2004-00	Fuel Pump / Sending Unit	10M	WPT-504
1995-93	Fuel Pump / Sending Unit	4M	WPT-454
1999-92	Horn	1M	WPT-378
2004-98	Instrument Cluster		
	Type - A (1); Rectangle; Color - White	16M	WPT-202
	Type - B (2); Rectangle; Color - Black	16M	WPT-278
2003-00	Lamp — Ash Tray	2F	WPT-251
1995-92	Lamp — Ash Tray	3F	WPT-348
2004-02	Lamp — CHMSL (Center High Mount Stop Lamp)		
	Sedan, Wagon Back Glass or Liftgate	4F	WPT-465
2003-00	Lamp — CHMSL (Center High Mount Stop Lamp)		
	For Vehicles With Lamp Located in the Spoiler	2M	WPT-529
2001-90	Lamp — CHMSL (Center High Mount Stop Lamp)		
	Sedan, Wagon Back Glass or Liftgate	2F	WPT-194
2004-96	Lamp — Courtesy — Door	2M	WPT-113

WIRING PIGTAIL KITS

PASSENGER CAR



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
MERCURY — Cont'd			
Sable — Cont'd			
1995-92	Lamp — Courtesy — Door	2F	WPT-212
1999-92	Lamp — Courtesy — Footwell	2F	WPT-356
1995-92	Lamp — Dimmer Switch	2F	WPT-342
2004-00	Lamp — Dome	3F	WPT-203
2003-01	Lamp — Fog / Driving	2M	WPT-122
2004-96	Lamp — Glove Box	2M	WPT-314
1995-92	Lamp — Headlamp Switch	2F	WPT-342
2000	Lamp — Headlamp- High/Low Beam	3M	WPT-301
1995-93	Lamp — Headlamp- High/Low Beam	3M	WPT-110
1995-92	Lamp — Instrument	2M	WPT-597
2003-00	Lamp — License		
	Sedan	2F	WPT-292
2000	Lamp — License		
	Wagon 4 Door	2F	WPT-292
1995-90	Lamp — License	2N/A	WPT-471
2004-00	Lamp — Map	3F	WPT-203
1995	Lamp — Map	2M	WPT-4951
2004-00	Lamp — PRDNL Indicator — Inline (Male)	2M	WPT-422
2000	Lamp — Park/Turn/Stop	3N/A	WPT-151
1995-93	Lamp — Park/Turn/Stop	3F	WPT-430
1999-96	Lamp — Rear Turn	3M	WPT-105
2004-01	Lamp — Reverse		
	DOHC, OHV	2M	WPT-773
1999-96	Lamp — Reverse		
	Wagon	3M	WPT-106
	Sedan 4 Door	3M	WPT-105
1995-93	Lamp — Side Marker	2N/A	WPT-471
1999-96	Lamp — Stop / Park	3M	WPT-108
2002-00	Lamp — Storage Compartment — Cargo	3F	WPT-203
2003-00	Lamp — Storage Compartment — Trunk	2M	WPT-355
1995-93	Lamp — Storage Compartment — Trunk	2M	WPT-370
1995	Lamp — Under Hood	2M	WPT-370
2004-02	Mirror — Sideview	8M	WPT-382
1995-92	Mirror — Sideview	3F	WPT-348
2004-00	Mirror — Vanity	2F	WPT-479
1998-94	Mirror — Vanity	1F	WPT-562
2004-00	Module — Auto Lamps	6F	WPT-502
1999-95	Module — Auto Lamps	5M	WPT-300
1999	Module — Daytime Running Lamp (DRL)	6F	WPT-455
1998-95	Module — Daytime Running Lamp (DRL)	8M	WPT-298
1995-92	Module — Drivers Door	5M	WPT-377
2003-00	Module — Flex Fuel Vehicle (FFV)	6M	WPT-281
1995-94	Module — Ignition		
	3.0L, 3.8L Type - not specified in connector print; Elliptical; Color - Green	6M	WPT-297
	Type - not specified in connector print; Elliptical; Color - Black	6M	WPT-514
1993	Module — Ignition		
	3.0L, 3.8L	6M	WPT-297
1995-93	Module — Radio Power Antenna	8F	WPT-100
	Module — Remote Keyless Entry		
	Left	13M	WPT-612
	Right	13M	WPT-625
	16M	WPT-632
2004-00	Module — Variable Speed Blower Controller	5M	WPT-566
1995-92	Module — Wiper Control	14M	WPT-666
2002-01	Motor — Adjustable Pedal		
	Sedan	2F	WPT-544
	Wagon	2F	WPT-783
2000	Motor — Adjustable Pedal	2F	WPT-544
2003-01	Motor — Engine Cooling Fan	3F	WPT-168
1997-94	Motor — Engine Cooling Fan		
	3.0L	3M	WPT-362



WIRING PIGTAIL KITS PASSENGER CAR

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
MERCURY — Cont'd			
Sable — Cont'd			
1996	Motor — Engine Cooling Fan 3.0L DOHC	3M	WPT-362
1995	Motor — Engine Cooling Fan 3.0L	3F	WPT-706
1995-93	Motor — Engine Cooling Fan 3.8L	3F	WPT-706
2004-96	Motor — Heater/ AC Blend Door	8F	WPT-100
1995-93	Motor — Heater/ AC Blend Door	8F	WPT-117
1995-92	Motor — Heater/ AC Blend Door	6M	WPT-592
2004-00	Motor — Idle Air Control	2M	WPT-357
1995-93	Motor — Idle Air Control	2M	WPT-684
1992	Motor — Idle Air Control 3.0L OHV	2M	WPT-684
2002-00	Motor — Moon Roof / Sun Roof	6M	WPT-375
2004-97	Motor — Power Seat Track	6F	WPT-599
2004-96	Motor — Power Window — LH — Front	2F	WPT-520
1995-92	Motor — Power Window — LH — Front	2F	WPT-484
2004-96	Motor — Power Window — LH — Rear	2F	WPT-520
1995	Motor — Power Window — LH — Rear	2F	WPT-466
2004-96	Motor — Power Window — RH — Front	2F	WPT-520
2004-01	Motor — Power Window — RH — Rear	2F	WPT-520
1999-96	Motor — Power Window — RH — Rear	2F	WPT-520
1995	Motor — Power Window — RH — Rear	2F	WPT-466
2004-96	Motor — Radio Power Antenna	4F	WPT-234
2004	Motor — Rear Window Washer Fluid Pump Wagon 4 Door	2M	WPT-357
2002	Motor — Rear Window Washer Fluid Pump Wagon 4 Door	2M	WPT-357
2001-96	Motor — Rear Window Washer Fluid Pump Wagon 4 Door	2M	WPT-355
2004-95	Motor — Rear Window Wiper Wagon 4 Door	3M	WPT-4591
1999-97	Motor — Seat Lumbar	2M	WPT-374
1995	Motor — Seat Lumbar	2M	WPT-374
1994	Motor — Seat Lumbar	2F	WPT-473
1993	Motor — Seat Lumbar	2M	WPT-374
2004-00	Motor — Windshield Washer Fluid Pump	2M	WPT-357
1996	Motor — Windshield Washer Fluid Pump	2M	WPT-355
1995-93	Motor — Windshield Washer Fluid Pump	2M	WPT-288
2003-01	Motor — Windshield Wiper	5F	WPT-158
1995	Motor — Windshield Wiper	7M	WPT-175
1993-92	Motor — Windshield Wiper	3M	WPT-333
2003-00	Power Point	3F	WPT-329
1999-97	Power Point	2M	WPT-355
2000	Pump — Exhaust Air Supply	2F	WPT-361
1999-98	Radio 8 Pin	8M	WPT-624
1997-96	Radio	8M	WPT-624
1995-92	Radio	2M	WPT-247
	8M	WPT-696
1995	Radio — Amplifier	4F	WPT-457
2004-00	Radio — Rear Audio Control Wagon 4 Door	14M	WPT-296
2003-00	Radio — Rear Audio Control Sedan	14M	WPT-296
1993-92	Relay — Flasher	3M	WPT-801
1995-92	Relay — Oil Level	5M	WPT-515
1995-94	Relay — Starter Motor	1F	WPT-371
1995-93	Relay — Starter Motor 3.0L OHV	1M	WPT-378

WIRING PIGTAIL KITS

PASSENGER CAR



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
MERCURY — Cont'd			
Sable — Cont'd			
1993	Relay — Starter Motor 3.8L OHV	1M	WPT-378
1999-96	Resistor — Blower Motor (Front)	4F	WPT-115
1995	Resistor — Blower Motor (Front)	4M	WPT-114
2004-02	Resistor — Fan Dropping	2F	WPT-778
2001	Resistor — Fan Dropping	2M	WPT-428
2001-00	Resistor — Fan Dropping	2F	WPT-361
1997-93	Resistor — Fan Dropping	2M	WPT-428
1999	Sensor — Air Charge Temperature	2M	WPT-420
1995-93	Sensor — Air Charge Temperature 3.8L OHV	2M	WPT-428
1995-92	Sensor — Air Charge Temperature 3.0L OHV	2M	WPT-428
2003-00	Sensor — Ambient Temp OHV	2M	WPT-437
1996-93	Sensor — Ambient Temp	2M	WPT-437
2003-01	Sensor — Brake Fluid Level	3M	WPT-118
1996-95	Sensor — Brake Fluid Level	3M	WPT-4591
2004-01	Sensor — Cam Shaft Position	2F	WPT-759
2003-00	Sensor — Coolant Temperature 3.0L	2M	WPT-206
1995-94	Sensor — Coolant Temperature 3.0L	2M	WPT-437
1995-93	Sensor — Coolant Temperature	2M	WPT-437
2004-01	Sensor — Crank Shaft Position	2F	WPT-759
2000	Sensor — Crank Shaft Position DOHC, OHV	2F	WPT-579
	OHV	2F	WPT-579
1999	Sensor — Crank Shaft Position OHV	2F	WPT-579
1998-97	Sensor — Crank Shaft Position	2F	WPT-579
2004-02	Sensor — Delta Pressure Feedback EGR	3F	WPT-393
2000-96	Sensor — Delta Pressure Feedback EGR	3F	WPT-188
1995-93	Sensor — Delta Pressure Feedback EGR 3.8L OHV	3M	WPT-458
1995-92	Sensor — Delta Pressure Feedback EGR 3.0L OHV	3M	WPT-458
2004-00	Sensor — EATC In Car Temperature	3M	WPT-4591
1995	Sensor — EATC In Car Temperature	3M	WPT-4591
2004-03	Sensor — Fuel Rail Pressure 3.0L OHV	3M	WPT-777
2004-02	Sensor — Fuel Rail Pressure 3.0L DOHC	3M	WPT-777
2004	Sensor — Intake Manifold Runner Control	2M	WPT-545
2004-02	Sensor — Knock	2F	WPT-490
2004-00	Sensor — Knock	2M	WPT-351
1998	Sensor — Knock	2M	WPT-410
1995-94	Sensor — Knock	2M	WPT-462
2004-96	Sensor — Low Coolant	2M	WPT-372
1999-96	Sensor — Mass Air Flow	6M	WPT-102
1995-93	Sensor — Mass Air Flow 3.0L OHV	4M	WPT-511
1993	Sensor — Mass Air Flow 3.8L OHV	4M	WPT-511
2004-02	Sensor — Memory Seat Track Position	3M	WPT-290
2000	Sensor — O2 (HEGO/EGO) Type - D; Round; Color - Green	4M	WPT-123
1999-96	Sensor — O2 (HEGO/EGO) Type - A; Round; Color - Blue	4M	WPT-112
1995	Sensor — O2 (HEGO/EGO) 3.0L OHV	4M	WPT-818

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
MERCURY — Cont'd			
Sable — Cont'd			
1995	Sensor — Oil Level	1M	WPT-237
1994-93	Sensor — Oil Level 3.0L	1M	WPT-237
2004	Sensor — Power Steering Pressure	4F	WPT-808
2001-00	Sensor — Power Steering Pressure	4F	WPT-169
2004-02	Sensor — Seat Track Position	2F	WPT-490
1997-96	Sensor — Throttle Position	3F	WPT-170
1995-92	Sensor — Throttle Position	3M	WPT-445
2005-00	Sensor — Transmission Range	12M	WPT-803
1999-98	Sensor — Transmission Range	12M	WPT-806
1995	Sensor — Transmission Range AT 4 Spd AX4N	8M	WPT-389
1995-94	Sensor — Transmission Range AT 4 Spd AX4S High Altitude	8M	WPT-389
1993	Sensor — Transmission Range	8M	WPT-389
1996-93	Sensor — Washer Fluid Level	2M	WPT-684
2004-98	Solenoid — Brake Shift Park Interlock	3M	WPT-210
1996-92	Solenoid — Brake Shift Park Interlock	3M	WPT-210
2004-97	Solenoid — Canister Vent	2M	WPT-322
1995-93	Solenoid — Canister Vent	2M	WPT-441
2004-96	Solenoid — EGR Vacuum Regulator	2M	WPT-359
1998	Solenoid — EGR Vacuum Regulator 3.0L OHV	2M	WPT-374
1995-93	Solenoid — EGR Vacuum Regulator 3.8L OHV	2M	WPT-374
1995-92	Solenoid — EGR Vacuum Regulator 3.0L OHV	2M	WPT-374
2004-01	Speaker — Door Wagon 4 Door	2F	WPT-373
1995-92	Speaker — Door (Front)	2M	WPT-416
2003-00	Speaker — Door (Rear) Sedan	2F	WPT-373
2000	Speaker — Door (Rear) Wagon 4 Door	2F	WPT-373
1999-96	Speaker — Front	2M	WPT-416
1999-93	Speaker — Rear	2M	WPT-416
2004-96	Speaker — Tweeter — LH — Front	2M	WPT-819
	Speaker — Tweeter — RH — Front	2M	WPT-819
2003-97	Switch — A/C Compressor Clutch Cycling	4F	WPT-169
1999-98	Switch — A/C Compressor Clutch Cycling	4M	WPT-303
1995-93	Switch — A/C Compressor Clutch Cycling	2M	WPT-438
1999-95	Switch — A/C High Pressure	4M	WPT-303
2004-00	Switch — A/C Pressure Cut Off	4F	WPT-182
2004-02	Switch — Adjustable Pedal	4F	WPT-306
2001-00	Switch — Brake Deactivation	2M	WPT-422
1999-93	Switch — Coolant Temperature Sending Unit	1M	WPT-476
1995-93	Switch — Courtesy Lamp	3F	WPT-213
2003-98	Switch — Deck Lid / Hatch Release	2M	WPT-478
1997-96	Switch — Deck Lid / Hatch Release	2M	WPT-469
1995	Switch — Deck Lid / Hatch Release	3M	WPT-446
2003-01	Switch — Deck Lid / Lift Gate Ajar	2M	WPT-441
1999-93	Switch — Deck Lid / Lift Gate Ajar	2M	WPT-441
2003-00	Switch — Decklid / Liftgate (Anti-theft)	2M	WPT-715
2000	Switch — Dimmer	7F	WPT-179
1999-98	Switch — Dimmer	7F	WPT-179
1995-92	Switch — Dimmer	4M	WPT-556
1999-96	Switch — Door Ajar / Interior Lamp	2M	WPT-146
1995-92	Switch — Door Ajar / Interior Lamp	1F	WPT-499
2004-03	Switch — Door Lock (LH)	8F	WPT-485
2002-00	Switch — Door Lock (LH)	8F	WPT-683
1999-96	Switch — Door Lock (LH)	7F	WPT-400

WIRING PIGTAIL KITS

PASSENGER CAR



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
MERCURY — Cont'd			
Sable — Cont'd			
1995-93	Switch — Door Lock (LH)	8F	WPT-679
2004-03	Switch — Door Lock (RH)	8F	WPT-485
2002-00	Switch — Door Lock (RH)	8F	WPT-683
1999-96	Switch — Door Lock (RH)	7F	WPT-400
1995	Switch — Door Lock (RH)	3F	WPT-580
1997-95	Switch — Gear Shift Select / Neutral Safety	8M	WPT-389
2004-00	Switch — Headlamp	12F	WPT-396
	6F	WPT-262
1999-98	Switch — Headlamp	6F	WPT-510
1999-96	Switch — Headlamp	6F	WPT-845
1995-93	Switch — Headlamp Dimmer	7F	WPT-179
1995-92	Switch — Heated Back Light (Rear Defrost)	10M	WPT-782
2004-01	Switch — Heater / A/C Blower (Front)	6M	WPT-363
1999-93	Switch — Heater / A/C Blower (Front)	4M	WPT-103
2003-01	Switch — Heater A/C Temp Control		
	w/Manual AC	8F	WPT-275
2001-00	Switch — Heater A/C Temp Control	4M	WPT-448
1995-92	Switch — Heater A/C Temp Control		
	w/o AC, w/Manual AC	3M	WPT-328
	4M	WPT-448
1999-96	Switch — Hood Ajar	2M	WPT-536
2004-02	Switch — Horn	8F	WPT-227
1999-98	Switch — Horn/Speed Controls/Radio Control — In-line (Female)	4M	WPT-543
1995-94	Switch — Horn/Speed Controls/Radio Control — In-line (Female)	4M	WPT-543
2004-92	Switch — Ignition	16M	WPT-577
2004-93	Switch — Inertia	3M	WPT-446
2004-03	Switch — Lift Gate Glass Ajar	2M	WPT-146
1995-93	Switch — Lift Gate Glass Ajar		
	Wagon 4 Door	4F	WPT-306
2004-00	Switch — Moon Roof/ Sun Roof		
	DOHC, OHV	3F	WPT-224
1999-96	Switch — Moon Roof/ Sun Roof	8F	WPT-628
	Switch — Power Window — Driver	7F	WPT-546
1995	Switch — Moon Roof/ Sun Roof	2M	WPT-345
	Switch — Multi Function	7F	WPT-179
2004-00	Switch — Oil Sending Unit	1M	WPT-413
1999-92	Switch — Oil Sending Unit	1M	WPT-616
1999-96	Switch — Overdrive Cancel	6M	WPT-375
1995	Switch — Overdrive Cancel	2F	WPT-226
2003-02	Switch — Park Brake	2F	WPT-479
1995-92	Switch — Power Mirror	3F	WPT-580
2001-00	Switch — Power Steering Pressure		
	3.0L	2M	WPT-260
1995-93	Switch — Power Steering Pressure	2M	WPT-260
2004-00	Switch — Power Window — Driver	6F	WPT-622
	Switch — Power Window — LH — Rear	6F	WPT-622
	Switch — Power Window — Passenger (Front)	6F	WPT-622
1995-94	Switch — Power Window — Passenger (Front)	14F	WPT-402
1995-92	Switch — Power Window — RH — Rear	7F	WPT-549
	Switch — Redundant Radio Control	6M	WPT-636
2004-00	Switch — Seat (Driver)	8M	WPT-399
1999-97	Switch — Seat (Driver)	8F	WPT-379
1995-94	Switch — Seat (Driver)	8F	WPT-379
2002-00	Switch — Seat (Passenger)	8M	WPT-399
1999-96	Switch — Seat (Passenger)	8F	WPT-379
1999-97	Switch — Seat Lumbar	2F	WPT-544
1995	Switch — Seat Lumbar	2F	WPT-473
1994	Switch — Seat Lumbar		
	GS	2F	WPT-364
	LS; w/Power Bolster and Power Lumbar	2F	WPT-473

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
MERCURY — Cont'd			
Sable — Cont'd			
1993-90	Switch — Seat Lumbar GS; w/Power Lumbar	2F	WPT-364
2004-00	Switch — Speed Control Deactivation	2F	WPT-195
	Switch — Stop Lamp Wagon	2F	WPT-373
	Sedan	2F	WPT-489
1999-92	Switch — Stop Lamp	2M	WPT-197
2004-00	Switch — Turn Signal	11M	WPT-813
1998-95	Switch — Turn Signal	11M	WPT-813
1994-93	Switch — Turn Signal	11M	WPT-178
2004-98	Switch — Wiper Washer — Rear	6M	WPT-246
2004-00	Terminal — Rear Window Defroster Grid	1F	WPT-371
1997-91	Terminal — Rear Window Defroster Grid	1F	WPT-371
2004-98	Test Connector — Diagnostic	16F	WPT-615
2004-96	Transceiver — Passive Anti-Theft (PATS)	4M	WPT-293
Tracer			
1999-97	AC Compressor Clutch	2M	WPT-173
	Actuator — Door Lock — LH — Front	2M	WPT-312
	Actuator — Door Lock — RH — Rear	2F	WPT-849
	Capacitor — Ignition / Radio SOHC	1M	WPT-352
1999-96	Cigar Lighter	1M	WPT-476
1999-97	Fuel Injector	2F	WPT-244
	Lamp — Front Turn	2M	WPT-536
1999-98	Motor — Idle Air Control 2.0L SOHC	2M	WPT-357
1996	Motor — Idle Air Control 1.9L SOHC	2M	WPT-357
1999-97	Sensor — Cam Shaft Position SOHC	2F	WPT-579
	Sensor — Catalyst Monitor	4M	WPT-123
	Sensor — Crank Shaft Position	2F	WPT-579
1999	Sensor — Fuel Tank Pressure Transducer	3M	WPT-777
1999-97	Sensor — Intake Manifold Runner Control	4F	WPT-347
1999-98	Sensor — Knock 2.0L SOHC	2F	WPT-776
1999-97	Sensor — Mass Air Flow	6M	WPT-102
	Sensor — O ₂ (HEGO/EGO)	4M	WPT-112
	Sensor — Throttle Position 2.0L	3F	WPT-754
1998-91	Speaker — Door (Front)	2M	WPT-416
1999-97	Switch — A/C Compressor Clutch Cycling	4F	WPT-169
	Switch — Inertia	3M	WPT-446
	Switch — Power Mirror	8F	WPT-117
	Switch — Power Steering Pressure	4F	WPT-169
	Terminal — Rear Window Defroster Grid	1F	WPT-434

WIRING PIGTAIL KITS

LIGHT TRUCK



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK			
Aerostar			
1995	Actuator — Door Lock	2M	WPT-312
1994-92	Actuator — Door Lock	1M	WPT-407
1997-90	Capacitor — Ignition / Radio		
	4.0L	1M	WPT-352
1997-91	Coil — Ignition		
	4.0L	4M	WPT-511
1990	Coil — Ignition		
	3.0L, 4.0L	4M	WPT-511
1997-90	Fuel Injector		
	4.0L	2M	WPT-372
1997	Lamp — Park/Turn/Stop	3M	WPT-108
1996	Lamp — Rear Turn	3M	WPT-105
1995-92	Lamp — Rear Turn	2F	WPT-291
1997	Lamp — Reverse	3M	WPT-105
1996	Lamp — Reverse	3M	WPT-106
1995-92	Lamp — Reverse	2F	WPT-291
	Lamp — Running Board	2N/A	WPT-471
1996	Lamp — Stop / Park	3M	WPT-108
1994-90	Motor — Idle Air Control		
	4.0L OHV	2M	WPT-684
1997-90	Motor — Windshield Wiper	4M	WPT-729
1994-92	Relay — Door Lock	6M	WPT-761
1997-90	Sensor — Air Charge Temperature		
	4.0L	2M	WPT-428
	Sensor — Coolant Temperature	2M	WPT-437
	Sensor — Crank Shaft Position	2M	WPT-372
	Sensor — Oil Level		
	4.0L	1M	WPT-237
1997-96	Sensor — Purge Flow	4F	WPT-808
1995-90	Sensor — Throttle Position	3M	WPT-445
1997-91	Solenoid — Canister Vent	2M	WPT-441
	Switch — Coolant Temperature Sending Unit	1M	WPT-476
1995-92	Switch — Courtesy Lamp — RH	3F	WPT-213
1997-90	Switch — Oil Sending Unit	1M	WPT-616
Bronco			
1996-93	AC Compressor Clutch	2M	WPT-173
1996-94	Actuator — Door Lock — LH — Front	2M	WPT-312
	Actuator — Door Lock — RH — Front	2M	WPT-312
1996-93	Actuator — Speed Control	10M	WPT-762
	Capacitor — Ignition / Radio	2M	WPT-478
	Coil — Ignition	3M	WPT-397
1996-94	Control — Electronic Brake (Trailer Tow)	6F	WPT-599
1993	Controller — Trailer Brake — Inline (Female)	4F	WPT-456
1995-92	Fuel Injector	2M	WPT-372
1995-94	Fuel Pump / Sending Unit	4M	WPT-386
1993	Fuel Pump / Sending Unit	4M	WPT-454
1996-93	Horn	1M	WPT-378
	Instrument Cluster	14M	WPT-383
1996-92	Lamp — Courtesy — Door	2F	WPT-212
1996-93	Lamp — Headlamp- High/Low Beam	3M	WPT-110
	Lamp — Instrument	2M	WPT-597
	Lamp — License	2N/A	WPT-149
1996-92	Lamp — Park/Turn/Stop	3F	WPT-442
1996-93	Lamp — Rear Park	2N/A	WPT-149
1996-92	Lamp — Reverse	2F	WPT-291
1996	Lamp — Under Hood	2M	WPT-370
1995-94	Mirror — Rearview (Electrochromatic)	3M	WPT-584
1996-94	Mirror — Sideview	8M	WPT-382
1995-94	Mirror — Vanity	1F	WPT-562
1996-93	Module — Daytime Running Lamp (DRL)	8M	WPT-298



WIRING PIGTAIL KITS LIGHT TRUCK

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
Bronco — Cont'd			
1996-95	Module — Ignition 5.0L, 5.8L	6M	WPT-297
1994	Module — Ignition 5.0L	6M	WPT-297
1993	Module — Ignition 4.9L, 5.0L, 5.8L	6M	WPT-297
1996-93	Module — Programmable Speedometer/Odometer (PSOM)	12M	WPT-613
1996-94	Module — Remote Keyless Entry		
	Left	13M	WPT-612
	Right	13M	WPT-625
	16M	WPT-632
1996-93	Module — Transfer Case Shift Control	8M	WPT-313
1994-93	Module — Transfer Case Shift Control	5M	WPT-300
1996-93	Module — Warning Chime / Beltminder	7M	WPT-512
1996-94	Motor — Idle Air Control		
	5.8L OHV	2M	WPT-684
1996-93	Motor — Idle Air Control		
	5.0L OHV	2M	WPT-684
1995-94	Motor — Power Window — LH — Front		
	Rectangular Cavity	2F	WPT-484
	Motor — Power Window — RH — Front	2F	WPT-484
1996	Motor — Transfer Case Electronic Shift	8F	WPT-174
1996-93	Motor — Transfer Case Electronic Shift	10M	WPT-661
1996-95	Motor — Windshield Wiper	6M	WPT-297
1994-93	Motor — Windshield Wiper	3M	WPT-333
1996-94	Radio		
	Polarity letter not specified; Rectangle; Gray	8M	WPT-646
	Polarity letter not specified; Rectangle; Black	8M	WPT-696
	Radio — Amplifier	14M	WPT-296
1996-95	Relay — Starter Motor		
	5.8L OHV	1M	WPT-616
1996-94	Relay — Starter Motor		
	5.0L OHV	1M	WPT-616
1993	Relay — Starter Motor	1M	WPT-616
1995-94	Sensor — Air Charge Temperature		
	5.8L	2M	WPT-428
1995-93	Sensor — Air Charge Temperature		
	5.0L	2M	WPT-428
1992	Sensor — Air Charge Temperature		
	4.9L	2M	WPT-428
1996-94	Sensor — Ambient Temp	2F	WPT-497
1996	Sensor — Catalyst Monitor	4M	WPT-112
1995-93	Sensor — Coolant Temperature	2M	WPT-437
1992	Sensor — Coolant Temperature		
	4.9L	2M	WPT-437
1995	Sensor — Delta Pressure Feedback EGR	3M	WPT-458
1995-94	Sensor — EGR Valve Position		
	5.8L OHV	4M	WPT-386
1993	Sensor — EGR Valve Position		
	5.0L OHV	4M	WPT-386
1995-93	Sensor — Knock	2M	WPT-462
1994-93	Sensor — Manifold Absolute Pressure (MAP)	3M	WPT-263
1996	Sensor — Mass Air Flow	6M	WPT-102
1995-94	Sensor — Mass Air Flow		
	5.0L	4F	WPT-256
	Sensor — Throttle Position	3M	WPT-445
	5.0L, 5.8L	3F	WPT-651
1993	Sensor — Throttle Position		
	5.0L	3F	WPT-651
1996-95	Sensor — Transmission Range		
	AT 4 Spd	8M	WPT-389

WIRING PIGTAIL KITS

LIGHT TRUCK



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
Bronco — Cont'd			
1996-94	Solenoid — Brake Shift Park Interlock	3M	WPT-210
1995-92	Solenoid — Canister Vent	2M	WPT-441
1996-94	Solenoid — EGR Vacuum Regulator 5.8L	2M	WPT-374
1996-93	Solenoid — EGR Vacuum Regulator 5.0L	2M	WPT-374
1996-92	Speaker — Door (Front)	2M	WPT-416
1996-94	Speaker — Rear	2M	WPT-416
1996	Switch — 4x4 Disconnect	2M	WPT-209
	Switch — A/C Pressure Cut Off	4F	WPT-169
1996-93	Switch — Brake Pressure	2M	WPT-260
	Switch — Clutch Pedal Position	6M	WPT-507
	Switch — Coolant Temperature Sending Unit	1M	WPT-476
	Switch — Courtesy Lamp	3F	WPT-213
1995-93	Switch — Headlamp	9F	WPT-165
1996-93	Switch — Heated Back Light (Rear Defrost)	5M	WPT-377
	Switch — Heater / A/C Blower (Front)	4M	WPT-103
	Switch — Heater A/C Temp Control	4M	WPT-344
	Switch — Ignition	16M	WPT-577
	Switch — Multi Function	7F	WPT-179
	9M	WPT-611
	Switch — Oil Sending Unit	1M	WPT-616
	Switch — Park Brake	1M	WPT-488
1996-94	Switch — Power Mirror	8M	WPT-313
1996-93	Switch — Power Sliding Rear Window	5M	WPT-653
1995-93	Switch — Power Steering Pressure 5.0L	2M	WPT-372
1996-94	Switch — Power Window — Driver (Lockout) (421)	15M	WPT-656
1996-93	Switch — Stop Lamp	2M	WPT-197
1996	Test Connector — Diagnostic	16F	WPT-615
	Trailer Tow — Vehicle Side	4F	WPT-358
1996-94	Trailer Tow — Vehicle Side	7M	WPT-421
1994-93	Transmission 10-Way	12M	WPT-571
1996-93	Valve — Thermactor Air Diverter (TAD)	2M	WPT-146
1996-95	Valve — Vapor Management 8 Cyl. 5.8L (351)	2M	WPT-545
Escape			
2004-02	AC Compressor Clutch	2F	WPT-745
2004-01	Actuator — Door Lock	10F	WPT-289
	Actuator — Door Lock — Decklid/Liftgate	2M	WPT-312
2002	Alternator	3M	WPT-118
2004-01	Capacitor — Ignition / Radio 3.0L	1M	WPT-352
2002	Capacitor — Ignition / Radio Zetec	1M	WPT-352
2005-01	Cigar Lighter	3F	WPT-329
2002	Clock	6M	WPT-276
2002-01	Fuel Injector 2.0L	2F	WPT-244
2001	Fuel Pump / Sending Unit	4M	WPT-152
2004-03	Horn	1M	WPT-378
2002	Horn	1M	WPT-461
2001	Horn	1F	WPT-371
2005-01	Lamp — CHMSL (Center High Mount Stop Lamp)	2F	WPT-195
2004-02	Lamp — Dome	2M	WPT-675
2004-01	Lamp — Fog / Driving	2F	WPT-692
2002	Lamp — Front Cornering / Turn	3M	WPT-105
2003-01	Lamp — Front Turn/Marker	3M	WPT-109
2002	Lamp — Headlamp- High/Low Beam	3M	WPT-603
	Lamp — Instrument	2M	WPT-597



WIRING PIGTAIL KITS LIGHT TRUCK

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
Escape — Cont'd			
2002-01	Lamp — License	2F	WPT-835
2004-03	Lamp — Map	4M	WPT-293
2002	Lamp — Map Tile Slide Sun Roof	4M	WPT-293
2001	Lamp — Map	4M	WPT-293
2002-01	Lamp — Park/Turn/Stop	3M	WPT-108
	Lamp — Rear Turn	3M	WPT-105
	Lamp — Reverse	3M	WPT-106
2004-01	Lamp — Storage Compartment — Cargo	2M	WPT-752
2003-01	Lamp — Storage Compartment — Cargo	1M	WPT-461
2004-02	Mirror — Sideview	6F	WPT-765
2004-03	Mirror — Vanity	2F	WPT-479
2004-01	Module — Daytime Running Lamp (DRL)	6F	WPT-455
	Motor — Engine Cooling Fan 2.0L, 3.0L	3F	WPT-168
2004-02	Motor — Heater / AC Blower (Front)	4M	WPT-103
2001	Motor — Heater / AC Blower (Front)	4M	WPT-480
2004-01	Motor — Idle Air Control 3.0L DOHC	2M	WPT-304
2002-01	Motor — Idle Air Control 2.0L DOHC	2M	WPT-304
2004-02	Motor — Moon Roof / Sun Roof	2F	WPT-786
2003-02	Motor — Power Window — RH — Front	2F	WPT-745
2004-01	Motor — Power Window — RH — Rear	2F	WPT-745
	Motor — Rear Window Washer Fluid Pump	2M	WPT-357
	Motor — Rear Window Wiper	3M	WPT-4591
2002	Motor — Windshield Wiper	5F	WPT-158
2005	Power Point	3F	WPT-682
2004-01	Radio	16F	WPT-186
2001	Radio	8F	WPT-185
2004-01	Relay — Flasher Blue Connector (Multi-Connector)	5F	WPT-802
	5F	WPT-798
2002	Resistor — Blower Motor (Front) w/AC	4F	WPT-115
	4F	WPT-755
	Seat — Power Connection (Driver)	2F	WPT-664
2004-01	Sensor — Cam Shaft Position 3.0L DOHC	2F	WPT-759
2002-01	Sensor — Cam Shaft Position 2.0L	2M	WPT-336
2004-01	Sensor — Coolant Temperature	2M	WPT-206
	Sensor — Crank Shaft Position 3.0L DOHC	2F	WPT-759
2002-01	Sensor — Cylinder Head Temperature 2.0L	2M	WPT-418
2004-01	Sensor — Knock	2M	WPT-351
2002	Sensor — Low Coolant 3.0L	2M	WPT-372
2004	Sensor — Mass Air Flow	6M	WPT-102
2002-01	Sensor — Mass Air Flow	6M	WPT-102
2005	Sensor — Throttle Position 2.3L	3M	WPT-777
2002-01	Sensor — Throttle Position 2.0L DOHC	3M	WPT-777
2001	Sensor — Throttle Position	3M	WPT-118
	3F	WPT-170
2003-02	Sensor — Transmission Range	11F	WPT-7461
2002-01	Solenoid — Brake Shift Park Interlock	8M	WPT-770
2002	Solenoid — Canister Vent	2M	WPT-322
2004-01	Solenoid — EGR Vacuum Regulator	2M	WPT-359
	Speaker — Subwoofer	10M	WPT-504

WIRING PIGTAIL KITS

LIGHT TRUCK



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
Escape — Cont'd			
2004-02	Speaker — Tweeter — LH — Front	4M	WPT-293
2003-01	Speaker — Tweeter — RH — Front	4M	WPT-293
2004-01	Switch — 4x4 Control	8M	WPT-264
2002	Switch — 4x4 Control	4M	WPT-417
2004-03	Switch — A/C Compressor Clutch Cycling	4F	WPT-169
2002	Switch — A/C Compressor Clutch Cycling	4F	WPT-169
2004-01	Switch — A/C Pressure Cut Off	4F	WPT-182
2002	Switch — Dimmer	6M	WPT-794
2004-02	Switch — Fog Lamp	8M	WPT-199
2002	Switch — Hazard Warning	8M	WPT-199
2002-01	Switch — Heated Back Light (Rear Defrost)	8M	WPT-167
2004-01	Switch — Heated Seat — LH — Front	8M	WPT-218
	Switch — Heated Seat — RH — Front	8M	WPT-218
2002	Switch — Heater / A/C Blower (Front)	4M	WPT-103
	Switch — Heater A/C Temp Control w/AC	8F	WPT-275
2004-01	Switch — Ignition	7M	WPT-804
	Switch — Inertia	3M	WPT-446
2002-01	Switch — Lift Gate Glass Ajar	2F	WPT-664
2004-03	Switch — Oil Sending Unit 2.0L, 3.0L	1M	WPT-413
2002	Switch — Oil Sending Unit 2.0L	1M	WPT-439
	3.0L	1M	WPT-413
2001	Switch — Oil Sending Unit 2.0L, 3.0L	1M	WPT-413
2003-01	Switch — Park Brake	1F	WPT-434
2004-01	Switch — Power Mirror	8M	WPT-240
	Switch — Power Steering Pressure	2F	WPT-244
	Switch — Power Window — Passenger (Front)	6F	WPT-600
2004-03	Switch — Reverse Park Aid	8M	WPT-264
2002-01	Switch — Seat (Driver)	2F	WPT-664
2004-02	Switch — Stop Lamp	2F	WPT-294
2002	Switch — Windshield Wiper/Washer	14F	WPT-747
2004-01	Terminal — Rear Window Defroster Grid 2.0L, 3.0L	1M	WPT-461
2003	Trailer Tow — Vehicle Side	4F	WPT-358
2002	Trailer Tow — Vehicle Side	4F	WPT-677
2001	Trailer Tow — Vehicle Side	4F	WPT-358
2005-01	Transceiver — Passive Anti-Theft (PATS)	4M	WPT-668
2002	Valve — Vapor Management	2M	WPT-545
Excursion			
2004-01	AC Compressor Clutch	2M	WPT-173
2002-00	Actuator — Door Lock	2M	WPT-312
2004-00	Actuator — Door Lock — Decklid/Liftgate	2M	WPT-312
2002-00	Actuator — Door Lock — LH — Front	2M	WPT-312
	Actuator — Door Lock — LH — Rear	2M	WPT-312
	Actuator — Door Lock — RH — Front	2M	WPT-312
	Actuator — Door Lock — RH — Rear	2M	WPT-312
2004-00	Actuator — Speed Control	10M	WPT-762
2002-00	Capacitor — Ignition / Radio	1M	WPT-352
2004-00	Cigar Lighter	3F	WPT-329
2003-00	Control — Electronic Brake (Trailer Tow)	6F	WPT-599
2003-02	Control Head — Electronic Automatic Temperature (EATC)	5F	WPT-153
2004-02	Element — Heated Seat	2M	WPT-548
2001-00	Element — Heated Seat Driver and Passenger Captain Chair	4M	WPT-307
2003-00	Fuel Pump / Sending Unit	4M	WPT-152
2003	Heater — Fuel 6.0L	2F	WPT-711

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
Excursion — Cont'd			
2004-00	Horn	2M	WPT-372
2003	Instrument Cluster	12F	WPT-673
2002	Instrument Cluster		
	Polarity B; Square; Gray	12F	WPT-637
	Polarity A; Square; Black	12F	WPT-673
2002-00	Instrument Cluster		
	Right	12M	WPT-208
2001-00	Instrument Cluster		
	Left	12M	WPT-192
	16M	WPT-202
2003	Junction Box — Relay	12F	WPT-591
	6.0L Diesel	4F	WPT-629
2003-02	Junction Box — Relay	15F	WPT-791
2002	Junction Box — Relay		
	7.3L Diesel OHV	12F	WPT-591
	7.3L Diesel	4F	WPT-629
	12F	WPT-691
2000	Junction Box — Relay	15F	WPT-791
2002-00	Lamp — CHMSL (Center High Mount Stop Lamp)	2F	WPT-530
2004-00	Lamp — Courtesy — Door	2N/A	WPT-149
2002-00	Lamp — Courtesy — Reading (Rear)	1F	WPT-295
2003-00	Lamp — Dome	3M	WPT-4591
2004-00	Lamp — Dome/ Map	3M	WPT-4591
2002-01	Lamp — Fog / Driving	2F	WPT-150
2003-00	Lamp — Front Cornering / Turn	3M	WPT-108
2004-00	Lamp — Glove Box	2M	WPT-314
2003-01	Lamp — Headlamp- High/Low Beam	3M	WPT-110
2003-00	Lamp — Instrument	2M	WPT-597
2002-01	Lamp — License	2N/A	WPT-149
2003-01	Lamp — Park/Turn/Stop	3M	WPT-108
	Lamp — Reverse	3M	WPT-105
2004-03	Lamp — Running Board	4F	WPT-390
2002-00	Lamp — Running Board	2F	WPT-150
2003-01	Lamp — Side Marker	2F	WPT-150
2003-00	Lamp — Storage Compartment — Cargo	3M	WPT-4591
2004-00	Lamp — Under Hood	2M	WPT-370
2003-00	Mirror — Rearview (Electrochromatic)	3M	WPT-584
2004-00	Mirror — Sideview	10F	WPT-825
2002-00	Mirror — Sideview / Heated	2M	WPT-693
2004-00	Mirror — Vanity	2F	WPT-479
2003-00	Module — Anti-theft	16	WPT-694
2001	Module — Daytime Running Lamp (DRL)	8F	WPT-174
2003-02	Module — Heated Seat (Drivers)	12F	WPT-503
	Module — Remote Keyless Entry	14F	WPT-741
2001-00	Module — Remote Keyless Entry	8M	WPT-737
2004-00	Module — Seat Memory	10F	WPT-559
2004-03	Module — Transfer Case Shift Control		
	5.4L, 6.0L, 6.8L	10F	WPT-367
2002-00	Module — Transfer Case Shift Control	10F	WPT-367
2004-02	Module — Variable Speed Blower Controller	5F	WPT-153
2003-02	Monitor — Video/DVD	12F	WPT-760
	Motor — Adjustable Pedal	6M	WPT-444
2002	Motor — Adjustable Pedal	2F	WPT-544
2003	Motor — Engine Cooling Fan	2F	WPT-497
2004-00	Motor — Heater A/C Blower (Auxiliary)	2M	WPT-104
2002-00	Motor — Idle Air Control	2M	WPT-357
2003-00	Motor — Power Seat Track	6F	WPT-599
	Motor — Power Window — LH — Front	2F	WPT-698
	Motor — Power Window — LH — Rear	2F	WPT-698
	Motor — Power Window — RH — Front	2F	WPT-698
	Motor — Power Window — RH — Rear	2F	WPT-698

WIRING PIGTAIL KITS

LIGHT TRUCK



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
Excursion — Cont'd			
2002-00	Motor — Rear Quarter Flip Window	2M	WPT-314
2004-00	Motor — Rear Window Washer Fluid Pump	2M	WPT-357
2004-02	Motor — Rear Window Wiper	8F	WPT-310
2001-00	Motor — Rear Window Wiper	3F	WPT-282
2004-00	Motor — Transfer Case Electronic Shift Multi-connector device	2F	WPT-856
2002-00	Motor — Transfer Case Electronic Shift	6F	WPT-228
	Motor — Windshield Washer Fluid Pump	2M	WPT-357
2004-02	Motor — Windshield Wiper	12F	WPT-850
2001	Motor — Windshield Wiper	5F	WPT-158
2003-00	Overhead Console — In-line (Female)	14M	WPT-666
2004-03	Power Point	2M	WPT-355
2002-00	Power Point In Quarter Trim Only; Left	2M	WPT-355
2003-01	Radio	16F	WPT-186
	20F	WPT-184
2002-00	Radio — Amplifier	16M	WPT-332
2004-03	Relay — Daytime Running Lamp (DRL) — In-line	2M	WPT-173
2004-00	Relay — Flasher	10F	WPT-842
2002-00	Relay — Starter Motor	1M	WPT-616
2004-00	Relay — Trailer Tow	10F	WPT-367
2003-00	Resistor — Blower Motor (Auxiliary)	4F	WPT-115
2004-03	Resistor — Blower Motor (Front)	4M	WPT-114
2004-00	Resistor — Daytime Running Lamp (DRL)	2M	WPT-322
2002	Seat — Power Connection (Driver) Less Memory Package	8F	WPT-257
2001-00	Seat — Power Connection (Driver)	8F	WPT-257
2003	Sensor — Accelerator Pedal Position 5.4L, 6.0L, 6.8L	10F	WPT-537
2003-02	Sensor — Accelerator Pedal Position 7.3L	10F	WPT-533
2001	Sensor — Accelerator Pedal Position	10F	WPT-537
2004-00	Sensor — Ambient Temp	2M	WPT-437
2003	Sensor — Barometric Absolute Pressure (BAP)	4F	WPT-169
2004-01	Sensor — Brake Fluid Level	3M	WPT-118
2003-01	Sensor — Cam Shaft Position 5.4L, 6.8L	2F	WPT-759
2000	Sensor — Cam Shaft Position 6.8L	2F	WPT-579
2003-01	Sensor — Crank Shaft Position 5.4L, 6.8L	2F	WPT-759
2000	Sensor — Crank Shaft Position 5.4L	2F	WPT-579
	6.8L	2F	WPT-579
2002-00	Sensor — Cylinder Head Temperature 5.4L, 6.8L	2M	WPT-338
2004-00	Sensor — Delta Pressure Feedback EGR	3F	WPT-188
2004-02	Sensor — EATC In Car Temperature	3M	WPT-4591
2002-01	Sensor — Knock	2M	WPT-351
2000	Sensor — Knock 5.4L, 6.8L	2M	WPT-351
2004-03	Sensor — Manifold Absolute Pressure (MAP)	3F	WPT-282
2002-01	Sensor — Manifold Absolute Pressure (MAP) Diesel	3F	WPT-282
2000	Sensor — Manifold Absolute Pressure (MAP)	3F	WPT-282
2004-01	Sensor — Mass Air Flow	6M	WPT-102
2002-00	Sensor — Mass Air Flow — In-line (Female)	8F	WPT-712
2002	Sensor — Memory Seat Track Position Driver and Passenger Captain Chair	3M	WPT-241
2002-01	Sensor — Reverse Park Aid (RPA)	3F	WPT-230
2002	Sensor — Sunload	3M	WPT-214

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
Excursion — Cont'd			
2001	Sensor — Throttle Position	3F	WPT-170
2004-00	Sensor — Transmission Range AT 4 Spd E40D	12M	WPT-806
	Solenoid — Brake Shift Park Interlock	3M	WPT-210
2002-00	Solenoid — Canister Vent	2M	WPT-322
2003-00	Solenoid — EGR Vacuum Regulator	2M	WPT-359
2002	Solenoid — Electronic Automatic Temperature Control (EATC) ATC AC	8F	WPT-275
2002-00	Solenoid — Pulse Vacuum 4x4 Hub (PVH)	3F	WPT-754
2000	Speaker — Door (Front)	2F	WPT-815
2004-03	Speaker — Door (Rear)	2F	WPT-815
	Speaker — Rear	2F	WPT-373
2002-00	Speaker — Rear	2F	WPT-815
2003-00	Speaker — Reverse Park Aid (RPA)	2M	WPT-675
2002-00	Switch — 4x4 Control	4M	WPT-417
2001-00	Switch — 4x4 Disconnect 5.4L, 6.8L	2M	WPT-209
2002-01	Switch — A/C High Pressure	4F	WPT-169
2004-03	Switch — A/C Pressure Cut Off	4F	WPT-169
2001	Switch — A/C Pressure Cut Off	4F	WPT-169
2002	Switch — Air Cleaner Restrictor	2F	WPT-692
2003-00	Switch — Brake Pressure	2M	WPT-322
2002-00	Switch — Coolant Temperature Sending Unit	2M	WPT-431
2003-00	Switch — Deck Lid / Lift Gate Ajar	2M	WPT-441
	Switch — Door Ajar / Interior Lamp	2M	WPT-146
2003-02	Switch — Door Lock (LH)	8F	WPT-683
2001	Switch — Door Lock (LH)	7F	WPT-846
2000	Switch — Door Lock (LH)	7F	WPT-400
2003-02	Switch — Door Lock (RH)	8F	WPT-683
2001	Switch — Door Lock (RH)	7F	WPT-846
2000	Switch — Door Lock (RH)	7F	WPT-400
2002-00	Switch — Headlamp	12F	WPT-396
	6F	WPT-262
	Switch — Heated Back Light (Rear Defrost)	8M	WPT-266
2003-01	Switch — Heated Seat — LH — Front	8M	WPT-547
2004-00	Switch — Heated Seat — RH — Front	8M	WPT-547
2003-01	Switch — Heater / A/C Blower (Front)	4M	WPT-103
2003-00	Switch — Heater A/C Blower (Rear)	6M	WPT-369
	Switch — Heater A/C Temp Control	4M	WPT-448
2002	Switch — Heater A/C Temp Control ATC AC	3F	WPT-447
2002-00	Switch — Heater A/C Temp Control High Output AC	3F	WPT-447
2001	Switch — Heater A/C Temp Control Manual AC	3F	WPT-447
2003-00	Switch — Ignition	16M	WPT-577
2004-00	Switch — Inertia	3F	WPT-414
2004-01	Switch — Keyless Entry	8F	WPT-833
2003-02	Switch — Multi Function	12F	WPT-503
	10F	WPT-516
2001	Switch — Multi Function	7F	WPT-179
2001-00	Switch — Multi Function	9M	WPT-607
2004-00	Switch — Oil Sending Unit	1M	WPT-439
2003	Switch — Overdrive Cancel	3M	WPT-753
2002-00	Switch — Overdrive Cancel	3F	WPT-229
2003	Switch — Park Brake	2F	WPT-479
2002-00	Switch — Park Brake	1M	WPT-488
2002-01	Switch — Power Mirror	8F	WPT-117
2003-02	Switch — Power Window — Driver	8F	WPT-498
	6F	WPT-600
2001-00	Switch — Power Window — Driver	7F	WPT-546

WIRING PIGTAIL KITS

LIGHT TRUCK



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
Excursion — Cont'd			
2003-02	Switch — Power Window — LH — Rear	6F	WPT-600
	Switch — Power Window — Passenger (Front)	6F	WPT-600
2004-02	Switch — Power Window — Quarter Glass	7F	WPT-814
2003-02	Switch — Power Window — RH — Rear	6F	WPT-600
2002-01	Switch — Reverse Park Aid	8M	WPT-264
2000	Switch — Reverse Park Aid	8M	WPT-270
2004	Switch — Seat (Driver)	8F	WPT-379
2002-00	Switch — Seat (Driver)	8F	WPT-379
2002	Switch — Seat (Passenger)	8F	WPT-379
2003-02	Switch — Seat Memory	8F	WPT-699
2003-00	Switch — Stop Lamp	5F	WPT-415
	Terminal — Rear Window Defroster Grid	1F	WPT-371
	Test Connector — Diagnostic	16F	WPT-615
2004-02	Trailer Tow — Vehicle Side	4F	WPT-358
2001-00	Trailer Tow — Vehicle Side	7F	WPT-401
2004-03	Transceiver — Passive Anti-Theft (PATS)	4F	WPT-261
2002-00	Transceiver — Passive Anti-Theft (PATS)	4M	WPT-293
	Valve — Vapor Management	2M	WPT-545
E Series			
2003-93	AC Compressor Clutch E150/550	2M	WPT-173
2004-98	Actuator — Door Lock E150/550	2M	WPT-312
1996-95	Actuator — Door Lock E150/350	2M	WPT-312
2004	Actuator — Door Lock — RH — Sliding Door E150/250, E350/550 Super Duty	2F	WPT-292
2003-95	Actuator — Door Lock — RH — Sliding Door E150/550	2M	WPT-312
2004-93	Actuator — Speed Control E150/550	10M	WPT-762
1998	Alternator 7.3L Diesel E350	3M	WPT-118
1997	Alternator E150/350	3M	WPT-119
1997-94	Bulkhead — Transmission — In-line (Female)	9F	WPT-570
2001-97	Bulkhead — Transmission — In-line (Male) E150/450	7F	WPT-567
2004-03	Capacitor — Ignition / Radio 4.6L E-250	1M	WPT-352
2004-02	Capacitor — Ignition / Radio 4.6L E150	1M	WPT-352
2003-00	Capacitor — Ignition / Radio 6.8L E-350, E-350 Econoline, E-450 Super Duty, E-550 Econoline Super Duty Cutaway	1M	WPT-352
2003-98	Capacitor — Ignition / Radio 4.2L E150/250	1M	WPT-352
2003-97	Capacitor — Ignition / Radio 5.4L E150/350, E450/550 Super Duty	1M	WPT-352
1998-97	Capacitor — Ignition / Radio 4.6L, 6.8L	1M	WPT-352
1996-91	Capacitor — Ignition / Radio E150/350	2M	WPT-478
2004-00	Cigar Lighter E150/350, E450/550 Super Duty	3F	WPT-329
1999-98	Cigar Lighter E150/350	1M	WPT-476
1994-93	Cigar Lighter E150/350	1M	WPT-476
2003-01	Coil — Ignition E150/350	4M	WPT-508



WIRING PIGTAIL KITS LIGHT TRUCK

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
E Series — Cont'd			
2000-98	Coil — Ignition 4.2L E150/250	4M	WPT-207
1997	Coil — Ignition 5.4L, 6.8L	2F	WPT-579
1996-91	Coil — Ignition E150/350	3M	WPT-397
2003-92	Control — Electronic Brake (Trailer Tow) E150/350, E450/550 Super Duty	6F	WPT-599
2003-01	Floor Console — Inline (Male) E150/350, E450/550 Super Duty	4M	WPT-542
2003-97	Floor Console — Inline (Male) E150/350, E450/550 Super Duty	16M	WPT-650
1998-91	Fuel Injector E150/350	2M	WPT-372
2004-93	Horn E150/350, E450/550 Super Duty	1M	WPT-378
2004-03	Instrument Cluster E-350, E-350 Super Duty, E-450 Super Duty, E-550 Econoline Super Duty Cutaway; Polarity letter not specified; Rectangle; Natural	12M	WPT-192
	E150/250	12M	WPT-208
	E-350, E-450 Super Duty, E-550 Econoline Super Duty Cutaway; Polarity letter not specified; Rectangle; Black	12M	WPT-208
2004-01	Instrument Cluster E150/350, E450/550 Super Duty	8F	WPT-678
2004-99	Instrument Cluster E150/350, E450/550 Super Duty	16M	WPT-202
2002-01	Instrument Cluster E-350 Econoline, E-450 Econoline Super Duty Cutaway; Polarity letter not specified; Rectangle; Natural	12M	WPT-192
2002-99	Instrument Cluster E150/350, E450/550 Super Duty; Polarity letter not specified; Rectangle; Black	12M	WPT-208
2000-97	Instrument Cluster E150/350; Polarity not specified; Rectangle; Natural	12M	WPT-192
1996-93	Instrument Cluster E150/350	14M	WPT-383
2003	Junction Plate — Power Window/Door Lock E-550	15M	WPT-302
2002	Junction Plate — Power Window/Door Lock E-350 Econoline, E-450 Super Duty	15M	WPT-302
2001-92	Junction Plate — Power Window/Door Lock E150/450	15M	WPT-302
1996-93	Lamp — Anti-Theft E150/350	8M	WPT-313
2003-02	Lamp — Blower Motor Switch (Rear) E150/350, E450/550 Super Duty; w/High Output AC	2F	WPT-757
1997-92	Lamp — CHMSL (Center High Mount Stop Lamp) E150/350	4M	WPT-380
2004-02	Lamp — Dome E150/350, E450/550 Super Duty	3M	WPT-446
2004-97	Lamp — Dome E150/350, E450/550 Super Duty	3M	WPT-239
1996-92	Lamp — Dome w/Partial or Full Headliner	3M	WPT-239
2002-95	Lamp — Dome/ Map E150/550	3M	WPT-4591
	Lamp — Front Cornering / Turn	3M	WPT-108
2003-02	Lamp — Headlamp- High/Low Beam E-450 Super Duty, E-550 Super Duty Cutaway; w/o Aerodynamic Headlamps	3M	WPT-301
2003-00	Lamp — Headlamp- High/Low Beam E-150, E-150 Club Wagon, E-150 Econoline, E-150 Econoline Club Wagon, E-250, E-250 Econoline, E-350, E-350 Club Wagon, E-350 Econoline, E-350 Econoline Club Wagon; w/o Aerodynamic Headlamps	3M	WPT-301
2003-93	Lamp — Headlamp- High/Low Beam E150/350, E450/550 Super Duty; w/Aerodynamic Headlamps	3M	WPT-110

WIRING PIGTAIL KITS

LIGHT TRUCK



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
E Series — Cont'd			
1999	Lamp — Headlamp- High/Low Beam E150/350; w/Sealed Beam Headlamps	3M	WPT-301
1996	Lamp — Headlamp- High/Low Beam E150/350; w/o Aerodynamic Headlamps	3M	WPT-301
1994	Lamp — Headlamp- High/Low Beam E150/350; w/o Aerodynamic Headlamps	3M	WPT-301
2004-97	Lamp — Instrument E150/350, E450/550 Super Duty	2M	WPT-597
2004-92	Lamp — License E150/350, E450/550 Super Duty	2N/A	WPT-471
2003-95	Lamp — Park/Turn/Stop E150/350, E450/550 Super Duty	3M	WPT-108
1996-92	Lamp — Rear Turn E150/350	2M	WPT-211
2003-95	Lamp — Reverse E150/350, E450/550 Super Duty	3M	WPT-105
1996-92	Lamp — Reverse E150/350	2M	WPT-211
2002	Lamp — Roof Marker E150/550	3M	WPT-550
2004-98	Lamp — Storage Compartment — Cargo E150/350, E450/550 Super Duty	3M	WPT-446
1996-92	Lamp — Storage Compartment — Cargo E150/350	3M	WPT-446
1995-94	Lamp — Under Hood E150/350	2M	WPT-370
2004	Mirror — Sideview E150/350, E450/550 Super Duty	3F	WPT-348
2003	Mirror — Sideview E150/350, E450/550 Super Duty	6F	WPT-587
2000-92	Mirror — Sideview E150/350	3F	WPT-348
2004-92	Mirror — Vanity E150/350, E450/550 Super Duty	1F	WPT-562
1996-94	Module — Anti-theft E150/350	4M	WPT-152
2004-99	Module — Daytime Running Lamp (DRL) E150/350, E450/550 Super Duty	6F	WPT-455
1998-93	Module — Daytime Running Lamp (DRL) E150/350	8M	WPT-298
1996-93	Module — Ignition	6M	WPT-297
1996-92	Module — Programmable Speedometer/Odometer (PSOM) E150/350	12M	WPT-613
2003-94	Module — Remote Keyless Entry E150/350, E450/550 Super Duty	13F	WPT-176
1996-92	Module — Remote Keyless Entry E150/350	13M	WPT-308
2004-98	Module — Warning Chime / Beltminder E150/350, E450/550 Super Duty	7M	WPT-513
1997-92	Module — Warning Chime / Beltminder E150/350	7M	WPT-512
2003-00	Module — Wiper Control E150/350, E450/550 Super Duty	14M	WPT-331
2002-01	Monitor — Video/DVD E150/350	6M	WPT-246
2004-98	Motor — Heater / AC Blower (Rear) E150/350, E450/550 Super Duty	2M	WPT-104
1996-95	Motor — Heater / AC Blower (Rear) E150/350	2M	WPT-104
2003-93	Motor — Heater/ AC Blend Door E150/350, E450 Super Duty	8F	WPT-100



WIRING PIGTAIL KITS LIGHT TRUCK

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
E Series — Cont'd			
2004	Motor — Idle Air Control 4.6L	2M	WPT-357
2003-98	Motor — Idle Air Control 4.2L E150/250	2M	WPT-357
2003-97	Motor — Idle Air Control 4.6L, 5.4L, 6.8L E150/350, E450 Super Duty	2M	WPT-357
1996-94	Motor — Idle Air Control 4.9L, 5.8L E150/350	2M	WPT-684
1996-93	Motor — Idle Air Control 5.0L E150	2M	WPT-684
1993	Motor — Idle Air Control 5.0L E250	2M	WPT-684
1992-91	Motor — Idle Air Control 5.8L E150/350	2M	WPT-684
2004-92	Motor — Power Window — LH — Front E150/350, E450/550 Super Duty; Rectangular Cavity	2F	WPT-484
	Motor — Power Window — RH — Front	2F	WPT-484
1996-92	Motor — Seat Lumbar E150/350	2M	WPT-374
2004-97	Motor — Windshield Washer Fluid Pump E150/350, E450/550 Super Duty	2M	WPT-357
1996-93	Motor — Windshield Washer Fluid Pump E150/350	2M	WPT-355
2003-01	Motor — Windshield Wiper E150/350, E450 Super Duty	5F	WPT-158
2000-97	Motor — Windshield Wiper E150/350	5F	WPT-158
1996-95	Motor — Windshield Wiper 4.9L, 5.0L, 5.8L, 7.3L, 7.5L E150/350	6M	WPT-297
1993	Motor — Windshield Wiper E150/350	3M	WPT-333
2004-02	Overhead Console — In-line (Female) E150/350, E450/550 Super Duty	12F	WPT-591
2004-97	Power Point E150/350, E450/550 Super Duty	2M	WPT-355
2002-01	Pump — Fuel (External) E150/450	4M	WPT-152
1997-94	Radio E150/350; Polarity letter not specified; Rectangle; Gray	8M	WPT-646
	E150/350; Polarity letter not specified; Rectangle; Black	8M	WPT-696
1996-94	Radio E150/350	2M	WPT-247
1997	Radio — Amplifier E150/350	8M	WPT-215
1997-94	Radio — Amplifier	14M	WPT-296
1997	Radio — Rear Audio Control E150/350	14M	WPT-296
1996-94	Relay — Blower Motor E150/350	5M	WPT-638
2004-95	Relay — Flasher E150/350, E450/550 Super Duty	3M	WPT-801
2003	Relay — Starter Motor 7.3L E-350, E-450 Super Duty Stripped Chassis	1M	WPT-616
2003-00	Relay — Starter Motor 4.6L SOHC E150	1M	WPT-616
2003-97	Relay — Starter Motor 4.2L, 4.6L, 5.4L, 6.8L E150/350, E450/550 Super Duty	1M	WPT-616
1996-93	Relay — Starter Motor 4.9L, 5.0L, 5.8L, 7.5L E150/350	1M	WPT-616
1996-95	Relay — Trailer Tow E150/350	5F	WPT-662

WIRING PIGTAIL KITS

LIGHT TRUCK



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
E Series — Cont'd			
1996-95	Resistor — Blower Motor (Front) 4.9L, 5.0L, 5.8L, 7.5L E150/350	4M	WPT-114
2004-98	Resistor — Blower Motor (Rear) E150/350, E450/550 Super Duty	4M	WPT-114
2004-97	Sensor — Air Charge Temperature E150/350, E450/550 Super Duty	2M	WPT-420
1996	Sensor — Air Charge Temperature 4.9L, 5.0L, 5.8L E150/350	2M	WPT-428
1995-93	Sensor — Air Charge Temperature 4.9L, 5.0L	2M	WPT-428
1995-91	Sensor — Air Charge Temperature 5.8L E150/350	2M	WPT-428
2004	Sensor — Ambient Temp E150/350, E450 Super Duty	2M	WPT-470
2003-01	Sensor — Ambient Temp E150/350, E450/550 Super Duty	2M	WPT-437
2000-97	Sensor — Ambient Temp E150/350	2M	WPT-470
1998	Sensor — Barometric Absolute Pressure (BAP) E150/350	4F	WPT-169
1996-93	Sensor — Barometric Absolute Pressure (BAP) Diesel	3M	WPT-263
2003-01	Sensor — Brake Fluid Level E150/350, E450/550 Super Duty	3M	WPT-118
2000-97	Sensor — Brake Fluid Level E150/350	3M	WPT-118
1996-94	Sensor — Brake Fluid Level Diesel	3M	WPT-4591
2004-99	Sensor — Cam Shaft Position 4.2L E150/250	3M	WPT-196
2003-01	Sensor — Cam Shaft Position 4.6L, 5.4L E150/350, E450/550 Super Duty	2F	WPT-759
2000	Sensor — Cam Shaft Position 4.6L, 5.4L, 6.8L	2F	WPT-579
1997	Sensor — Cam Shaft Position 6.8L	2F	WPT-579
1996-94	Sensor — Cam Shaft Position 4.9L, 5.8L E150/350	8F	WPT-311
1996-93	Sensor — Cam Shaft Position 5.0L E150	8F	WPT-311
1993	Sensor — Cam Shaft Position 5.0L E250	8F	WPT-311
2004-99	Sensor — Coolant Temperature E150/350, E450/550 Super Duty	2M	WPT-431
1998	Sensor — Coolant Temperature 4.2L E150/250	2M	WPT-206
1996-94	Sensor — Coolant Temperature 5.8L E150/350	2M	WPT-437
1995	Sensor — Coolant Temperature 4.9L	2M	WPT-437
	E150/350	1M	WPT-476
1995-94	Sensor — Coolant Temperature 5.0L	2M	WPT-437
1993	Sensor — Coolant Temperature	2M	WPT-437
1992-91	Sensor — Coolant Temperature 5.8L	2M	WPT-437
2003-01	Sensor — Crank Shaft Position 4.2L, 4.6L, 5.4L, 6.8L E150/350, E450/550 Super Duty	2F	WPT-759
2000-99	Sensor — Crank Shaft Position 4.6L	2F	WPT-579



WIRING PIGTAIL KITS LIGHT TRUCK

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
E Series — Cont'd			
2000-97	Sensor — Crank Shaft Position 4.2L, 5.4L, 6.8L	2F	WPT-579
1998-97	Sensor — Crank Shaft Position 4.6L	2F	WPT-579
2004-97	Sensor — Cylinder Head Temperature E150/250, E450/550 Super Duty	2M	WPT-338
2002-97	Sensor — Delta Pressure Feedback EGR 4.2L, 4.6L, 5.4L, 6.8L E150/350	3F	WPT-188
2002-96	Sensor — Delta Pressure Feedback EGR 4.9L, 5.0L, 5.4L, 5.8L, 6.8L, 7.3L, 7.5L E150/550	3F	WPT-188
1995	Sensor — Delta Pressure Feedback EGR E150/350	3M	WPT-458
1996	Sensor — EGR Valve Position E150/350	4M	WPT-386
1995-94	Sensor — EGR Valve Position 5.0L OHV E150	4M	WPT-386
1995-93	Sensor — EGR Valve Position 4.9L OHV E150/350	4M	WPT-386
1995-91	Sensor — EGR Valve Position 5.8L OHV E150/350	4M	WPT-386
1993	Sensor — EGR Valve Position E150/350	4M	WPT-386
	5.0L OHV E150/250	4M	WPT-386
2002-97	Sensor — Fuel Rail Temperature E150/550	2M	WPT-470
2003-99	Sensor — Intake Manifold Runner Control 4.2L E150/250	4F	WPT-347
1998	Sensor — Intake Manifold Runner Control E150/350	2M	WPT-146
	3F	WPT-569
2004-03	Sensor — Knock 4.6L E-150	2M	WPT-351
2002-00	Sensor — Knock E150/550	2M	WPT-351
1999	Sensor — Knock 5.4L E150/350	4F	WPT-225
1998-97	Sensor — Knock 4.2L E150/250	2M	WPT-410
1996-94	Sensor — Knock 6 Cyl. 4.9L (300)	2M	WPT-462
1995-94	Sensor — Knock 8 Cyl. 5.0L (302)	2M	WPT-462
2004-99	Sensor — Manifold Absolute Pressure (MAP) Diesel E-350, E-350 Econoline, E-450 Super Duty, E-550 Econoline Super Duty Cutaway	3F	WPT-282
1998-94	Sensor — Manifold Absolute Pressure (MAP) 7.3L Diesel	3M	WPT-263
1998	Sensor — Mass Air Flow E150/350	4F	WPT-225
1997	Sensor — Mass Air Flow 4.2L E150/250	2M	WPT-536
	E150/350	2M	WPT-536
1996	Sensor — Mass Air Flow E150/350	6M	WPT-102
1995	Sensor — Mass Air Flow 5.8L E150/350	4F	WPT-256
1995-94	Sensor — Mass Air Flow 4.9L E150/350	4F	WPT-256
2004-00	Sensor — Mass Air Flow — In-line (Female) 6.8L E-350, E-350 Econoline, E-450 Super Duty, E-550 Econoline Super Duty Cutaway	8F	WPT-712
2003-00	Sensor — Mass Air Flow — In-line (Female) 4.6L, 5.4L E150/350, E450 Super Duty	8F	WPT-712

WIRING PIGTAIL KITS

LIGHT TRUCK



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
E Series — Cont'd			
2003-99	Sensor — Mass Air Flow — In-line (Female) 4.2L E150/250	8F	WPT-712
2002	Sensor — Mass Air Flow — In-line (Female) 5.4L E-550 Econoline Super Duty Cutaway	8F	WPT-712
2002-00	Sensor — Mass Air Flow — In-line (Female) 6.8L E-550 Econoline Super Duty Cutaway	8F	WPT-712
2003-02	Sensor — O2 (HEGO/EGO) 4.2L E150/250	4M	WPT-742
1994	Sensor — Tachometer E150/350	2M	WPT-433
2003	Sensor — Throttle Position E150/350	3F	WPT-170
2002-01	Sensor — Throttle Position E150/450	3F	WPT-170
2000-97	Sensor — Throttle Position E150/350	3F	WPT-170
1995-94	Sensor — Throttle Position 4.9L, 7.5L E150/350	3M	WPT-445
	5.0L, 5.8L E150/350	3F	WPT-651
1993	Sensor — Throttle Position 4.9L, 5.0L, 5.8L, 7.3L, 7.5L E150/350	3F	WPT-651
1992-91	Sensor — Throttle Position 5.8L E150/350	3F	WPT-651
2004	Sensor — Transmission Range AT 4 Spd 4R75W E150/350, E450/550 Super Duty	12M	WPT-806
2004-97	Sensor — Transmission Range AT 4 Spd E40D E150/350, E450/550 Super Duty	12M	WPT-806
1996	Sensor — Transmission Range 5.0L	8M	WPT-389
1996-94	Sensor — Transmission Range AT 4 Spd	8M	WPT-389
2004-94	Solenoid — Brake Shift Park Interlock E150/350, E450/550 Super Duty	3M	WPT-210
2004-98	Solenoid — Canister Vent E150/350, E450/550 Super Duty	2M	WPT-322
1996-91	Solenoid — Canister Vent E150/350	2M	WPT-441
2004-98	Solenoid — EGR Vacuum Regulator E150/350, E450/550 Super Duty	2M	WPT-359
1996-94	Solenoid — EGR Vacuum Regulator 4.9L E150/350	2M	WPT-374
	5.0L E150	2M	WPT-374
1996-91	Solenoid — EGR Vacuum Regulator 5.8L E150/350	2M	WPT-374
1993	Solenoid — EGR Vacuum Regulator 5.0L E150/250	2M	WPT-374
1999-92	Speaker — Door (Front) E150/350	2M	WPT-416
2004-99	Speaker — Door (Rear) E150/350	2F	WPT-815
1997-95	Speaker — Door (Rear) E150/350	2M	WPT-416
2004-00	Speaker — Rear E150/350	2F	WPT-815
1999-92	Speaker — Rear E150/350	2M	WPT-416
2004-98	Switch — A/C Compressor Clutch Cycling E150/350, E450/550 Super Duty	4F	WPT-169
1996-93	Switch — A/C Compressor Clutch Cycling E150/350	2M	WPT-438



WIRING PIGTAIL KITS LIGHT TRUCK

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
E Series — Cont'd			
2003-97	Switch — A/C High Pressure E150/350, E450/550 Super Duty	4F	WPT-169
2003-98	Switch — A/C Pressure Cut Off E150/350, E450/550 Super Duty	4F	WPT-169
2004-95	Switch — Brake Pressure E150/350, E450/550 Super Duty	2M	WPT-372
1998-97	Switch — Brake Pressure	4M	WPT-511
1996-91	Switch — Coolant Temperature Sending Unit E150/350	1M	WPT-476
2004-92	Switch — Courtesy Lamp E150/350, E450/550 Super Duty	3F	WPT-213
1997	Switch — Courtesy Lamp E150/350	3M	WPT-446
1997-92	Switch — Courtesy Lamp E150/350	2N/A	WPT-471
2004-95	Switch — Courtesy Lamp — Sliding Door E150/350, E450/550 Super Duty	3M	WPT-4591
1997-95	Switch — Dimmer E150/350	6M	WPT-281
2004-95	Switch — Door Ajar / Interior Lamp E150/350, E450/550 Super Duty	2M	WPT-441
1996-92	Switch — Door Cylinder Disarm (Anti-Theft) E150/350	2M	WPT-428
1997	Switch — Door Lock (LH) E150/350	5M	WPT-527
1994-92	Switch — Door Lock (LH) E150/350	5M	WPT-792
1996-92	Switch — Door Lock (RH) E150/350	5M	WPT-744
1996-95	Switch — Gear Shift Select / Neutral Safety E150/350	8M	WPT-389
2003-93	Switch — Headlamp E150/350	9F	WPT-165
	Switch — Heater / A/C Blower (Front)	4M	WPT-103
2004-98	Switch — Heater A/C Blower (Rear) E150/350, E450/550 Super Duty	4M	WPT-103
	6M	WPT-369
2004-97	Switch — Heater A/C Temp Control E150/350, E450/550 Super Duty	3M	WPT-328
2004-93	Switch — Heater A/C Temp Control E150/350, E450/550 Super Duty	4M	WPT-344
1996-95	Switch — Hood Ajar E150/350	4M	WPT-152
2004-95	Switch — Ignition E150/350, E450/550 Super Duty	11M	WPT-368
2004-93	Switch — Inertia E150/350, E450/550 Super Duty	3M	WPT-446
	Switch — Low Vacuum Warning Diesel E-350, E-350 Econoline, E-450 Super Duty, E-550 Econoline Super Duty Cutaway	3M	WPT-350
1996-93	Switch — Message Center All	1M	WPT-407
2004-98	Switch — Multi Function E150/350, E450/550 Super Duty	11M	WPT-813
1996-93	Switch — Multi Function E150/350	11M	WPT-178
2003-01	Switch — Oil Sending Unit E150/350, E450/550 Super Duty	1M	WPT-439
1997	Switch — Oil Sending Unit 5.4L E150/350	1M	WPT-439
1996-91	Switch — Oil Sending Unit E150/350, E Super Duty	1M	WPT-616

WIRING PIGTAIL KITS

LIGHT TRUCK



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
E Series — Cont'd			
2004-97	Switch — Overdrive Cancel E150/350, E250/550 Super Duty	3F	WPT-229
2004	Switch — Park Brake E150/350, E450 Super Duty	1F	WPT-434
2003	Switch — Park Brake E150/350	2F	WPT-479
2002	Switch — Park Brake 5.4L, 6.8L, 7.3L E150/550	1F	WPT-371
2002-01	Switch — Park Brake 5.4L, 6.8L, 7.3L Stripped Chassis E350	1F	WPT-371
2000-97	Switch — Park Brake E150/350, Econoline Super Duty	1F	WPT-434
1996	Switch — Park Brake E150/350	1F	WPT-371
1995-94	Switch — Park Brake	1F	WPT-371
1997	Switch — Power Mirror E150/350, Econoline Super Duty	8M	WPT-252
1996-92	Switch — Power Mirror E150/350, Econoline Super Duty; w/o Door Trim Panels	8M	WPT-366
	E150/350, Econoline Super Duty; w/Door Trim Panels	8M	WPT-252
2001-00	Switch — Power Window — Driver E150/450	15M	WPT-302
1996-92	Switch — Power Window — Driver E150/350, Econoline Super Duty	10M	WPT-787
	Switch — Power Window — Passenger (Front)	5M	WPT-387
2004-92	Switch — Seat (Driver) E150/350, E450/550 Super Duty	8F	WPT-379
1996-92	Switch — Seat Lumbar E150/350, Econoline Super Duty; Oval Cavity	2F	WPT-473
2004-02	Switch — Sliding Door Contact E150/350, E450/550 Super Duty	4M	WPT-508
2001-92	Switch — Sliding Door Contact E150/450, Econoline Super Duty	4M	WPT-654
2004-92	Switch — Stop Lamp E150/350, E450/550 Super Duty	2M	WPT-197
2004-95	Test Connector — Diagnostic E Super Duty, E150/550	16F	WPT-615
2004-98	Trailer Tow — Vehicle Side E150/350, E450/550 Super Duty	6F	WPT-587
1996-94	Trailer Tow — Vehicle Side E150/350, Econoline Super Duty	7M	WPT-421
1995-94	Trailer Tow — Vehicle Side E150/350	4F	WPT-171
1994-92	Transmission 10-Way	12M	WPT-571
2003-99	Transmission 12-way E150/350, E450/550 Super Duty	12M	WPT-590
1995-93	Valve — Thermactor Air Diverter (TAD) E150/350	2M	WPT-146
2003-97	Valve — Vapor Management E150/350, E450/550 Super Duty	2M	WPT-545
Expedition			
2001-97	AC Compressor Clutch	2M	WPT-173
2002-97	Actuator — Door Lock	2M	WPT-312
2004-03	Actuator — Door Lock — Decklid/Liftgate	2M	WPT-381
2002-97	Actuator — Door Lock — Decklid/Liftgate	2M	WPT-312
2004-97	Actuator — Door Lock — LH — Front	2M	WPT-312
	Actuator — Door Lock — LH — Rear	2M	WPT-312
2002-97	Actuator — Door Lock — RH — Front	2M	WPT-312
2004-97	Actuator — Door Lock — RH — Rear	2M	WPT-312
2002-97	Actuator — Electronic Variable Orifice (EVO)	14M	WPT-666



WIRING PIGTAIL KITS LIGHT TRUCK

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
Expedition — Cont'd			
2000-97	Actuator — Electronic Variable Orifice (EVO)	2M	WPT-146
2004-03	Actuator — Liftgate Glass	4F	WPT-576
	Actuator — Speed Control	6F	WPT-271
2002-97	Actuator — Speed Control	10M	WPT-762
2003-02	Alternator	3M	WPT-118
2001-97	Alternator	1M	WPT-851
1999-97	Alternator	3M	WPT-119
2002-97	Bulkhead — Transmission — In-line (Female)	9F	WPT-570
2002-98	Bulkhead — Transmission — In-line (Male)	7F	WPT-567
2002-97	CD Changer	12M	WPT-164
		14M	WPT-296
2004-97	Capacitor — Ignition / Radio	1M	WPT-352
2004-00	Cigar Lighter	3F	WPT-329
2002-98	Cigar Lighter	1F	WPT-371
1997	Cigar Lighter	1M	WPT-476
2003-98	Clock	8F	WPT-100
1999-97	Coil — Ignition		
	4.6L	3M	WPT-526
1997	Coil — Ignition		
	5.4L	2F	WPT-579
2004-03	Control — Auxiliary A/C — Front		
	ATC/High Output AC	10F	WPT-575
	Control — Auxiliary A/C — Rear	10F	WPT-575
2002-99	Element — Heated Seat		
	Driver and Passenger Captain Chair	4M	WPT-307
2002-97	Fuel Injector	2M	WPT-372
	Fuel Pump / Sending Unit	8M	WPT-817
2000-97	Fuel Pump / Sending Unit	8M	WPT-172
1999-98	Fuel Pump / Sending Unit	1M	WPT-476
1999-97	Horn	1M	WPT-378
1998-97	Instrument Cluster	16M	WPT-202
1997	Instrument Cluster		
	Right	12M	WPT-208
2004-03	Junction Box — Relay	15F	WPT-791
2003	Junction Box — Relay		
	Center Connector Latch	12F	WPT-591
		4F	WPT-629
	Side Connector Latch	12F	WPT-691
		8F	WPT-643
2004-03	Lamp — Ash Tray	2F	WPT-342
2002-97	Lamp — Ash Tray	2M	WPT-370
2003	Lamp — CHMSL (Center High Mount Stop Lamp)	2F	WPT-195
2002-97	Lamp — CHMSL (Center High Mount Stop Lamp)	2F	WPT-530
	Lamp — Courtesy — Door	2F	WPT-212
	Lamp — Dome	3M	WPT-4591
2004-03	Lamp — Dome/ Map	3F	WPT-203
2002-97	Lamp — Dome/ Map	3M	WPT-4591
2002-99	Lamp — Fog / Driving	2F	WPT-107
1998-97	Lamp — Fog / Driving	2F	WPT-248
2003-01	Lamp — Front Cornering / Turn	3M	WPT-108
1998	Lamp — Front Turn/Marker	3M	WPT-109
2004-97	Lamp — Glove Box	2M	WPT-314
2004-03	Lamp — Headlamp — High/Low Beam — In-Line (Female)	7F	WPT-249
	Lamp — Headlamp Low Beam	2F	WPT-248
2002-98	Lamp — Headlamp- High/Low Beam	3M	WPT-110
2002-97	Lamp — Instrument	2M	WPT-597
2003	Lamp — License	4F	WPT-457
1998-97	Lamp — License	2N/A	WPT-149
2002-97	Lamp — Park/Turn/Stop	3M	WPT-108
2003-97	Lamp — Reverse	3M	WPT-105
2002-00	Lamp — Running Board	2M	WPT-254

WIRING PIGTAIL KITS

LIGHT TRUCK



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
Expedition — Cont'd			
1999-97	Lamp — Running Board	2M	WPT-432
2004-03	Lamp — Storage Compartment — Cargo	3F	WPT-203
2001-97	Lamp — Storage Compartment — Cargo	3M	WPT-4591
2003-97	Lamp — Under Hood	2M	WPT-370
2003	Liftgate/Tailgate Jumper — Inline (Female)	8F	WPT-642
2004-98	Mirror — Rearview (Electrochromatic)	6M	WPT-193
2004-03	Mirror — Sideview / Heated	16M	WPT-701
2002-97	Mirror — Sideview / Heated	10F	WPT-568
2002-00	Mirror — Sideview with Memory	12M	WPT-657
2002-99	Mirror — Sideview with Turn Signal	10F	WPT-568
2004-97	Mirror — Vanity	2F	WPT-479
2002-97	Module — Air Suspension	16M	WPT-644
2003	Module — Anti-theft	14F	WPT-728
2002-97	Module — Anti-theft	16M	WPT-632
	Module — Auto Lamps	5M	WPT-300
2002-99	Module — Daytime Running Lamp (DRL)	2M	WPT-322
2002-98	Module — Daytime Running Lamp (DRL)	8F	WPT-174
1998-97	Module — Daytime Running Lamp (DRL)	8M	WPT-298
2000-98	Module — Heated Seat (Drivers)	10F	WPT-156
2003	Module — Isolator Antenna	1M	WPT-700
2002-97	Module — Power Moonroof	6M	WPT-375
2004	Module — Remote Keyless Entry	6M	WPT-855
2003	Module — Remote Keyless Entry	14F	WPT-741
2002-99	Module — Remote Keyless Entry	8M	WPT-737
2004-03	Module — Reverse Park Aid (RPA)	12F	WPT-673
	Module — Seat Memory	2F	WPT-236
	Seat - Captain Chair	20F	WPT-255
2002-98	Module — Seat Memory	16M	WPT-242
2002-97	Module — Seat Memory	2M	WPT-374
2003	Module — Tire Pressure	16F	WPT-645
2002-97	Module — Transfer Case Shift Control	10M	WPT-667
2002	Module — Variable Speed Blower Controller	5F	WPT-153
2002-99	Module — Variable Speed Blower Controller	2M	WPT-727
2002-01	Module — Warning Chime / Beltminder		
	Polarity A	4F	WPT-582
	Polarity B	4F	WPT-670
2003	Monitor — Video/DVD	12F	WPT-760
2002-01	Monitor — Video/DVD	16M	WPT-332
	4F	WPT-582
2004-03	Motor — Adjustable Pedal	2M	WPT-370
2002-00	Motor — Adjustable Pedal	6M	WPT-444
2002-99	Motor — Adjustable Pedal	2F	WPT-544
2002-98	Motor — Air Suspension Compressor	4F	WPT-171
2003	Motor — Engine Cooling Fan	8F	WPT-174
1998-97	Motor — Engine Cooling Fan	2F	WPT-497
2000-97	Motor — Heater / AC Blower (Rear)	2M	WPT-113
2004-97	Motor — Heater / AC Blower (Auxiliary)	2M	WPT-104
2003-97	Motor — Heater / AC Blend Door	8F	WPT-100
2004-97	Motor — Idle Air Control	2M	WPT-357
2004-03	Motor — Moon Roof / Sun Roof	6M	WPT-375
	Motor — Power Seat Track	2F	WPT-404
2002-97	Motor — Power Seat Track	2M	WPT-370
2001-97	Motor — Power Seat Track	6F	WPT-599
2004-03	Motor — Power Window — LH — Front	2F	WPT-605
2002-97	Motor — Power Window — LH — Front		
	Oval Cavity	2F	WPT-473
	Motor — Power Window — LH — Rear	2F	WPT-473
2004-03	Motor — Power Window — RH — Front	2F	WPT-605
2002-97	Motor — Power Window — RH — Front		
	Oval Cavity	2F	WPT-473
2004-03	Motor — Power Window — RH — Rear	2F	WPT-605



WIRING PIGTAIL KITS LIGHT TRUCK

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
Expedition — Cont'd			
2002-97	Motor — Power Window — RH — Rear Oval Cavity	2F	WPT-473
2004-98	Motor — Rear Quarter Flip Window	2M	WPT-314
2004-03	Motor — Rear Window Wiper	8F	WPT-310
2002-97	Motor — Seat Height (Front)	2M	WPT-370
	Motor — Seat Height (Rear)	2M	WPT-370
2004-03	Motor — Seat Recline	3F	WPT-740
2004	Motor — Transfer Case Electronic Shift	8F	WPT-174
2002	Motor — Transfer Case Electronic Shift 8 Cavity	8F	WPT-174
2002-97	Motor — Transfer Case Electronic Shift 16 Cavity Inline	16M	WPT-326
2003-98	Motor — Windshield Washer Fluid Pump	2M	WPT-357
1997	Motor — Windshield Washer Fluid Pump	2M	WPT-355
2004-03	Motor — Windshield Wiper	12F	WPT-850
2002-97	Motor — Windshield Wiper	5F	WPT-158
	Power Point	2M	WPT-355
2003	Radio	12F	WPT-647
2002-99	Radio	20F	WPT-184
2002-98	Radio	16F	WPT-186
2002-97	Radio	12M	WPT-613
	Radio — Amplifier	8M	WPT-215
2004-99	Radio — Rear Audio Control	16M	WPT-332
2004-03	Relay — Air Suspension Compressor	4M	WPT-392
2002-97	Relay — Air Suspension Compressor Auto Adjustable Suspension; Load Leveling Rear Shocks	4M	WPT-831
1998-97	Relay — All Wheel Drive Clutch	4M	WPT-831
2002-97	Relay — Blower Motor	10F	WPT-367
2002-99	Relay — Clutch	5F	WPT-738
2004-03	Relay — Flasher	15F	WPT-820
1997	Relay — Flasher	10F	WPT-367
2002-97	Relay — Starter Motor	1M	WPT-616
2002-98	Resistor — Blower Motor (Auxiliary)	4F	WPT-115
1997	Resistor — Blower Motor (Auxiliary)	4F	WPT-755
2004-03	Resistor — Blower Motor (Front)	4F	WPT-726
2002-97	Resistor — Blower Motor (Rear)	4F	WPT-755
2002-99	Resistor — Daytime Running Lamp (DRL)	2M	WPT-322
2003	Sensor — A/C Temperature Control	3M	WPT-493
2004-03	Sensor — Adjustable Pedal	3M	WPT-241
2004-97	Sensor — Air Charge Temperature	2M	WPT-420
2004-03	Sensor — Air Suspension — LH — Front	3F	WPT-525
2002-00	Sensor — Air Suspension — LH — Rear	3F	WPT-525
2004-03	Sensor — Air Suspension — RH — Front	3F	WPT-525
2002-00	Sensor — Air Suspension — RH — Rear	3F	WPT-525
2003-99	Sensor — Ambient Temp	2M	WPT-437
1998-97	Sensor — Ambient Temp	2M	WPT-470
2002	Sensor — Barometric Absolute Pressure (BAP)	4F	WPT-169
2002-00	Sensor — Brake Fluid Level	3M	WPT-118
1999-97	Sensor — Brake Fluid Level	3M	WPT-4591
2004-03	Sensor — Brake Pressure	3F	WPT-230
2002	Sensor — Cam Shaft Position 5.4L	2F	WPT-759
2001	Sensor — Cam Shaft Position 4.6L	2F	WPT-759
2000-97	Sensor — Cam Shaft Position 4.6L, 5.4L	2F	WPT-579
1998-97	Sensor — Coolant Temperature 4.6L	2M	WPT-206
2004-03	Sensor — Crank Shaft Position 4.6L, 5.4L	2F	WPT-759

WIRING PIGTAIL KITS

LIGHT TRUCK



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
Expedition — Cont'd			
2002	Sensor — Crank Shaft Position		
	5.4L	2F	WPT-759
	4.6L	2F	WPT-579
2001	Sensor — Crank Shaft Position		
	4.6L	2F	WPT-759
	5.4L	2F	WPT-579
2000-97	Sensor — Crank Shaft Position		
	4.6L, 5.4L	2F	WPT-579
2004-97	Sensor — Cylinder Head Temperature	2M	WPT-338
	Sensor — Delta Pressure Feedback EGR	3F	WPT-188
2004-03	Sensor — EATC In Car Temperature	3M	WPT-4591
2002-99	Sensor — EATC In Car Temperature	2M	WPT-486
1998	Sensor — Fuel Rail Pressure	4F	WPT-169
1997	Sensor — Fuel Rail Pressure	3M	WPT-118
2003-99	Sensor — Intake Manifold Runner Control	2M	WPT-545
1998-97	Sensor — Intake Manifold Runner Control	2M	WPT-146
2004-03	Sensor — Knock		
	5.4L	2M	WPT-351
2002	Sensor — Knock	2M	WPT-351
2001-00	Sensor — Knock		
	4.6L	2M	WPT-351
2000-99	Sensor — Knock		
	5.4L	2M	WPT-351
2002-97	Sensor — Mass Air Flow	6M	WPT-102
	Sensor — Memory Seat Track Position		
	Driver and Passenger Captain Chair	3M	WPT-241
2002	Sensor — O2 (HEGO/EGO)		
	5.4L	4M	WPT-807
2001	Sensor — O2 (HEGO/EGO)	4M	WPT-807
1998-97	Sensor — O2 (HEGO/EGO)		
	Gold Terminals / A Polarity	4M	WPT-112
2004-03	Sensor — Power Steering Pressure	4F	WPT-808
	Sensor — Reverse Park Aid (RPA)	3F	WPT-223
2002-01	Sensor — Reverse Park Aid (RPA)	3F	WPT-230
2000	Sensor — Reverse Park Aid (RPA)	3F	WPT-223
2004-97	Sensor — Steering Rotation	4M	WPT-417
2004-03	Sensor — Sunload	6F	WPT-502
2002-99	Sensor — Sunload	2M	WPT-314
2002-97	Sensor — Throttle Position	3F	WPT-170
2003	Sensor — Transmission Range	12M	WPT-806
2002-98	Sensor — Transmission Range		
	AT 4 Spd 4R100	12M	WPT-806
2002-97	Sensor — Transmission Range		
	AT 4 Spd 4R70W	12M	WPT-806
2004-97	Sensor — Washer Fluid Level	2M	WPT-684
2004-03	Sensor — Yaw	6F	WPT-774
	Solenoid — Air Suspension (Front)	2M	WPT-589
2002-97	Solenoid — Air Suspension (Front)	2M	WPT-589
2004-03	Solenoid — Brake Shift Park Interlock	6F	WPT-639
2002-97	Solenoid — Brake Shift Park Interlock	3M	WPT-210
2004-97	Solenoid — Canister Vent	2M	WPT-322
	Solenoid — EGR Vacuum Regulator	2M	WPT-359
2004-03	Solenoid — Electronic Automatic Temperature Control (EATC)		
	ATC High Output AC	8F	WPT-275
1998-97	Solenoid — Pulse Vacuum 4x2 Hub (PVH)	2M	WPT-146
2002-97	Solenoid — Pulse Vacuum 4x4 Hub (PVH)	2M	WPT-441
	Speaker — Door (Front)	2M	WPT-416
2004-03	Speaker — Door (Rear)	2F	WPT-815
2002-97	Speaker — Door (Rear)	2M	WPT-416
2004-03	Speaker — Subwoofer	10M	WPT-667
	Switch — 4x4 Control	4F	WPT-465



WIRING PIGTAIL KITS LIGHT TRUCK

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
Expedition — Cont'd			
2002-97	Switch — 4x4 Control	4M	WPT-417
2003-98	Switch — A/C High Pressure	4F	WPT-169
2004-97	Switch — A/C Pressure Cut Off	4F	WPT-169
2002-97	Switch — Brake Pressure	2M	WPT-260
	Switch — Coolant Temperature Sending Unit	2M	WPT-431
2004	Switch — Deck Lid / Lift Gate Ajar	2M	WPT-441
2003	Switch — Deck Lid / Lift Gate Ajar	4M	WPT-704
2002-97	Switch — Deck Lid / Lift Gate Ajar	2M	WPT-146
2003-97	Switch — Door Ajar / Interior Lamp	2M	WPT-146
2004-98	Switch — Door Lock (LH)	7F	WPT-400
1997	Switch — Door Lock (LH)	7F	WPT-846
2004-03	Switch — Door Lock (RH)	8F	WPT-683
2002-97	Switch — Door Lock (RH)	7F	WPT-400
2004-03	Switch — Headlamp	8F	WPT-506
2004-00	Switch — Headlamp	12F	WPT-396
	6F	WPT-262
1999-98	Switch — Headlamp	4M	WPT-417
1997	Switch — Headlamp	6F	WPT-505
2004-03	Switch — Heated Seat — LH — Front	10F	WPT-559
2002-98	Switch — Heated Seat — LH — Front	8M	WPT-547
2004-03	Switch — Heated Seat — RH — Front	10F	WPT-559
2002-97	Switch — Heated Seat — RH — Front	8M	WPT-547
2004-03	Switch — Heater / A/C Blower (Front)	6M	WPT-363
2001-97	Switch — Heater / A/C Blower (Front)	4M	WPT-103
2004-03	Switch — Heater A/C Blower (Rear)	6M	WPT-363
2002-97	Switch — Heater A/C Blower (Rear)	6M	WPT-369
2004-03	Switch — Heater A/C Temp Control	8F	WPT-275
2002-97	Switch — Heater A/C Temp Control High Output AC	3F	WPT-447
	4M	WPT-448
2004-03	Switch — Ignition	7M	WPT-804
2002-97	Switch — Ignition	16M	WPT-577
2004-97	Switch — Inertia	3M	WPT-446
2002-97	Switch — Lift Gate Glass Ajar	2M	WPT-146
2004-03	Switch — Message Center	6F	WPT-586
	Switch — Moon Roof/ Sun Roof	8F	WPT-683
	Switch — Multi Function	8F	WPT-500
2003	Switch — Multi Function	10F	WPT-156
2002-99	Switch — Multi Function	9M	WPT-611
1999-97	Switch — Multi Function	7F	WPT-179
1997	Switch — Multi Function	9M	WPT-611
2004-03	Switch — Multifunction (Turn)	8F	WPT-310
2004-97	Switch — Oil Sending Unit	1M	WPT-439
2004-03	Switch — Overdrive Cancel	2F	WPT-226
2002-97	Switch — Overdrive Cancel	3F	WPT-229
2003	Switch — Park Brake	2F	WPT-479
2002-97	Switch — Park Brake	1F	WPT-434
	Switch — Power Mirror	8F	WPT-117
	Switch — Power Steering Pressure	2M	WPT-372
2004-03	Switch — Power Window — Driver	8F	WPT-498
2002-00	Switch — Power Window — Driver Lower	7F	WPT-426
2002-97	Switch — Power Window — Driver Upper	7F	WPT-546
2004-03	Switch — Power Window — Driver (Lockout) (421)	8F	WPT-561
	Switch — Power Window — LH — Rear	8F	WPT-498
2002-97	Switch — Power Window — Quarter Glass	7F	WPT-814
2002-00	Switch — Reverse Park Aid	8M	WPT-264
2004-03	Switch — Seat (Driver)	8M	WPT-399
	10F	WPT-604
2002-97	Switch — Seat (Driver)	8F	WPT-379

WIRING PIGTAIL KITS

LIGHT TRUCK



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
Expedition — Cont'd			
2004-03	Switch — Seat (Passenger)	10F	WPT-559
2003	Switch — Seat Memory	8F	WPT-699
	Switch — Speed Control Deactivation	2F	WPT-195
2004-03	Switch — Stop Lamp	6F	WPT-598
2002-99	Switch — Stop Lamp	5F	WPT-415
1998-97	Switch — Stop Lamp	2M	WPT-197
2004-03	Switch — Third Row Power Folding Seat (Front RH)	8F	WPT-680
	Switch — Third Row Power Folding Seat (Rear LH)	8F	WPT-680
	Switch — Traction Control	8M	WPT-220
2002-97	Terminal — Rear Window Defroster Grid	1F	WPT-371
2004-97	Test Connector — Diagnostic	16F	WPT-615
2004-99	Trailer Tow — Vehicle Side	4F	WPT-358
2002-99	Trailer Tow — Vehicle Side	7F	WPT-401
1998-97	Trailer Tow — Vehicle Side	7M	WPT-421
2004-03	Transceiver — Passive Anti-Theft (PATS)	4M	WPT-668
2002-97	Transceiver — Passive Anti-Theft (PATS)	4M	WPT-293
2000-98	Transmission 12-way	12M	WPT-590
2003-97	Valve — Vapor Management	2M	WPT-545
Explorer			
2004-03	AC Compressor Clutch	2F	WPT-159
2001-97	AC Compressor Clutch AT	2M	WPT-173
2001-93	AC Compressor Clutch	2M	WPT-173
2002	Actuator — Door Lock	2F	WPT-292
2004-02	Actuator — Door Lock — Decklid/Liftgate	2F	WPT-373
2001-95	Actuator — Door Lock — Decklid/Liftgate	2M	WPT-312
2004-95	Actuator — Door Lock — LH — Front	2M	WPT-312
2004-02	Actuator — Door Lock — LH — Rear	2F	WPT-292
2001-92	Actuator — Door Lock — LH — Rear	2M	WPT-312
2004-93	Actuator — Door Lock — RH — Front	2M	WPT-312
2004-02	Actuator — Door Lock — RH — Rear	2F	WPT-292
2001-94	Actuator — Door Lock — RH — Rear	2M	WPT-312
2004-02	Actuator — Liftgate Glass	2F	WPT-373
2004-01	Actuator — Speed Control	6F	WPT-271
2001-96	Actuator — Speed Control	10M	WPT-762
	Alternator 4.0L OHV	1M	WPT-852
2000-96	Alternator	3M	WPT-119
1994	Amplifier — Speed Control	6M	WPT-268
2001-96	Bulkhead — Transmission — In-line (Female)	9F	WPT-570
2001-98	Bulkhead — Transmission — In-line (Male)	7F	WPT-567
2004-93	CD Changer	14M	WPT-296
2000-95	CD Changer	12M	WPT-164
2004-01	Capacitor — Ignition / Radio	1M	WPT-352
1997-95	Cell Phone/Cell Phone Antenna — inline	12M	WPT-641
2004-02	Cigar Lighter	3F	WPT-329
2001-95	Cigar Lighter	1M	WPT-476
1997-95	Clock	8F	WPT-100
2004-02	Coil — Ignition 4.0L, 4.6L SOHC	4M	WPT-511
2001-96	Coil — Ignition 5.0L	3M	WPT-526
2000-92	Coil — Ignition 4.0L	4M	WPT-511
2003-02	Control — Auxiliary A/C — Front	10F	WPT-575
	Control — Auxiliary A/C — Rear	10F	WPT-575
2002	Control — Electronic Brake (Trailer Tow)	6F	WPT-599
2000-95	Control Head — Electronic Automatic Temperature (EATC)	13F	WPT-176
2004-98	Element — Heated Seat	4M	WPT-307
2001-99	Element — Heated Seat	2M	WPT-548

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
Explorer — Cont'd			
1994-92	Fuel Injector 4.0L	2M	WPT-372
2003-96	Fuel Pump / Sending Unit	8M	WPT-817
1999	Fuel Pump / Sending Unit Ethanol Fuel Only	4M	WPT-742
2001-96	Horn	1M	WPT-378
1994	Horn	1M	WPT-378
2004-03	Instrument Cluster	10M	WPT-676
2004-98	Instrument Cluster	12M	WPT-208
2001-96	Instrument Cluster	16M	WPT-202
2001-95	Instrument Cluster	10M	WPT-676
1994	Instrument Cluster	14M	WPT-383
2004-03	Junction Box — Relay	16F	WPT-645
2002	Junction Box — Relay	10F	WPT-516
	15M	WPT-732
	Polarity B; Square; Blue	16F	WPT-736
	Polarity A; Square; Green	16F	WPT-645
	Lamp — Ash Tray	2F	WPT-544
2001-95	Lamp — Ash Tray	2F	WPT-251
2004-99	Lamp — CHMSL (Center High Mount Stop Lamp)	2M	WPT-548
2001-93	Lamp — Courtesy — Door	2F	WPT-212
2001-99	Lamp — Courtesy — Reading (Rear)	1F	WPT-674
2001-95	Lamp — Dome	1F	WPT-265
1994-93	Lamp — Dome Polarity letter not specified; Short housing; Black	1F	WPT-674
	Polarity letter not specified; Long housing; Black	1F	WPT-265
2002	Lamp — Dome/ Map	3F	WPT-203
	Lamp — Fog / Driving	2M	WPT-148
2001-98	Lamp — Fog / Driving	2M	WPT-536
2004-02	Lamp — Front Cornering / Turn	3F	WPT-243
2001	Lamp — Front Cornering / Turn	3N/A	WPT-151
1998	Lamp — Front Turn	3M	WPT-105
2002	Lamp — Front Turn/Marker	3M	WPT-109
2001-95	Lamp — Front Turn/Marker	3M	WPT-108
2004-01	Lamp — Glove Box	2M	WPT-314
1994	Lamp — Glove Box	2M	WPT-314
2002	Lamp — Headlamp High Beam	2M	WPT-148
2004-01	Lamp — Headlamp Low Beam	2M	WPT-772
2003-93	Lamp — Headlamp High/Low Beam	3M	WPT-110
2002	Lamp — Headlamp High/Low Beam	2M	WPT-772
2004-96	Lamp — Instrument	2M	WPT-597
1994	Lamp — Instrument	4M	WPT-417
2004-98	Lamp — License	2N/A	WPT-471
1997-93	Lamp — License	2N/A	WPT-149
2004-95	Lamp — Map	1F	WPT-674
2004-02	Lamp — Overhead Console	4F	WPT-582
2001-95	Lamp — Park/Turn/Stop	3M	WPT-108
1994-92	Lamp — Park/Turn/Stop	3F	WPT-429
2004-02	Lamp — Park/Turn/Stop/Reverse — Inline (Male)	8M	WPT-631
1994-92	Lamp — Rear Park	3F	WPT-429
2001-98	Lamp — Rear Turn	3M	WPT-105
2001-95	Lamp — Reverse	3M	WPT-106
1994-93	Lamp — Reverse	2M	WPT-211
2001-99	Lamp — Running Board	2M	WPT-432
2002-01	Lamp — Side Marker	2F	WPT-150
2000-94	Lamp — Side Marker	2N/A	WPT-149
2004-93	Lamp — Storage Compartment — Cargo	2M	WPT-267
2002	Lamp — Storage Compartment — Cargo	3F	WPT-203
	Lamp — Under Hood	2M	WPT-4951
1997-96	Lamp — Under Hood	2M	WPT-370
1994	Lamp — Under Hood	2M	WPT-370

WIRING PIGTAIL KITS

LIGHT TRUCK



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
Explorer — Cont'd			
1994-93	Liftgate/Tailgate Jumper — Inline (Female)	8F	WPT-679
2001-97	Message Center (16 Way)	16M	WPT-341
2004-02	Mirror — Rearview (Electrochromatic)	6M	WPT-193
2001-93	Mirror — Rearview (Electrochromatic)	6M	WPT-563
2001-98	Mirror — Sideview	8M	WPT-382
2004-93	Mirror — Vanity	1F	WPT-562
2004-02	Module — Anti-theft	14F	WPT-728
2003-01	Module — Anti-theft	10F	WPT-156
2002	Module — Anti-theft	4M	WPT-668
2001-98	Module — Anti-theft	16F	WPT-645
2004-03	Module — Auto Lamps	6M	WPT-563
2002	Module — Auto Lamps	6F	WPT-502
2001-98	Module — Auto Lamps	6M	WPT-563
2004-02	Module — Daytime Running Lamp (DRL)	6F	WPT-455
2001-99	Module — Daytime Running Lamp (DRL)	6F	WPT-455
1998-96	Module — Daytime Running Lamp (DRL)	8M	WPT-298
2004	Module — EGR System	6F	WPT-435
2002	Module — Electronic Automatic Temperature Control (EATC)	16F	WPT-725
2001-99	Module — Heated Seat (Drivers)	10F	WPT-156
1999	Module — Heated Seat (Passenger)	10F	WPT-156
1997	Module — Instrument Panel Dimmer	6M	WPT-450
2004-02	Module — Power Moonroof	8M	WPT-624
1997-95	Module — Radio Power Antenna	8F	WPT-100
2004-02	Module — Remote Keyless Entry	14F	WPT-741
2001-95	Module — Remote Keyless Entry	8M	WPT-737
1994-93	Module — Remote Keyless Entry		
	Left	13M	WPT-612
	Right	13M	WPT-625
		16M	WPT-632
2004-02	Module — Seat Memory	2F	WPT-236
	Driver and Passenger Low Back; Connector Mounted on Single Slot of Module	16M	WPT-242
2003-02	Module — Seat Memory	10F	WPT-559
2002-98	Module — Seat Memory		
	Connector Mounted on Shared Slot of Module	16M	WPT-632
2001-98	Module — Seat Memory	2M	WPT-374
	Driver and Passenger; Connector Mounted on Single Slot of Module	16M	WPT-242
1997-95	Module — Seat Memory	4M	WPT-376
		9M	WPT-708
2002	Module — Tire Pressure	16F	WPT-581
2003-95	Module — Transfer Case Shift Control	10M	WPT-667
1994	Module — Transfer Case Shift Control	8M	WPT-313
2004-01	Module — Variable Speed Blower Controller		
	w/Dual Zone Automatic Temperature Control A/C	5F	WPT-153
2001-97	Module — Warning	12M	WPT-613
2001-00	Module — Warning Chime / Beltminder		
	Polarity A	4F	WPT-582
	Polarity B	4F	WPT-670
1994	Module — Warning Chime / Beltminder	7M	WPT-512
2004-02	Monitor — Video/DVD	20F	WPT-255
2003-02	Motor — Adjustable Pedal	2F	WPT-544
2004-98	Motor — Air Suspension Compressor	4F	WPT-756
2004	Motor — Electronic Throttle Control		
	4.0L SOHC	2F	WPT-837
1997-95	Motor — Heater / AC Blower (Rear)	2M	WPT-113
2004-02	Motor — Heater A/C Blower (Auxiliary)	2M	WPT-104
2001-98	Motor — Heater A/C Blower (Auxiliary)		
	Oval Cavity	2F	WPT-473
1999-95	Motor — Heater A/C Blower (Auxiliary)	2M	WPT-113
2003-95	Motor — Heater / AC Blend Door	8F	WPT-100
2003-98	Motor — Idle Air Control	2M	WPT-357

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
Explorer — Cont'd			
1994-92	Motor — Idle Air Control 4.0L OHV	2M	WPT-684
2004-98	Motor — Moon Roof / Sun Roof	8M	WPT-624
2004-02	Motor — Power Seat Track with Memory	8F	WPT-643
2001-95	Motor — Power Seat Track with Memory	8M	WPT-724
2004-02	Motor — Power Window — LH — Front	2F	WPT-605
2001-95	Motor — Power Window — LH — Front Oval Cavity	2F	WPT-473
2004-95	Motor — Power Window — LH — Rear	2M	WPT-428
2004-02	Motor — Power Window — RH — Front	2F	WPT-605
2001-95	Motor — Power Window — RH — Front Oval Cavity	2F	WPT-473
2004-02	Motor — Power Window — RH — Rear	2F	WPT-605
2001-95	Motor — Power Window — RH — Rear	2M	WPT-428
2004-98	Motor — Rear Window Washer Fluid Pump	2M	WPT-357
1997-95	Motor — Rear Window Washer Fluid Pump	2M	WPT-355
2004-02	Motor — Rear Window Wiper	8F	WPT-310
2002	Motor — Rear Window Wiper	3F	WPT-740
1997-95	Motor — Rear Window Wiper	8F	WPT-257
2004-02	Motor — Seat Lumbar	2M	WPT-478
2001-95	Motor — Seat Lumbar	2M	WPT-374
1994-93	Motor — Seat Lumbar	2M	WPT-478
2004-02	Motor — Transfer Case Electronic Shift 4WD	16M	WPT-326
2001-98	Motor — Transfer Case Electronic Shift 6 Cyl. 4.0L	16M	WPT-326
1998-95	Motor — Transfer Case Electronic Shift	8F	WPT-174
1997	Motor — Transfer Case Electronic Shift	16M	WPT-326
2004-98	Motor — Windshield Washer Fluid Pump	2M	WPT-357
1997-93	Motor — Windshield Washer Fluid Pump	2M	WPT-355
2004-02	Motor — Windshield Wiper	12F	WPT-850
2003-98	Motor — Windshield Wiper	5F	WPT-158
1997-96	Motor — Windshield Wiper	6M	WPT-297
2001-99	Motor — Windshield Wiper (Inline)	8M	WPT-172
2004-02	Power Point	3F	WPT-682
1999-95	Power Point	2M	WPT-355
2004-98	Radio	20F	WPT-184
2003-98	Radio	8F	WPT-185
		16F	WPT-186
2003-97	Radio	8M	WPT-155
2002-01	Radio	17F	WPT-157
2002-97	Radio	7M	WPT-154
2001-98	Radio	6M	WPT-614
2001-94	Radio	16M	WPT-198
1994	Radio	8M	WPT-646
2004-02	Radio — Amplifier	10M	WPT-667
2001-95	Radio — Amplifier	8M	WPT-215
1997-95	Radio — Amplifier	2M	WPT-478
1994-93	Radio — Amplifier	2M	WPT-469
2001-99	Radio — Rear Audio Control	14M	WPT-296
2001-95	Radio — Rear Audio Control	16M	WPT-332
2001-97	Relay — Flasher	5F	WPT-802
2004-02	Relay — Heated Windshield	10M	WPT-784
1994	Relay — Oil Level	5M	WPT-524
2000-99	Relay — Park Lamp	3M	WPT-108
2001-97	Relay — Starter Motor 4.0L	1M	WPT-616
1997-96	Relay — Starter Motor 5.0L OHV	1M	WPT-616
1994	Relay — Starter Motor	1M	WPT-616
2001-98	Relay — Torque on Demand (TOD)	5F	WPT-738

WIRING PIGTAIL KITS LIGHT TRUCK



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
Explorer — Cont'd			
1997-95	Relay — Torque on Demand (TOD) Standard Duty Suspension; Auto Adjustable Suspension	4M	WPT-831
2002	Relay — Trailer Tow	15M	WPT-732
2004-02	Resistor — Blower Motor (Auxiliary)	4F	WPT-726
2003-02	Resistor — Blower Motor (Front)	4F	WPT-726
2001-96	Resistor — Blower Motor (Front)	5M	WPT-635
2001-95	Resistor — Blower Motor (Front)	4M	WPT-114
	Resistor — Blower Motor (Rear)	4F	WPT-115
	4F	WPT-755
2004-02	Sensor — Adjustable Pedal	3M	WPT-241
2004-98	Sensor — Air Charge Temperature	2M	WPT-420
1997-95	Sensor — Air Charge Temperature	2M	WPT-433
1994-92	Sensor — Air Charge Temperature 4.0L	2M	WPT-428
1997-95	Sensor — Air Suspension — LH — Front	4M	WPT-152
2004-95	Sensor — Ambient Temp	2M	WPT-437
2001-95	Sensor — Anti-theft Ignition Tamper	2N/A	WPT-471
2003-98	Sensor — Brake Fluid Level	3M	WPT-118
1996	Sensor — Brake Fluid Level	3M	WPT-4591
2004-02	Sensor — Brake Pressure	3F	WPT-230
2003-02	Sensor — Cam Shaft Position	2M	WPT-336
2001	Sensor — Cam Shaft Position 4.0L, 5.0L	2F	WPT-579
2000-99	Sensor — Cam Shaft Position 4.0L	3M	WPT-681
	5.0L	2F	WPT-579
2000-97	Sensor — Cam Shaft Position 6 Cyl. 4.0L (245)	2M	WPT-531
1998-97	Sensor — Cam Shaft Position 4.0L	3M	WPT-681
	5.0L	3M	WPT-196
1996	Sensor — Cam Shaft Position 4.0L, 5.0L	3M	WPT-196
1995	Sensor — Cam Shaft Position	3M	WPT-681
2001-99	Sensor — Catalyst Monitor 4.0L	4M	WPT-807
1996-95	Sensor — Catalyst Monitor	4M	WPT-123
2004-96	Sensor — Coolant Temperature	2M	WPT-206
1995	Sensor — Coolant Temperature	2M	WPT-437
1994-92	Sensor — Coolant Temperature 4.0L	2M	WPT-437
2002	Sensor — Crank Shaft Position 4.6L	2F	WPT-759
2001-97	Sensor — Crank Shaft Position 6 Cyl. 4.0L (245)	2M	WPT-531
1994-92	Sensor — Crank Shaft Position 4.0L	2M	WPT-372
2004-03	Sensor — Cylinder Head Temperature	2M	WPT-338
2002	Sensor — Cylinder Head Temperature 4.6L	2M	WPT-338
1995-92	Sensor — Delta Pressure Feedback EGR	3M	WPT-458
2004-02	Sensor — EATC In Car Temperature	2F	WPT-294
2001-95	Sensor — EATC In Car Temperature	2M	WPT-486
2001-96	Sensor — EGR Valve Position	3F	WPT-427
2003	Sensor — Fuel Rail Pressure	3M	WPT-118
1998-97	Sensor — Intake Manifold Runner Control	2M	WPT-146
2003-99	Sensor — Knock	2M	WPT-351
1998-97	Sensor — Knock	4F	WPT-225
2001-98	Sensor — Low Coolant	2M	WPT-684
2002-97	Sensor — Mass Air Flow	6M	WPT-102



WIRING PIGTAIL KITS LIGHT TRUCK

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
Explorer — Cont'd			
1994-93	Sensor — Mass Air Flow 4.0L	4M	WPT-511
2001-96	Sensor — Mass Air Flow — In-line (Male) 4.0L, 5.0L	4F	WPT-330
2003-02	Sensor — O2 (HEGO/EGO) Gold Terminals / B Polarity	4M	WPT-111
2001-98	Sensor — O2 (HEGO/EGO) 4.0L	4M	WPT-807
1997-95	Sensor — O2 (HEGO/EGO) Gold Terminals / B Polarity	4M	WPT-111
	Gold Terminals / A Polarity	4M	WPT-112
1996-95	Sensor — O2 (HEGO/EGO)	4M	WPT-112
2001-95	Sensor — Oil Level	3M	WPT-235
1997	Sensor — Power Steering Pressure	2M	WPT-260
2004-99	Sensor — Reverse Park Aid (RPA)	3F	WPT-223
2004-02	Sensor — Seat Track Position	2F	WPT-490
2001-98	Sensor — Steering Rotation	4M	WPT-417
2002-97	Sensor — Throttle Position	3F	WPT-170
1995-92	Sensor — Throttle Position	3M	WPT-445
2004-02	Sensor — Transmission Range AT	12M	WPT-806
2001-98	Sensor — Transmission Range 5.0L	8M	WPT-389
2001-95	Sensor — Transmission Range AT	8M	WPT-389
1996	Sensor — Transmission Range 4.0L, 5.0L	8M	WPT-389
2004-96	Sensor — Washer Fluid Level	2M	WPT-684
2004-95	Solenoid — Air Suspension (Front)	2M	WPT-589
2004-96	Solenoid — Canister Vent	2M	WPT-322
2003-96	Solenoid — EGR Vacuum Regulator	2M	WPT-359
2001	Solenoid — EGR Vacuum Regulator Stripped Chassis	2M	WPT-359
1995	Solenoid — EGR Vacuum Regulator	2M	WPT-374
2002	Solenoid — Electronic Automatic Temperature Control (EATC) Dual Zone Auto Temp Control AC	8F	WPT-275
1997-95	Solenoid — Pulse Vacuum 4x2 Hub (PVH)	2M	WPT-146
1999-98	Solenoid — Pulse Vacuum 4x4 Hub (PVH)	3F	WPT-754
2004-99	Speaker — Door (Front)	2F	WPT-373
1998-95	Speaker — Door (Front)	2M	WPT-416
2004-02	Speaker — Door (Rear)	2F	WPT-373
2001-99	Speaker — Door (Rear)	2F	WPT-373
2004-02	Speaker — Front 4 Door	2M	WPT-416
1994-93	Speaker — Front	2M	WPT-416
2002	Speaker — Rear	2F	WPT-373
2001-97	Speaker — Rear	2M	WPT-416
2001-99	Speaker — Reverse Park Aid (RPA)	2M	WPT-675
2004-02	Speaker — Subwoofer	10M	WPT-667
2001-95	Switch — 4x4 Control	4M	WPT-417
2003-97	Switch — A/C Compressor Clutch Cycling	4F	WPT-169
1997-94	Switch — A/C Compressor Clutch Cycling	2M	WPT-438
2000-98	Switch — A/C High Pressure	4F	WPT-169
2002	Switch — A/C Pressure Cut Off	4F	WPT-735
2001-95	Switch — A/C Pressure Cut Off	4F	WPT-169
2004-03	Switch — Adjustable Pedal	7F	WPT-181
2001-95	Switch — Air Suspension	3M	WPT-617
2002	Switch — Brake Deactivation	2F	WPT-373
2004-96	Switch — Brake Pressure	2M	WPT-260
2003-02	Switch — Clutch Pedal Position	5M	WPT-721
2001-95	Switch — Clutch Pedal Position	6M	WPT-518

WIRING PIGTAIL KITS

LIGHT TRUCK



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
Explorer — Cont'd			
1994	Switch — Clutch Pedal Position	6M	WPT-507
1997	Switch — Coolant Temperature Sending Unit 4.0L, 5.0L	2M	WPT-431
1994-92	Switch — Coolant Temperature Sending Unit	1M	WPT-476
1994-93	Switch — Courtesy Lamp	3F	WPT-213
2004-03	Switch — Deck Lid / Lift Gate Ajar	2F	WPT-489
2002	Switch — Deck Lid / Lift Gate Ajar	2M	WPT-146
2001-99	Switch — Deck Lid / Lift Gate Ajar	2M	WPT-441
1998-95	Switch — Deck Lid / Lift Gate Ajar	2M	WPT-146
2002-98	Switch — Dimmer	9M	WPT-238
1997	Switch — Dimmer	4M	WPT-556
1996-95	Switch — Dimmer	6M	WPT-449
2002	Switch — Door Ajar / Interior Lamp	2F	WPT-489
2001-95	Switch — Door Ajar / Interior Lamp	1F	WPT-499
2004-02	Switch — Door Lock (Cargo)	8F	WPT-683
	Switch — Door Lock (LH)	8F	WPT-683
2001-98	Switch — Door Lock (LH)	7F	WPT-325
1997-95	Switch — Door Lock (LH)	5M	WPT-527
2004	Switch — Door Lock (RH)	7F	WPT-321
2004-02	Switch — Door Lock (RH)	8F	WPT-683
2001-95	Switch — Door Lock (RH)	7F	WPT-321
2004-95	Switch — Fog Lamp	6M	WPT-259
2004-02	Switch — Headlamp	6F	WPT-262
2001-95	Switch — Headlamp	11F	WPT-187
	Switch — Heated Back Light (Rear Defrost)	6M	WPT-258
1994	Switch — Heated Back Light (Rear Defrost)	5M	WPT-377
2004	Switch — Heated Seat — LH — Front	8M	WPT-547
2002-99	Switch — Heated Seat — LH — Front	8M	WPT-547
2001-99	Switch — Heated Seat — RH — Front	8M	WPT-547
2003-02	Switch — Heater / A/C Blower (Front) Auxillary	6M	WPT-363
2003-98	Switch — Heater / A/C Blower (Front) Main	4M	WPT-103
2003-02	Switch — Heater A/C Blower (Rear)	6M	WPT-363
1999-98	Switch — Heater A/C Blower (Rear)	8F	WPT-117
2004-02	Switch — Heater A/C Temp Control Manual AC	8F	WPT-275
2001-97	Switch — Heater A/C Temp Control ATC AC	3M	WPT-328
2001-95	Switch — Heater A/C Temp Control High Output AC	3M	WPT-328
	4M	WPT-448
1999-95	Switch — Hood Ajar	4M	WPT-152
2004-02	Switch — Ignition	7M	WPT-804
2001-98	Switch — Ignition	15M	WPT-475
1997-95	Switch — Ignition	11M	WPT-491
2004-93	Switch — Inertia	3M	WPT-446
2004-02	Switch — Lift Gate Glass Ajar	2M	WPT-146
2001-95	Switch — Lift Gate Glass Ajar	2M	WPT-441
2004-02	Switch — Message Center	6F	WPT-586
2001-95	Switch — Message Center	8F	WPT-100
1999	Switch — Message Center	12M	WPT-613
2004-02	Switch — Moon Roof/ Sun Roof Mini Console	6F	WPT-600
2001-95	Switch — Moon Roof/ Sun Roof	5M	WPT-527
2003-02	Switch — Multi Function	10F	WPT-156
2002	Switch — Multi Function	8F	WPT-500
2001-95	Switch — Multi Function	7F	WPT-179
	9M	WPT-611
1999	Switch — Multi Function	11M	WPT-178

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
Explorer — Cont'd			
2004-02	Switch — Multifunction (Turn)		
	Right	8F	WPT-310
	Left	8F	WPT-500
2004	Switch — Neutral Tow	1F	WPT-309
2004-02	Switch — Neutral Tow	2F	WPT-294
2001-96	Switch — Neutral Tow	1F	WPT-309
2003-02	Switch — Oil Sending Unit	1M	WPT-439
1998-95	Switch — Oil Sending Unit	1M	WPT-616
2004-95	Switch — Overdrive Cancel	2F	WPT-226
2002	Switch — Park Brake	1M	WPT-488
2001-97	Switch — Park Brake	1F	WPT-434
1996-95	Switch — Park Brake	1M	WPT-488
2004-02	Switch — Power Mirror	8M	WPT-240
2001-95	Switch — Power Mirror	8M	WPT-313
1997	Switch — Power Steering Pressure	2M	WPT-372
2004-02	Switch — Power Window — Driver	8F	WPT-498
	6F	WPT-600
2001-95	Switch — Power Window — Driver		WPT-558
2004-02	Switch — Power Window — LH — Rear	6F	WPT-600
1994-92	Switch — Power Window — LH — Rear	5M	WPT-387
2004-02	Switch — Power Window — Passenger (Front)	8F	WPT-498
	6F	WPT-600
2001-95	Switch — Power Window — Passenger (Front)	7F	WPT-325
2002	Switch — Power Window — Quarter Glass	6F	WPT-600
2004	Switch — Power Window — RH — Rear	7F	WPT-321
2004-02	Switch — Power Window — RH — Rear	6F	WPT-600
2001-95	Switch — Power Window — RH — Rear	7F	WPT-321
1994-92	Switch — Power Window — RH — Rear	5M	WPT-387
2001-99	Switch — Reverse Park Aid	6F	WPT-285
2004-02	Switch — Seat (Driver)	8M	WPT-399
2004-03	Switch — Seat (Passenger)	8M	WPT-399
2001-95	Switch — Seat Lumbar		
	Oval Cavity	2F	WPT-473
2004-02	Switch — Seat Memory	6F	WPT-285
1999-98	Switch — Service Interval Reset	8F	WPT-100
1994	Switch — Speed Control	8F	WPT-311
2004-01	Switch — Speed Control Deactivation	2M	WPT-260
2002	Switch — Speed Control Deactivation	2F	WPT-195
2004-02	Switch — Stop Lamp	2F	WPT-373
2001-94	Switch — Stop Lamp	2M	WPT-197
1994	Switch — Turn Signal / Windshield Wiper / Washer	9M	WPT-472
2001-95	Switch — Wiper Washer — Rear	6M	WPT-246
2004-95	Terminal — Rear Window Defroster Grid	1F	WPT-371
1993	Terminal — Rear Window Defroster Grid	1F	WPT-371
2004-95	Test Connector — Diagnostic	16F	WPT-615
1997-96	Test Connector — Tachometer	2F	WPT-497
1994-93	Test Connector — Tachometer	2F	WPT-353
2004	Trailer Tow — Vehicle Side	8M	WPT-737
2003-02	Trailer Tow — Vehicle Side	7F	WPT-401
2003-96	Trailer Tow — Vehicle Side	4F	WPT-358
2004-03	Transceiver — Passive Anti-Theft (PATS)	4F	WPT-261
2002-98	Transceiver — Passive Anti-Theft (PATS)	4M	WPT-293
2001-97	Transmission 16-way		
	4.0L	13M	WPT-585
1996	Transmission 16-way		
	4.0L OHV	13M	WPT-585
2004-01	Valve — Vapor Management	2M	WPT-545
2002-97	Valve — Vapor Management		
	6 Cyl. 4.0L	2M	WPT-545
2001-96	Valve — Vapor Management		
	8 Cyl. 5.0L	2M	WPT-545

WIRING PIGTAIL KITS

LIGHT TRUCK



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
Explorer Sport			
2001	AC Compressor Clutch	2M	WPT-173
2004-01	Actuator — Door Lock — Decklid/Liftgate	2M	WPT-312
2003-01	Actuator — Door Lock — LH — Front	2M	WPT-312
2002	Actuator — Door Lock — LH — Rear	2F	WPT-292
2003-01	Actuator — Door Lock — RH — Front	2M	WPT-312
2002	Actuator — Door Lock — RH — Rear	2F	WPT-292
2003-01	Actuator — Speed Control	10M	WPT-762
2002-01	Actuator — Speed Control	6F	WPT-271
2003-01	Alternator	3M	WPT-119
	Capacitor — Ignition / Radio	1M	WPT-352
	Cigar Lighter	1M	WPT-476
	Coil — Ignition		
	4.0L SOHC	4M	WPT-207
2003	Element — Heated Seat		
	Driver and Passenger Low Back	4M	WPT-307
2002-01	Fuel Pump / Sending Unit	8M	WPT-817
2003-01	Instrument Cluster	16M	WPT-202
	10M	WPT-676
	Lamp — CHMSL (Center High Mount Stop Lamp)	2M	WPT-548
2002-01	Lamp — Dome	1F	WPT-265
2003-01	Lamp — Fog / Driving	2F	WPT-107
2002	Lamp — Front Cornering / Turn	3M	WPT-109
2001	Lamp — Front Cornering / Turn	3N/A	WPT-151
2003-01	Lamp — Front Turn/Marker	3M	WPT-108
2002-01	Lamp — Glove Box	2M	WPT-314
	Lamp — Headlamp High Beam	2M	WPT-148
2003-01	Lamp — Headlamp High/Low Beam	3M	WPT-110
	Lamp — Instrument	2M	WPT-597
	Lamp — License	2N/A	WPT-471
	Lamp — Map	1F	WPT-674
	Lamp — Park/Turn/Stop	3M	WPT-108
2003-02	Lamp — Reverse	3M	WPT-105
2003-01	Mirror — Sideview	8M	WPT-382
	Module — Anti-theft	16F	WPT-645
	10F	WPT-156
2003-02	Module — Auto Lamps	6M	WPT-563
2003-01	Module — Daytime Running Lamp (DRL)	6F	WPT-455
2003	Module — Heated Seat (Drivers)	12F	WPT-503
	Module — Heated Seat (Passenger)	12F	WPT-503
2001	Module — Remote Keyless Entry	8M	WPT-737
2002-01	Module — Variable Speed Blower Controller	5F	WPT-153
2003-01	Module — Warning Chime / Beltminder		
	Polarity A	4F	WPT-582
	Polarity B	4F	WPT-670
	Motor — Heater/ AC Blend Door	8F	WPT-100
	Motor — Idle Air Control	2M	WPT-357
2002-01	Motor — Moon Roof / Sun Roof	8M	WPT-624
2003-01	Motor — Power Window — LH — Front		
	Oval Cavity	2F	WPT-473
	Motor — Power Window — RH — Front	2F	WPT-473
2003-02	Motor — Rear Window Wiper	3M	WPT-4591
2003-01	Motor — Seat Lumbar	2M	WPT-374
	Motor — Transfer Case Electronic Shift	8F	WPT-174
	Motor — Windshield Washer Fluid Pump	2M	WPT-357
	Motor — Windshield Wiper	5F	WPT-158
	Power Point		
	In Ash Receptacle	2M	WPT-355
	Radio	16F	WPT-186
2002-01	Radio	8F	WPT-185
	7M	WPT-154



WIRING PIGTAIL KITS LIGHT TRUCK

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
Explorer Sport — Cont'd			
2002-01	Radio — Cont'd	8M	WPT-155
	17F	WPT-157
	Relay — Trailer Tow	15M	WPT-732
2003-01	Resistor — Blower Motor (Front)	4M	WPT-114
2001	Resistor — Blower Motor (Rear)	4F	WPT-755
2003-01	Sensor — Ambient Temp	2M	WPT-433
	Sensor — Brake Fluid Level	3M	WPT-118
	Sensor — Cam Shaft Position 4.0L SOHC	2M	WPT-531
2003-02	Sensor — Catalyst Monitor	4M	WPT-112
2003-01	Sensor — Coolant Temperature	2M	WPT-206
	Sensor — Crank Shaft Position 4.0L SOHC	2M	WPT-531
2003-02	Sensor — Delta Pressure Feedback EGR	3F	WPT-188
2003-01	Sensor — Knock	2M	WPT-351
2002-01	Sensor — Mass Air Flow	6M	WPT-102
2003-01	Sensor — O2 (HEGO/EGO) 4.0L SOHC	4M	WPT-807
	Sensor — Throttle Position	3F	WPT-170
	Sensor — Transmission Range AT	12M	WPT-806
2002-01	Solenoid — Canister Vent	2M	WPT-322
2003-01	Solenoid — EGR Vacuum Regulator	2M	WPT-359
	Speaker — Door (Front)	2F	WPT-373
	Speaker — Door (Rear)	2F	WPT-373
	Speaker — Subwoofer	10M	WPT-667
	Switch — 4x4 Control	4M	WPT-417
	Switch — A/C Compressor Clutch Cycling	4F	WPT-169
	Switch — A/C High Pressure	4F	WPT-169
2002-01	Switch — A/C Pressure Cut Off	4F	WPT-169
	Switch — Brake Pressure	2M	WPT-260
2003-01	Switch — Clutch Pedal Position	6M	WPT-518
	Switch — Deck Lid / Lift Gate Ajar	2M	WPT-441
2003	Switch — Door Ajar / Interior Lamp	1M	WPT-378
2001	Switch — Door Ajar / Interior Lamp	1M	WPT-378
2003-01	Switch — Door Lock (LH)	8F	WPT-683
	Switch — Door Lock (RH)	8F	WPT-683
	Switch — Fog Lamp	6M	WPT-259
	Switch — Headlamp	11F	WPT-187
	Switch — Headlamp Dimmer	9M	WPT-238
2003	Switch — Heated Seat — LH — Front	8M	WPT-218
2004-03	Switch — Heated Seat — RH — Front	8M	WPT-218
2003-02	Switch — Heater / A/C Blower (Front)	4M	WPT-103
2003-01	Switch — Heater A/C Temp Control In Ash Receptacle	3M	WPT-328
	4M	WPT-448
	Switch — Ignition	15M	WPT-475
	Switch — Keyless Entry	8F	WPT-833
	Switch — Moon Roof/ Sun Roof	5M	WPT-527
	Switch — Multi Function	9M	WPT-611
2002-01	Switch — Multi Function	7F	WPT-179
2003-01	Switch — Neutral Tow	2F	WPT-294
	Switch — Oil Sending Unit	1M	WPT-439
	Switch — Overdrive Cancel	2F	WPT-226
2002-01	Switch — Park Brake	1F	WPT-434
2003-01	Switch — Power Mirror	8M	WPT-313
	Switch — Power Window — Driver	8F	WPT-498
2002	Switch — Power Window — LH — Rear	6F	WPT-600
2003-01	Switch — Power Window — Passenger (Front)	6F	WPT-600
2002	Switch — Power Window — RH — Rear	6F	WPT-600
2003-01	Switch — Seat (Driver)	8M	WPT-399

WIRING PIGTAIL KITS

LIGHT TRUCK



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
Explorer Sport — Cont'd			
2003	Switch — Seat (Passenger)	8M	WPT-399
	Switch — Seat Lumbar		
	Oval Cavity	2F	WPT-473
2003-01	Switch — Stop Lamp	5F	WPT-415
	Switch — Wiper Washer — Rear	6M	WPT-246
2003-02	Terminal — Rear Window Defroster Grid	1F	WPT-434
2001	Terminal — Rear Window Defroster Grid	1F	WPT-371
2003-01	Test Connector — Diagnostic	16F	WPT-615
2002-01	Trailer Tow — Vehicle Side	4F	WPT-358
2003	Transceiver — Passive Anti-Theft (PATS)	4F	WPT-261
2002-01	Transceiver — Passive Anti-Theft (PATS)	4F	WPT-467
2003-01	Valve — Vapor Management	2M	WPT-545
Explorer Sport Trac			
2002-01	AC Compressor Clutch	2M	WPT-173
2003-01	Actuator — Door Lock — LH — Front	2M	WPT-312
2004-01	Actuator — Door Lock — LH — Rear	2M	WPT-312
	Actuator — Door Lock — RH — Front	2M	WPT-312
	Actuator — Door Lock — RH — Rear	2M	WPT-312
2005-01	Actuator — Speed Control	10M	WPT-762
2005	Alternator	1M	WPT-852
2003-01	Capacitor — Ignition / Radio	1M	WPT-352
2004-01	Cigar Lighter	1M	WPT-476
	Coil — Ignition		
	4.0L SOHC	4M	WPT-207
2004-03	Element — Heated Seat	4M	WPT-307
2002-01	Fuel Injector	2M	WPT-372
	Fuel Pump / Sending Unit	8M	WPT-817
2004-01	Instrument Cluster	16M	WPT-202
	10M	WPT-676
2004	Lamp — Dome	1F	WPT-674
2003-01	Lamp — Dome		
	Polarity letter not specified; Long housing; Black	1F	WPT-265
	Polarity letter not specified; Short housing; Black	1F	WPT-674
2004-01	Lamp — Fog / Driving	2F	WPT-107
2003-01	Lamp — Front Turn/Marker	3M	WPT-108
	Lamp — Headlamp- High/Low Beam	3M	WPT-110
2004-01	Lamp — Instrument	2M	WPT-597
2001	Lamp — License	2N/A	WPT-149
2005-01	Lamp — Map	1F	WPT-674
2003-01	Lamp — Park/Turn/Stop	3M	WPT-109
2001	Lamp — Rear Turn	3M	WPT-105
2003-01	Lamp — Reverse	3M	WPT-106
2001	Lamp — Storage Compartment — Cargo	3M	WPT-214
2003-01	Module — Anti-theft	16F	WPT-645
2005-04	Module — Auto Lamps	6M	WPT-193
2003-02	Module — Auto Lamps	6M	WPT-563
2004-01	Module — Daytime Running Lamp (DRL)	6F	WPT-455
2004-03	Module — Heated Seat (Drivers)	12F	WPT-503
	Module — Heated Seat (Passenger)	12F	WPT-503
2001	Module — Remote Keyless Entry	8M	WPT-737
2005-01	Module — Warning Chime / Beltminder		
	Polarity B	4F	WPT-670
2003-01	Module — Warning Chime / Beltminder		
	Polarity A	4F	WPT-582
2002	Motor — Heater / AC Blower (Rear)	2M	WPT-113
2001	Motor — Heater / AC Blend Door	8F	WPT-100
2003-01	Motor — Idle Air Control	2M	WPT-357
	Motor — Moon Roof / Sun Roof	8M	WPT-624
2004-01	Motor — Power Window — LH — Front		
	Oval Cavity	2F	WPT-473

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
Explorer Sport Trac — Cont'd			
2004-01	Motor — Power Window — LH — Rear	2M	WPT-428
	Motor — Power Window — RH — Front		
	Oval Cavity	2F	WPT-473
	Motor — Power Window — RH — Rear	2M	WPT-428
2004-03	Motor — Seat Lumbar	2M	WPT-374
2004-01	Motor — Transfer Case Electronic Shift	8F	WPT-174
	Motor — Windshield Washer Fluid Pump	2M	WPT-357
2003-01	Motor — Windshield Wiper	5F	WPT-158
2004-01	Power Point		
	In Ash Receptacle	2M	WPT-355
2003-01	Radio	7M	WPT-154
	16F	WPT-186
2002-01	Radio	8M	WPT-155
	8F	WPT-185
2002	Radio — Amplifier	10F	WPT-156
	2F	WPT-236
2004-01	Resistor — Blower Motor (Front)	4M	WPT-114
2003-02	Resistor — Blower Motor (Rear)	4F	WPT-115
2001	Resistor — Blower Motor (Rear)	4F	WPT-755
2004-01	Sensor — Ambient Temp	2M	WPT-433
2003-01	Sensor — Brake Fluid Level	3M	WPT-118
2003	Sensor — Cam Shaft Position		
	4.0L SOHC	2M	WPT-531
2002	Sensor — Cam Shaft Position		
	4.0L SOHC	2M	WPT-552
2001	Sensor — Cam Shaft Position		
	4.0L Before 7/24/00	2M	WPT-531
	4.0L From 7/24/00	2M	WPT-552
2003-01	Sensor — Catalyst Monitor	4M	WPT-112
2004	Sensor — Coolant Temperature	2M	WPT-206
2004-02	Sensor — Crank Shaft Position		
	4.0L SOHC Tin Terminal	2M	WPT-552
2003	Sensor — Crank Shaft Position		
	4.0L SOHC Gold Terminal	2M	WPT-531
2001	Sensor — Crank Shaft Position		
	4.0L Before 7/24/00	2M	WPT-531
	4.0L From 7/24/00	2M	WPT-552
2003-02	Sensor — Delta Pressure Feedback EGR	3F	WPT-188
2004-01	Sensor — Knock	2M	WPT-351
	Switch — Overdrive Cancel	2F	WPT-226
2003-01	Sensor — Mass Air Flow	6M	WPT-102
2004-01	Sensor — O ₂ (HEGO/EGO)		
	4.0L SOHC	4M	WPT-807
2003-01	Sensor — Throttle Position	3F	WPT-170
2004-01	Sensor — Transmission Range		
	AT	12M	WPT-806
	Solenoid — Brake Shift Park Interlock	3M	WPT-210
	Solenoid — Canister Vent	2M	WPT-322
2005-04	Solenoid — EGR Vacuum Regulator	2M	WPT-359
2004-01	Speaker — Door (Front)	2F	WPT-373
2005-01	Speaker — Door (Rear)	2F	WPT-373
2001	Speaker — Subwoofer	10M	WPT-667
2004-01	Switch — 4x4 Control	4M	WPT-417
2003-01	Switch — A/C Compressor Clutch Cycling	4F	WPT-169
2001	Switch — A/C High Pressure	4F	WPT-169
2004-01	Switch — A/C Pressure Cut Off	4F	WPT-169
	Switch — Clutch Pedal Position	6M	WPT-518
	Switch — Door Ajar / Interior Lamp	1M	WPT-378
	Switch — Door Lock (LH)	8F	WPT-683
	Switch — Door Lock (RH)	8F	WPT-683
	Switch — Fog Lamp	6M	WPT-259

WIRING PIGTAIL KITS

LIGHT TRUCK



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
Explorer Sport Trac — Cont'd			
2003-01	Switch — Headlamp	11F	WPT-187
2004-01	Switch — Headlamp Dimmer	9M	WPT-238
2004-03	Switch — Heated Seat — LH — Front	8M	WPT-218
	Switch — Heated Seat — RH — Front	8M	WPT-218
2003-01	Switch — Heater A/C Blower (Rear)	8F	WPT-117
2004-01	Switch — Heater A/C Temp Control	4M	WPT-448
	3M	WPT-328
2001	Switch — Hood Ajar	4M	WPT-152
2004-01	Switch — Ignition	15M	WPT-475
	Switch — Keyless Entry	8F	WPT-833
	Switch — Moon Roof/ Sun Roof	5M	WPT-527
2004	Switch — Multi Function	12F	WPT-503
2003-01	Switch — Multi Function	9M	WPT-611
2001	Switch — Multi Function	7F	WPT-179
2004-01	Switch — Neutral Tow	2F	WPT-294
2005	Switch — Oil Sending Unit	1M	WPT-439
2004-01	Switch — Oil Sending Unit	1M	WPT-439
2004	Switch — Park Brake	2F	WPT-479
2002-01	Switch — Park Brake	1F	WPT-434
2004-01	Switch — Power Down Backglass	10M	WPT-424
	Switch — Power Mirror	8M	WPT-313
	Switch — Power Window — Driver	6F	WPT-600
2003-01	Switch — Power Window — Driver	8F	WPT-498
2004-01	Switch — Power Window — LH — Rear	6F	WPT-600
	Switch — Power Window — Passenger (Front)	6F	WPT-600
	Switch — Power Window — RH — Rear	6F	WPT-600
	Switch — Seat (Driver)	8M	WPT-399
2004-03	Switch — Seat (Passenger)	8M	WPT-399
	Switch — Seat Lumbar		
	Oval Cavity	2F	WPT-473
2004-01	Switch — Stop Lamp	5F	WPT-415
	Test Connector — Diagnostic	16F	WPT-615
	Trailer Tow — Vehicle Side	4F	WPT-358
2005-03	Transceiver — Passive Anti-Theft (PATS)	4F	WPT-261
2002-01	Transceiver — Passive Anti-Theft (PATS)	4F	WPT-467
2004-01	Valve — Vapor Management	2M	WPT-545
Freestar			
2005-04	AC Compressor Clutch	2M	WPT-173
2004	Actuator — Liftgate Glass	2M	WPT-381
	Alternator	3M	WPT-118
	Lamp — Fog / Driving	2F	WPT-692
	Lamp — Front Turn/Marker	2M	WPT-702
	Module — Auto Lamps	6F	WPT-502
	Module — Power Sliding Door — LH	12F	WPT-673
	Module — Power Sliding Door — RH	12F	WPT-673
	Motor — Heater A/C Blower (Auxiliary)	2M	WPT-104
	Motor — Power Window — LH — Front	2F	WPT-698
	Motor — Power Window — RH — Front	2F	WPT-698
	Motor — Rear Window Washer Fluid Pump	2M	WPT-357
	Motor — Rear Window Wiper	8F	WPT-310
2005-04	Resistor — Blower Motor (Auxiliary)	4F	WPT-688
2004	Sensor — Crank Shaft Position	2F	WPT-759
	Sensor — Cylinder Head Temperature	2M	WPT-338
	Sensor — Knock	2F	WPT-490
	Sensor — O2 (HEGO/EGO)	4M	WPT-807
	Sensor — Throttle Position	3F	WPT-170
2005-04	Sensor — Transmission Range	12M	WPT-803
2004	Sensor — Washer Fluid Level	2M	WPT-684
	Solenoid — EGR Vacuum Regulator	2M	WPT-359
2005-04	Switch — A/C Compressor Clutch Cycling	4F	WPT-169



WIRING PIGTAIL KITS LIGHT TRUCK

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
Freestar — Cont'd			
2004	Switch — Dimmer	6F	WPT-502
	Switch — Door Lock (LH)	8F	WPT-683
	Switch — Heater / A/C Blower (Front)	6M	WPT-369
	Switch — Inertia	3M	WPT-446
	Switch — Message Center	6F	WPT-586
	Switch — Multi Function	6F	WPT-440
	Switch — Oil Sending Unit	1M	WPT-413
	Switch — Park Brake	2F	WPT-479
	Switch — Power Window — Driver	8F	WPT-498
	Switch — Seat (Driver)	8F	WPT-731
	Switch — Seat (Passenger)	8F	WPT-731
	Switch — Stop Lamp	2F	WPT-373
F Series			
2004-99	AC Compressor Clutch F-150, F-250, F-250 Super Duty, F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	2M	WPT-173
1998-93	AC Compressor Clutch F-150, F-250	2M	WPT-173
1995	Actuator — Door Lock F Super Duty, F-150, F-250, F-350	2M	WPT-312
2004-02	Actuator — Door Lock — LH — Front F250/550SD	2M	WPT-312
2004-97	Actuator — Door Lock — LH — Front F150 Heritage	2M	WPT-312
2001-00	Actuator — Door Lock — LH — Front F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	2M	WPT-312
1999	Actuator — Door Lock — LH — Front F-250, F-250 Super Duty, F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	2M	WPT-312
1997-94	Actuator — Door Lock — LH — Front Standard Cab Pickup F150/350	2M	WPT-312
2004-02	Actuator — Door Lock — LH — Rear Crew Cab Pickup F250/550SD	2M	WPT-312
2003-00	Actuator — Door Lock — LH — Rear F-150	2M	WPT-312
2001-00	Actuator — Door Lock — LH — Rear F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	2M	WPT-312
1999	Actuator — Door Lock — LH — Rear F-250, F-250 Super Duty, F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	2M	WPT-312
2004	Actuator — Door Lock — RH — Front F150 Heritage	2M	WPT-312
2004-02	Actuator — Door Lock — RH — Front F250/550SD	2M	WPT-312
2003-97	Actuator — Door Lock — RH — Front F-150	2M	WPT-312
2001-00	Actuator — Door Lock — RH — Front F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	2M	WPT-312
1997-94	Actuator — Door Lock — RH — Front F150/350	2M	WPT-312
2004-02	Actuator — Door Lock — RH — Rear Crew Cab Pickup F250/550SD	2M	WPT-312
2003-00	Actuator — Door Lock — RH — Rear F-150	2M	WPT-312
2001-00	Actuator — Door Lock — RH — Rear F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	2M	WPT-312
1999	Actuator — Door Lock — RH — Rear F-250, F-250 Super Duty, F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	2M	WPT-312
2001-99	Actuator — Electronic Variable Orifice (EVO) F-150, F-250, F-250 Super Duty	2M	WPT-146
1998	Actuator — Electronic Variable Orifice (EVO) F-150	14M	WPT-666

WIRING PIGTAIL KITS

LIGHT TRUCK



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
F Series — Cont'd			
2004	Actuator — Speed Control F150 Heritage	10M	WPT-762
2004-99	Actuator — Speed Control F250/550SD	10M	WPT-762
2003-97	Actuator — Speed Control F-150	10M	WPT-762
1997-93	Actuator — Speed Control F Super Duty, F-150, F-250, F-350	10M	WPT-762
2004	Alternator F150 Heritage	1M	WPT-851
2003-02	Alternator F250/550SD	3M	WPT-119
2003-00	Alternator F-150	3M	WPT-119
2003-97	Alternator F-150	1M	WPT-851
1997	Alternator F Super Duty, F-250, F-350	1M	WPT-851
1997-96	Brush Assy — Horn/Speed Control F Super Duty, F-150, F-250, F-350	10M	WPT-667
	Bulkhead — Transmission — In-line (Female) F150/350	9F	WPT-570
1995-94	Bulkhead — Transmission — In-line (Female) AT 4 Spd F Super Duty, F-150, F-250, F-350	9F	WPT-570
2004-98	Bulkhead — Transmission — In-line (Male) F-150	7F	WPT-567
2002	CD Changer F-150	4M	WPT-152
2001-00	CD Changer F-150	12M	WPT-164
1999	CD Changer F-150, F-250	12M	WPT-164
1998	CD Changer F-150	14M	WPT-296
2004	Capacitor — Ignition / Radio 4.6L, 5.4L F-150	1M	WPT-352
2004-99	Capacitor — Ignition / Radio 6.8L F250/550SD	1M	WPT-352
2003-97	Capacitor — Ignition / Radio 4.2L, 4.6L, 5.4L F-150	1M	WPT-352
1996-92	Capacitor — Ignition / Radio F150/350	2M	WPT-478
1995-93	Capacitor — Ignition / Radio F150/350	1M	WPT-352
2005-04	Cigar Lighter F-150	3F	WPT-329
2004-99	Cigar Lighter F250/550SD	3F	WPT-329
1999-98	Cigar Lighter F-150; Square Cavity	1F	WPT-371
1999-97	Cigar Lighter F-150; Round Cavity	1M	WPT-476
1995-94	Cigar Lighter F150/350; Round Cavity	1M	WPT-476
2003-01	Coil — Ignition 4.2L F-150	4M	WPT-508
2000-99	Coil — Ignition 4.2L F-150	4M	WPT-207
1999-97	Coil — Ignition 4.6L F-150	3M	WPT-526



WIRING PIGTAIL KITS LIGHT TRUCK

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
F Series — Cont'd			
1998-97	Coil — Ignition 4.2L F-150	4M	WPT-511
1997	Coil — Ignition 5.4L F-150	2F	WPT-579
	5.8L F250/350	3M	WPT-397
1997-92	Coil — Ignition 7.5L F Super Duty, F-250, F-350	3M	WPT-397
1996-94	Coil — Ignition 4.9L F150/350	3M	WPT-397
1996-93	Coil — Ignition 5.8L F150/350	3M	WPT-397
	5.0L F-150, F-250	3M	WPT-397
2004-99	Control — Electronic Brake (Trailer Tow) F-250, F-250 Super Duty, F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	6F	WPT-599
1998	Control — Electronic Brake (Trailer Tow) F-150	6F	WPT-599
1997	Control — Electronic Brake (Trailer Tow) F Super Duty, F-150, F-250, F-350	6F	WPT-599
2003-00	Control Head — Electronic Automatic Temperature (EATC) F-150	13F	WPT-176
1993	Controller — Trailer Brake — Inline (Female) F150/350	4F	WPT-456
2004-03	Element — Heated Seat F150 Heritage	4M	WPT-307
2004-02	Element — Heated Seat F250/550SD	4M	WPT-307
2004-01	Element — Heated Seat 4.2L, 4.6L, 5.4L F-150	2M	WPT-548
	5.4L, 6.0L, 6.8L, 7.3L F250/550SD	2M	WPT-548
2002-01	Element — Heated Seat Extended Cab Pickup F-150	4M	WPT-307
2001	Element — Heated Seat Extended Cab Pickup F250/550SD	4M	WPT-307
2004-00	Fuel Injector F250/550SD	2F	WPT-159
1998	Fuel Injector 4.2L, 4.6L, 5.4L F-150	2M	WPT-372
1997	Fuel Injector 4.2L, 4.6L, 5.4L F-150, F-250	2M	WPT-372
1996	Fuel Injector 4.9L, 5.0L, 5.8L F150/350	2M	WPT-372
1995	Fuel Injector F Super Duty, F-150, F-250, F-350	2M	WPT-372
1994-92	Fuel Injector 4.9L F150/350	2M	WPT-372
1993	Fuel Injector 5.0L, 5.8L F150/350	2M	WPT-372
2004	Fuel Pump / Sending Unit F-150	4F	WPT-709
2004-00	Fuel Pump / Sending Unit F-150, F250/550SD; Calif	8M	WPT-172
2004-99	Fuel Pump / Sending Unit F-150, F-250, F-250 Super Duty, F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	4M	WPT-152
1999	Fuel Pump / Sending Unit F250/550SD; Calif	8M	WPT-172
1996-94	Fuel Pump / Sending Unit F Super Duty, F-150, F-250, F-350	4M	WPT-386
1993-92	Fuel Pump / Sending Unit F150/350	4M	WPT-454
2004-03	Heater — Fuel 6.0L F250/550SD	2F	WPT-711

WIRING PIGTAIL KITS LIGHT TRUCK



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
F Series — Cont'd			
2005-04	Horn		
	F-150	2F	WPT-159
2004	Horn		
	F250/550SD	2F	WPT-159
2004-99	Horn		
	F-250, F-250 Super Duty, F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	2M	WPT-372
1999-93	Horn		
	F-150	1M	WPT-378
1997-93	Horn		
	F250/350	1M	WPT-378
2004-02	Instrument Cluster		
	F250/550SD; Polarity A, Square	12F	WPT-673
	F250/550SD; Polarity B, Square	12F	WPT-637
2004-99	Instrument Cluster		
	F250/550SD; Right	12M	WPT-208
2001	Instrument Cluster		
	F250/550SD; Left	12M	WPT-192
2001-99	Instrument Cluster		
	F250/550SD	16M	WPT-202
2000	Instrument Cluster		
	MT F250/550SD; Left	12M	WPT-192
1999	Instrument Cluster		
	RWD MT F250/550SD; Left	12M	WPT-192
1998	Instrument Cluster		
	Extended Cab Pickup F-150; Left	12M	WPT-192
1998-97	Instrument Cluster		
	4.2L, 4.6L, 5.4L F-150	16M	WPT-332
1997	Instrument Cluster		
	F-150; Left	12M	WPT-192
1996-93	Instrument Cluster		
	F150/350	14M	WPT-383
2004	Jumper — Rear Window Defroster — Inline		
	F-150	2M	WPT-749
	Junction Box — Relay		
	6.0L Diesel F250/550SD	12F	WPT-591
	F-150	4F	WPT-629
2004-03	Junction Box — Relay		
	6.0L F250/550SD	4F	WPT-629
2004-02	Junction Box — Relay		
	F250/550SD	12F	WPT-691
2004-99	Junction Box — Relay		
	F250/550SD	15F	WPT-791
2003	Junction Box — Relay		
	6.8L F250/550SD	4F	WPT-629
2003-02	Junction Box — Relay		
	6.8L SOHC F250/550SD	12F	WPT-591
	7.3L Diesel OHV F250/550SD	12F	WPT-591
	7.3L F250/550SD	4F	WPT-629
2002	Junction Box — Relay		
	5.4L SOHC F-150, F-250 Super Duty, F-350 Super Duty	12F	WPT-591
1998	Junction Box — Relay		
	F-150	15F	WPT-791
1995	Junction Plate — Power Window/Door Lock		
	F150/350	15M	WPT-302
1992	Junction Plate — Power Window/Door Lock		
	F150/350	15M	WPT-302
1995-94	Lamp — Anti-Theft		
	F150/350	8M	WPT-313
2004-97	Lamp — Ash Tray		
	F150 Heritage	2M	WPT-370



WIRING PIGTAIL KITS LIGHT TRUCK

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
F Series — Cont'd			
2004-03	Lamp — CHMSL (Center High Mount Stop Lamp) F250/550SD	3M	WPT-593
2004-97	Lamp — CHMSL (Center High Mount Stop Lamp) F-150	2F	WPT-530
2002-99	Lamp — CHMSL (Center High Mount Stop Lamp) F-250, F-250 Super Duty, F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	3M	WPT-594
1996-95	Lamp — CHMSL (Center High Mount Stop Lamp) F Super Duty, F-150, F-250, F-350	3M	WPT-4591
2004-02	Lamp — Courtesy — Door F250/550SD; Grey	2M	WPT-113
2004-99	Lamp — Courtesy — Door F-250, F-250 Super Duty, F-350 Super Duty, F-450 Super Duty, F-550 Super Duty; Round	2N/A	WPT-149
2004-97	Lamp — Courtesy — Door F150 Heritage	2F	WPT-212
1997-92	Lamp — Courtesy — Door Standard Cab Pickup F150/350	2F	WPT-212
2004-98	Lamp — Courtesy — Reading (Rear) F-150	3M	WPT-446
2004-01	Lamp — Dome Extended Cab Pickup F-150	3F	WPT-203
2003-99	Lamp — Dome F-150	3M	WPT-4591
2001-99	Lamp — Dome F250/550SD	1F	WPT-295
2000-97	Lamp — Dome F-150	1F	WPT-295
1997-94	Lamp — Dome F150/350	1F	WPT-295
1994-93	Lamp — Dome F150/350	3M	WPT-239
2005-04	Lamp — Dome/ Map F-150	3F	WPT-203
2004-02	Lamp — Dome/ Map F250/550SD	2F	WPT-466
2004-01	Lamp — Fog / Driving F-150, F250/550SD	2F	WPT-107
2001	Lamp — Fog / Driving F-150, F-250 Super Duty	2M	WPT-148
2000	Lamp — Fog / Driving F-150, F-250 Super Duty	2F	WPT-107
1999	Lamp — Fog / Driving F-150, F-250, F-250 Super Duty	2F	WPT-107
	F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	2F	WPT-150
1998	Lamp — Fog / Driving Extended Cab Pickup F-150	2F	WPT-248
1997	Lamp — Fog / Driving F-150	2F	WPT-248
1999	Lamp — Front Cornering / Turn F250/550SD	3M	WPT-108
2004	Lamp — Front Turn/Marker F-150	3F	WPT-809
2004-02	Lamp — Front Turn/Marker F250/550SD	3M	WPT-108
2003-02	Lamp — Front Turn/Marker F-150	3M	WPT-108
2001	Lamp — Front Turn/Marker F-150, F250/550SD	3M	WPT-108
2000	Lamp — Front Turn/Marker F-150	3M	WPT-108
1999-97	Lamp — Front Turn/Marker F-150, F-250	3M	WPT-108

WIRING PIGTAIL KITS LIGHT TRUCK



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
F Series — Cont'd			
2004-99	Lamp — Glove Box F250/550SD	2M	WPT-314
2004-97	Lamp — Glove Box F150 Heritage	2M	WPT-314
1997-95	Lamp — Glove Box F150/350	2M	WPT-314
2005	Lamp — Headlamp- High/Low Beam F250/550SD; w/Aerodynamic Headlamp	3F	WPT-793
	F250/550SD; w/o Aerodynamic Headlamps	3M	WPT-301
2005-04	Lamp — Headlamp- High/Low Beam F-150	3F	WPT-793
2004-99	Lamp — Headlamp- High/Low Beam F150 Heritage	2M	WPT-418
1998-93	Lamp — Headlamp- High/Low Beam F-150, F-250	3M	WPT-110
	F250/350; Aerodynamic	3M	WPT-110
2004	Lamp — Instrument F150 Heritage	2M	WPT-597
2004-99	Lamp — Instrument F-250, F-250 Super Duty, F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	2M	WPT-597
2003-98	Lamp — Instrument F-150	2M	WPT-597
1997-93	Lamp — Instrument F Super Duty, F-150, F-250, F-350	2N/A	WPT-471
	2M	WPT-597
2003-02	Lamp — License F250/550SD	2N/A	WPT-149
2001	Lamp — License F-150, F-250 Super Duty	2F	WPT-150
2001-99	Lamp — License F-150, F-250, F-250 Super Duty, F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	2N/A	WPT-149
1998-95	Lamp — License F-150, F-250	2N/A	WPT-149
1994-93	Lamp — License F150/350	2N/A	WPT-471
2004	Lamp — Park/Turn/Stop Cab & Chassis, Extended Cab Pickup F250/550SD	3M	WPT-109
2003-00	Lamp — Park/Turn/Stop Flareside F-150	3M	WPT-108
2003-99	Lamp — Park/Turn/Stop Styleside F-150, F-250, F-250 Super Duty, F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	3M	WPT-109
1999-97	Lamp — Park/Turn/Stop Flareside, Styleside F-150, F-250	3M	WPT-108
1998-97	Lamp — Park/Turn/Stop Styleside F-150, F-250	3M	WPT-109
1997-96	Lamp — Park/Turn/Stop F150/350	3F	WPT-442
1997-93	Lamp — Rear Park F-150, F-250	2N/A	WPT-149
2004	Lamp — Reverse F-150	1M	WPT-407
2004-02	Lamp — Reverse F250/550SD	3M	WPT-106
2001-00	Lamp — Reverse F-150, F250/550SD	3M	WPT-106
1997-96	Lamp — Reverse F150/350	2F	WPT-291
1995	Lamp — Reverse F150/350	2F	WPT-291
2004-99	Lamp — Roof Marker F-150, F-250, F-250 Super Duty, F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	3M	WPT-550



WIRING PIGTAIL KITS LIGHT TRUCK

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
F Series — Cont'd			
2004-02	Lamp — Running Board F150 Heritage	2M	WPT-254
2002	Lamp — Running Board F250/550SD	2F	WPT-150
2001-00	Lamp — Running Board F250/550SD	2F	WPT-602
1999	Lamp — Running Board F250/550SD	2F	WPT-150
2003-99	Lamp — Side Marker F-250, F-250 Super Duty, F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	2F	WPT-150
1997-95	Lamp — Storage Compartment — Cargo F Super Duty, F-150, F-250, F-350	3M	WPT-4591
1994-93	Lamp — Storage Compartment — Cargo F150/350	3M	WPT-446
2004	Lamp — Under Hood Standard Cab Pickup F-150	2M	WPT-370
2004-99	Lamp — Under Hood F250/550SD	2M	WPT-370
2003-97	Lamp — Under Hood F-150	2M	WPT-370
1997-96	Lamp — Under Hood F Super Duty, F-150, F-250, F-350	2M	WPT-370
2004-02	Liftgate/Tailgate Jumper — Inline (Female) F250/550SD	8M	WPT-737
2005	Mirror — Rearview (Electrochromatic) F250/550SD	6M	WPT-193
2004	Mirror — Rearview (Electrochromatic) F-150	6M	WPT-193
2001-00	Mirror — Rearview (Electrochromatic) F-150	6M	WPT-193
1997-94	Mirror — Rearview (Electrochromatic) F Super Duty, F-150, F-250, F-350	3M	WPT-584
2004-01	Mirror — Sideview F250/550SD	10F	WPT-825
1998-95	Mirror — Sideview F-150	3F	WPT-348
1997-95	Mirror — Sideview F Super Duty, F-250, F-350	3F	WPT-348
1996	Mirror — Sideview F150/350	8M	WPT-172
1995-94	Mirror — Sideview F150/350	8M	WPT-382
2003	Mirror — Sideview / Heated F-150	10F	WPT-568
2001	Mirror — Sideview / Heated F-150	10F	WPT-568
2004-98	Mirror — Sideview with Turn Signal F150 Heritage	10F	WPT-568
2004	Mirror — Vanity F-150	2M	WPT-272
2004-03	Mirror — Vanity F250/550SD	2M	WPT-272
2004-98	Mirror — Vanity F150 Heritage	2F	WPT-479
2002-01	Mirror — Vanity F250/550SD	2F	WPT-479
1995-93	Mirror — Vanity F150/350	1F	WPT-562
2004-02	Module — Anti-theft F250/550SD	14F	WPT-728

WIRING PIGTAIL KITS LIGHT TRUCK



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
F Series — Cont'd			
2001-99	Module — Anti-theft F-250, F-250 Super Duty, F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	16	WPT-694
1997-95	Module — Anti-theft F Super Duty, F-150, F-250, F-350	13M	WPT-610
2004-98	Module — Auto Lamps F150 Heritage	5M	WPT-300
2004	Module — Daytime Running Lamp (DRL) F-150	2M	WPT-322
1999	Module — Daytime Running Lamp (DRL) F-150, F-250, F-250 Super Duty, F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	8F	WPT-174
1997-93	Module — Daytime Running Lamp (DRL) F Super Duty, F-150, F-250, F-350	8M	WPT-298
2004-02	Module — Heated Seat (Drivers) F250/550SD	12F	WPT-503
2003-02	Module — Heated Seat (Drivers) F-150	12F	WPT-503
2001	Module — Heated Seat (Drivers) F-150, F-250 Super Duty	10F	WPT-156
1997-93	Module — Ignition F150/350	6M	WPT-297
2004-03	Module — Power Moonroof F250/550SD	6M	WPT-375
2004-00	Module — Power Moonroof F150 Heritage	6M	WPT-375
1997-93	Module — Programmable Speedometer/Odometer (PSOM) F Super Duty, F-150, F-250, F-350	12M	WPT-613
2004	Module — Remote Keyless Entry F-150	16F	WPT-645
2004-02	Module — Remote Keyless Entry F250/550SD	14F	WPT-741
2004-00	Module — Remote Keyless Entry F150 Heritage	8M	WPT-737
2001-00	Module — Remote Keyless Entry F250/550SD	8M	WPT-737
1996-94	Module — Remote Keyless Entry F Super Duty, F-150, F-250, F-350; Left	13M	WPT-612
	F Super Duty, F-150, F-250, F-350; Right	13M	WPT-625
	F Super Duty, F-150, F-250, F-350	16M	WPT-632
1993-92	Module — Remote Keyless Entry F150/350	13M	WPT-308
2005-04	Module — Seat Memory F-150	10F	WPT-559
2004-03	Module — Transfer Case Shift Control 5.4L, 6.8L, 7.3L F250/550SD	10F	WPT-367
2004-97	Module — Transfer Case Shift Control F-150	10M	WPT-504
2002-99	Module — Transfer Case Shift Control F250/550SD	10F	WPT-367
1997-93	Module — Transfer Case Shift Control F Super Duty, F-150, F-250, F-350	5M	WPT-300
1996	Module — Transfer Case Shift Control F150/350	8M	WPT-366
1995-93	Module — Transfer Case Shift Control F-150, F-250	8M	WPT-366
1993	Module — Transfer Case Shift Control Gas F-350	8M	WPT-313
2003-02	Module — Variable Speed Blower Controller F-150	2M	WPT-727
1997	Module — Variable Speed Blower Controller F-150	5M	WPT-566



WIRING PIGTAIL KITS LIGHT TRUCK

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
F Series — Cont'd			
2004	Module — Warning Chime / Beltminder F150 Heritage	4F	WPT-582
2003-01	Module — Warning Chime / Beltminder F-150; Polarity A	4F	WPT-582
	F-150; Polarity B	4F	WPT-670
1997-92	Module — Warning Chime / Beltminder F150/350	7M	WPT-512
2004-02	Motor — Adjustable Pedal F250/550SD	2F	WPT-544
1995-94	Motor — Heater / AC Blower (Front) F Super Duty, F-350	2M	WPT-104
2003-00	Motor — Heater / AC Blend Door F-150, F-250 Super Duty	8F	WPT-100
1999	Motor — Heater / AC Blend Door F-150, F-250, F-250 Super Duty, F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	8F	WPT-100
1997-96	Motor — Heater / AC Blend Door F Super Duty, F-150, F-250, F-350	8F	WPT-100
2004	Motor — Idle Air Control 4.2L, 5.4L	2M	WPT-357
2004-99	Motor — Idle Air Control 5.4L, 6.8L F-150, F-250, F-250 Super Duty, F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	2M	WPT-357
2003-98	Motor — Idle Air Control F-150	2M	WPT-357
1997	Motor — Idle Air Control F-150; U/8500 GVW	2M	WPT-357
1997-93	Motor — Idle Air Control 5.8L F150/350	2M	WPT-684
1997-92	Motor — Idle Air Control 7.5L F Super Duty, F-250, F-350	2M	WPT-684
1996-94	Motor — Idle Air Control 4.9L F150/350	2M	WPT-684
1996-93	Motor — Idle Air Control 5.0L F-150, F-250	2M	WPT-684
2004-00	Motor — Intercooler Pump F150 Heritage	2M	WPT-260
2004-99	Motor — Power Seat Track F-250, F-250 Super Duty, F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	6F	WPT-599
2003-98	Motor — Power Seat Track F-150	6F	WPT-599
1997	Motor — Power Seat Track F-150	2M	WPT-370
2004	Motor — Power Window — LH — Front F-150	2F	WPT-698
2004-00	Motor — Power Window — LH — Front F250/550SD	2F	WPT-698
2003-97	Motor — Power Window — LH — Front F-150; Oval Cavity	2F	WPT-473
1997	Motor — Power Window — LH — Front F Super Duty, F-150, F-250, F-350; Oval Cavity	2F	WPT-473
1995	Motor — Power Window — LH — Front F Super Duty, F-150, F-250, F-350; Rectangular Cavity	2F	WPT-484
1995-92	Motor — Power Window — LH — Front F150/350; Rectangular Cavity	2F	WPT-484
2004	Motor — Power Window — LH — Rear F-150	2M	WPT-767
2004-99	Motor — Power Window — LH — Rear F250/550SD	2M	WPT-428
2003-00	Motor — Power Window — LH — Rear F-150; Oval Cavity	2F	WPT-473
2001-00	Motor — Power Window — LH — Rear F250/550SD	2F	WPT-698

WIRING PIGTAIL KITS

LIGHT TRUCK



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
F Series — Cont'd			
2004	Motor — Power Window — RH — Front F-150	2F	WPT-698
2004-00	Motor — Power Window — RH — Front F250/550SD	2F	WPT-698
2003-97	Motor — Power Window — RH — Front F-150; Oval Cavity	2F	WPT-473
1997	Motor — Power Window — RH — Front F Super Duty, F-150, F-250, F-350; Oval Cavity	2F	WPT-473
1996-95	Motor — Power Window — RH — Front F Super Duty, F-150, F-250, F-350; Rectangular Cavity	2F	WPT-484
2004	Motor — Power Window — RH — Rear F-150	2M	WPT-767
2004-99	Motor — Power Window — RH — Rear F250/550SD	2M	WPT-428
2003-00	Motor — Power Window — RH — Rear F-150; Oval Cavity	2F	WPT-473
2001-00	Motor — Power Window — RH — Rear F250/550SD	2F	WPT-698
2004-01	Motor — Power Window Rear Sliding Crew Cab Pickup, Extended Cab Pickup F150 Heritage	2F	WPT-605
1997-94	Motor — Rear Window Washer Fluid Pump F150/350	2M	WPT-355
1997	Motor — Seat Height (Front) F-150	2M	WPT-370
	Motor — Seat Height (Rear)	2M	WPT-370
1994-93	Motor — Seat Lumbar F Super Duty, F-150, F-250, F-350	2M	WPT-374
2004-00	Motor — Transfer Case Electronic Shift Crew Cab Pickup	16M	WPT-326
2004-99	Motor — Transfer Case Electronic Shift F250/550SD	6F	WPT-228
	F250/550SD; Multi-connector device	2F	WPT-856
2000-99	Motor — Transfer Case Electronic Shift Standard Cab Pickup F-150	16M	WPT-326
1997-93	Motor — Transfer Case Electronic Shift F Super Duty, F-150, F-250, F-350	10M	WPT-661
2005-97	Motor — Windshield Washer Fluid Pump F-150	2M	WPT-357
2004-99	Motor — Windshield Washer Fluid Pump F250/550SD	2M	WPT-357
2005-02	Motor — Windshield Wiper F250/550SD	12F	WPT-850
2004	Motor — Windshield Wiper F150 Heritage; Includes Linkage and Motor; From 8/2/04	12F	WPT-850
2003-00	Motor — Windshield Wiper F-150, F-250 Super Duty	5F	WPT-158
1999	Motor — Windshield Wiper F-150, F-250, F-250 Super Duty, F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	5F	WPT-158
1997-95	Motor — Windshield Wiper F Super Duty, F-150, F-250, F-350	6M	WPT-297
1997-93	Motor — Windshield Wiper F150/350	3M	WPT-333
2004-00	Overhead Console — In-line (Female) F150 Heritage	12F	WPT-591
2005	Power Point F-150	3F	WPT-682
2001-00	Power Point F250/550SD	2M	WPT-355
1999-98	Power Point F-150	2M	WPT-355



WIRING PIGTAIL KITS LIGHT TRUCK

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
F Series — Cont'd			
1997-96	Power Point F150/350	2M	WPT-355
2004-03	Pump — Fuel (External) 6.0L F250/550SD	2F	WPT-292
2003-99	Pump — Vacuum 7.3L F250/550SD	4F	WPT-169
2005-04	Radio F-150	8F 16F	WPT-219 WPT-221
2004	Radio F250/550SD	16F	WPT-186
2003	Radio F-150	16M	WPT-828
2003-00	Radio F-150	20F	WPT-184
2003-99	Radio F-150, F-250, F-250 Super Duty, F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	16F	WPT-186
1999	Radio F-150, F-250	20F	WPT-184
1998	Radio F-150	12M	WPT-613
1997	Radio F Super Duty, F-150, F-250, F-350	8M	WPT-696
1996-94	Radio F Super Duty, F-150, F-250, F-350; Polarity not shown; Rectangular; Gray	8M	WPT-646
	F Super Duty, F-150, F-250, F-350; Polarity not shown; Rectangular; Black	8M	WPT-696
1995-94	Radio F150/350	2M	WPT-247
1999-97	Radio — Amplifier F-150	16M	WPT-332
1997-94	Radio — Amplifier F150/350	14M	WPT-296
2004-02	Radio — Rear Audio Control F-150	16M	WPT-332
1995	Relay — Blower Motor F Super Duty, F-150, F-250, F-350	5M	WPT-638
2005-04	Relay — Flasher F-150	5F	WPT-802
2004-02	Relay — Flasher F250/550SD	10F	WPT-367
2004-97	Relay — Flasher F150 Heritage	10F	WPT-367
2004-01	Relay — Fuel Pump F-150	10F	WPT-367
2004-99	Relay — Starter Motor F250/550SD	1M	WPT-616
2003-98	Relay — Starter Motor 4.6L, 5.4L F-150	1M	WPT-616
2002-98	Relay — Starter Motor 4.2L F-150	1M	WPT-616
1997-93	Relay — Starter Motor F Super Duty, F-150, F-250, F-350	1M	WPT-616
1997	Relay — Trailer Tow F-150, F-250	10M	WPT-391
1996-95	Relay — Trailer Tow F150/350	10M	WPT-391
2005	Resistor — Blower Motor (Front) F-150	4F	WPT-688
2004	Resistor — Blower Motor (Front) Gas F250/350 Super Duty	4M	WPT-114
	F-150; w/Manual A/C	4F	WPT-688

WIRING PIGTAIL KITS LIGHT TRUCK



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
F Series — Cont'd			
2003-99	Resistor — Blower Motor (Front) Gas F-250, F-250 Super Duty, F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	4M	WPT-114
2000	Resistor — Blower Motor (Front) F-150	4F	WPT-115
2004-99	Resistor — Daytime Running Lamp (DRL) F150 Heritage	2M	WPT-322
	F250/550SD	2M	WPT-322
2004-01	Seat — Power Connection (Driver) F250/550SD	8F	WPT-257
2004-03	Sensor — Accelerator Pedal Position 6.0L F250/550SD	10F	WPT-537
2003-02	Sensor — Accelerator Pedal Position 7.3L F250/550SD	10F	WPT-533
2001	Sensor — Accelerator Pedal Position 7.3L F250/550SD	10F	WPT-537
2004	Sensor — Air Charge Temperature 5.4L F-150	2M	WPT-420
2004-02	Sensor — Air Charge Temperature F250/550SD	2M	WPT-420
2004-97	Sensor — Air Charge Temperature 4.2L F-150	2M	WPT-420
2001-99	Sensor — Air Charge Temperature 7.3L F250/550SD	2M	WPT-420
1999	Sensor — Air Charge Temperature F250/550SD	2M	WPT-420
1999-98	Sensor — Air Charge Temperature 5.4L F-150	2M	WPT-420
1996-93	Sensor — Air Charge Temperature 5.0L F-150, F-250	2M	WPT-428
1995-93	Sensor — Air Charge Temperature 5.8L F150/350	2M	WPT-428
1995-92	Sensor — Air Charge Temperature 4.9L, 7.5L F Super Duty, F-150, F-250, F-350	2M	WPT-428
2004	Sensor — Ambient Temp F-150	2M	WPT-437
2004-00	Sensor — Ambient Temp F150 Heritage	2M	WPT-437
2001-99	Sensor — Ambient Temp F250/550SD	2M	WPT-433
1999-98	Sensor — Ambient Temp F-150	2M	WPT-470
1997	Sensor — Ambient Temp F-150; 0/8500 GVW (7700)	2M	WPT-437
1997-95	Sensor — Ambient Temp F250/350	2M	WPT-437
1996-95	Sensor — Ambient Temp F-150	2M	WPT-437
1995	Sensor — Ambient Temp F150/350	2F	WPT-497
2004-99	Sensor — Barometric Absolute Pressure (BAP) F-250, F-250 Super Duty, F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	4F	WPT-169
	5.4L F-150	3M	WPT-805
1994	Sensor — Barometric Absolute Pressure (BAP) F150/350	3M	WPT-263
2004	Sensor — Brake Fluid Level F-150, F-150 Heritage	3M	WPT-118
2004-01	Sensor — Brake Fluid Level F250/550SD	2M	WPT-216
2003-00	Sensor — Brake Fluid Level F-150, F250/550SD	3M	WPT-118



WIRING PIGTAIL KITS LIGHT TRUCK

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
F Series — Cont'd			
1999	Sensor — Brake Fluid Level F250/550SD	3M	WPT-118
1999-97	Sensor — Brake Fluid Level F-150	3M	WPT-4591
1997-96	Sensor — Brake Fluid Level F250/350	3M	WPT-446
1996	Sensor — Brake Fluid Level F-150	3M	WPT-446
1995	Sensor — Brake Fluid Level F Super Duty, F-150, F-250, F-350	3M	WPT-4591
2004-01	Sensor — Cam Shaft Position 5.4L, 6.8L F250/550SD	2F	WPT-759
2004-99	Sensor — Cam Shaft Position 4.2L F-150	3M	WPT-196
2003-01	Sensor — Cam Shaft Position 4.6L F-150	2F	WPT-759
2003-00	Sensor — Cam Shaft Position 5.4L F-150	2F	WPT-759
2000	Sensor — Cam Shaft Position 6.8L F250/550SD	2F	WPT-579
2000-99	Sensor — Cam Shaft Position 4.6L F-150	2F	WPT-579
1999	Sensor — Cam Shaft Position 5.4L F-150	2F	WPT-579
2004-00	Sensor — Catalyst Monitor F-150, F250/550SD	4M	WPT-112
2004-98	Sensor — Compass F150 Heritage	4F	WPT-234
1999	Sensor — Coolant Temperature F250/550SD	3M	WPT-119
1998-97	Sensor — Coolant Temperature 4.2L, 4.6L F-150, F-250	2M	WPT-206
1997-93	Sensor — Coolant Temperature 5.8L F250/350	2M	WPT-437
1997-92	Sensor — Coolant Temperature 7.5L F250/350	2M	WPT-437
1996-93	Sensor — Coolant Temperature 5.8L F-150	2M	WPT-437
1996-92	Sensor — Coolant Temperature 4.9L F150/350	2M	WPT-437
	1M	WPT-476
1995-93	Sensor — Coolant Temperature F-150, F-250	2M	WPT-437
2004	Sensor — Crank Shaft Position 4.2L F150 Heritage	2F	WPT-759
2004-01	Sensor — Crank Shaft Position 4.6L F-150	2F	WPT-759
	5.4L, 6.8L F250/550SD	2F	WPT-759
2003-00	Sensor — Crank Shaft Position 5.4L F-150	2F	WPT-759
2000-99	Sensor — Crank Shaft Position 6.8L F250/550SD	2F	WPT-579
1999-97	Sensor — Crank Shaft Position 4.2L, 4.6L, 5.4L F-150	2F	WPT-579
1997-95	Sensor — Crank Shaft Position F Super Duty, F-150, F-250, F-350	2F	WPT-579
2004-99	Sensor — Cylinder Head Temperature 4.2L F-150	2M	WPT-338
	5.4L, 6.8L F250/550SD	2M	WPT-338
2004-97	Sensor — Cylinder Head Temperature 5.4L F-150, F-250, F-250 Super Duty, F-350 Super Duty	2M	WPT-338

WIRING PIGTAIL KITS

LIGHT TRUCK



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
F Series — Cont'd			
2002-97	Sensor — Cylinder Head Temperature 4.6L F-150, F-250	2M	WPT-338
2004-03	Sensor — Delta Pressure Feedback EGR F-150, F-150 Heritage	3F	WPT-188
2004-99	Sensor — Delta Pressure Feedback EGR F-250, F-250 Super Duty, F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	3F	WPT-188
2002-01	Sensor — Delta Pressure Feedback EGR 4.6L F-150	3F	WPT-393
2000-97	Sensor — Delta Pressure Feedback EGR F-150	3F	WPT-188
1997	Sensor — Delta Pressure Feedback EGR F Super Duty, F-250, F-350	3F	WPT-188
1995	Sensor — Delta Pressure Feedback EGR 4.9L, 5.8L F150/350	3M	WPT-458
2004	Sensor — EATC In Car Temperature F-150	3M	WPT-4591
2004-02	Sensor — EATC In Car Temperature F-150	2M	WPT-486
1997	Sensor — EATC In Car Temperature F-150	2M	WPT-486
1997-96	Sensor — EGR Valve Position 5.8L F250/350	4M	WPT-386
1997-92	Sensor — EGR Valve Position 7.5L F Super Duty, F-250, F-350	4M	WPT-386
1996	Sensor — EGR Valve Position 5.8L F-150	4M	WPT-386
1995-94	Sensor — EGR Valve Position 4.9L F150/350	4M	WPT-386
1995-93	Sensor — EGR Valve Position 5.0L F-150, F-250	4M	WPT-386
2003-99	Sensor — Fuel Rail Pressure F-150, F-250, F-250 Super Duty	3M	WPT-118
2001-00	Sensor — Fuel Rail Pressure F-150	4F	WPT-169
1999	Sensor — Fuel Rail Pressure F-150, F-250, F-250 Super Duty	4F	WPT-169
2003-97	Sensor — Fuel Rail Temperature	2M	WPT-470
2004	Sensor — Intake Manifold Runner Control F-150	4F	WPT-347
2003-99	Sensor — Intake Manifold Runner Control 4.2L F-150	4F	WPT-347
1999	Sensor — Intake Manifold Runner Control F-250, F-250 Super Duty, F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	2M	WPT-545
1998-97	Sensor — Intake Manifold Runner Control F-150	3F	WPT-569
2004	Sensor — Knock 5.4L F-150	2M	WPT-351
	6.8L F250/550SD	2M	WPT-351
	4.2L F150 Heritage	2F	WPT-490
2004-03	Sensor — Knock 4.6L F-150	2M	WPT-351
	4.2L, 4.6L, 5.4L F-150	2F	WPT-490
2003-01	Sensor — Knock F250/550SD	2M	WPT-351
2002-01	Sensor — Knock 5.4L F-150	2M	WPT-351
2000	Sensor — Knock 6.8L F250/550SD	4F	WPT-225
	Gas F250/550SD	2M	WPT-351
2000-99	Sensor — Knock F-150	2M	WPT-351



WIRING PIGTAIL KITS LIGHT TRUCK

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
F Series — Cont'd			
1999	Sensor — Knock 5.4L F250/350 Super Duty	4F	WPT-225
1998-97	Sensor — Knock 4.2L F-150	2M	WPT-410
1997	Sensor — Knock F Super Duty, F-250, F-350	2M	WPT-462
	4.6L, 5.4L F-150	2M	WPT-462
1996-94	Sensor — Knock 4.9L F150/350	2M	WPT-462
1995-93	Sensor — Knock 5.0L F-150, F-250	2M	WPT-462
2004-02	Sensor — Manifold Absolute Pressure (MAP) F-150, F-250 Super Duty, F-350 Super Duty, F-450 Super Duty	3M	WPT-263
2004-99	Sensor — Manifold Absolute Pressure (MAP) F250/550SD	3F	WPT-282
1996-95	Sensor — Manifold Absolute Pressure (MAP) Diesel F250/350	3M	WPT-263
1996-93	Sensor — Manifold Absolute Pressure (MAP) Gas F150/350	3M	WPT-263
2003-00	Sensor — Mass Air Flow F-150, F-250 Super Duty	6M	WPT-102
1999-96	Sensor — Mass Air Flow F-150, F-250, F-250 Super Duty	6M	WPT-102
1995-94	Sensor — Mass Air Flow 5.0L F-150, F-250	4F	WPT-256
2004-00	Sensor — Mass Air Flow — In-line (Female) F250/550SD	8F	WPT-712
2003-00	Sensor — Mass Air Flow — In-line (Female) Stripped Chassis F550 Super Duty	8F	WPT-712
2005	Sensor — O2 (HEGO/EGO) F250/550SD	4F	WPT-844
2004-02	Sensor — O2 (HEGO/EGO) F250/550SD; Gold Terminals / D Polarity	4M	WPT-123
2004-01	Sensor — O2 (HEGO/EGO) F250/550SD; Tin Terminals / D Polarity	4M	WPT-742
	4.6L F-150	4M	WPT-807
2004-00	Sensor — O2 (HEGO/EGO) 5.4L F-150	4M	WPT-807
1999	Sensor — O2 (HEGO/EGO) F-150, F-250; Gold Terminals / B Polarity	4M	WPT-111
1994	Sensor — O2 (HEGO/EGO) F150/350	4F	WPT-335
2004	Sensor — Sunload F-150	6F	WPT-502
2004-02	Sensor — Sunload F250/550SD	3M	WPT-214
1994	Sensor — Tachometer F150/350	2M	WPT-433
2004-02	Sensor — Throttle Position Bi-Fuel, CNG, Diesel, Gas F-150, F250/550SD	3F	WPT-170
1998-97	Sensor — Throttle Position F-150, F-250	3F	WPT-170
1996-92	Sensor — Throttle Position 4.9L, 7.5L F150/350	3M	WPT-445
1995-93	Sensor — Throttle Position 5.0L, 5.8L F150/350	3F	WPT-651
2004	Sensor — Transmission Range 4.2L AT F150 Heritage	12M	WPT-806
2004-99	Sensor — Transmission Range 4.2L AT 4 Spd 4R100 F-150	12M	WPT-806
	AT F-250, F-250 Super Duty, F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	12M	WPT-806

WIRING PIGTAIL KITS

LIGHT TRUCK



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
F Series — Cont'd			
2004-99	Sensor — Transmission Range — Cont'd 4.2L AT 4 Spd 4R100, 4R70W F-150	12M	WPT-806
1997	Sensor — Transmission Range F Super Duty	8M	WPT-389
1997-94	Sensor — Transmission Range Cab & Chassis, Standard Cab Pickup F Super Duty, F-150, F-250, F-350	8M	WPT-389
2004-99	Sensor — Water Temp — In-Line Bi-Fuel, CNG, Diesel, Gas F-250, F-250 Super Duty, F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	4M	WPT-152
2004-02	Solenoid — Brake Shift Park Interlock F-150 Heritage, F-250 Super Duty, F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	3M	WPT-210
1998-97	Solenoid — Brake Shift Park Interlock F-150	3M	WPT-210
1997	Solenoid — Brake Shift Park Interlock F250/350; O/8500 GVW	3M	WPT-210
1996-94	Solenoid — Brake Shift Park Interlock F-150, F-250	3M	WPT-210
2004	Solenoid — Canister Vent Standard Cab Pickup	2M	WPT-322
2004-99	Solenoid — Canister Vent F250/550SD	2M	WPT-322
1999-98	Solenoid — Canister Vent F-150, F-250, F-250 Super Duty	2M	WPT-322
1997	Solenoid — Canister Vent F250/350	2M	WPT-441
	F-150; U/8500 GVW	2M	WPT-322
	F-150; O/8500 GVW (7700)	2M	WPT-441
1996-92	Solenoid — Canister Vent F150/350; Square Cavity	2M	WPT-441
1995-93	Solenoid — Canister Vent F Super Duty, F-150, F-250, F-350; Round Cavity	2M	WPT-428
2004-99	Solenoid — EGR Vacuum Regulator F250/550SD	2M	WPT-359
2004-97	Solenoid — EGR Vacuum Regulator F-150	2M	WPT-359
1997-92	Solenoid — EGR Vacuum Regulator 7.5L F Super Duty, F-250, F-350	2M	WPT-374
1996-94	Solenoid — EGR Vacuum Regulator 4.9L F150/350	2M	WPT-374
1996-93	Solenoid — EGR Vacuum Regulator 5.8L F150/350	2M	WPT-374
	5.0L F-150, F-250	2M	WPT-374
1997	Solenoid — Electronic Automatic Temperature Control (EATC)	2M	WPT-522
2004-99	Solenoid — Pulse Vacuum 4x4 Hub (PVH) F-250, F-250 Super Duty, F-350 Super Duty, F-450 Super Duty, F-550 Super Duty; Gold Terminal	3F	WPT-170
	F250/550SD; Tin Terminal	3F	WPT-754
2004-97	Solenoid — Pulse Vacuum 4x4 Hub (PVH) F-150	2M	WPT-441
2000-99	Solenoid — Super Charger Bypass F-150, F-250, F-250 Super Duty	2M	WPT-146
2005	Speaker — Door (Front) F-150	2F	WPT-815
2004	Speaker — Door (Front) F150 Heritage	2F	WPT-815
2004-99	Speaker — Door (Front) F250/550SD	2M	WPT-719
2003-01	Speaker — Door (Front) F-150	2F	WPT-815
1999	Speaker — Door (Front) F-150, F-250	2F	WPT-159
	F250/550SD	2M	WPT-416



WIRING PIGTAIL KITS LIGHT TRUCK

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
F Series — Cont'd			
1998-92	Speaker — Door (Front) F-150, F-250	2M	WPT-416
2005-04	Speaker — Door (Rear) F-150	2F	WPT-815
2004-00	Speaker — Door (Rear) F150 Heritage	2F	WPT-373
2004-99	Speaker — Door (Rear) F250/550SD	2F	WPT-815
2004	Speaker — Rear F-150	2F	WPT-292
	Extended Cab Pickup F150 Heritage	2F	WPT-373
2004-99	Speaker — Rear F250/550SD	2F	WPT-373
2003-99	Speaker — Rear Extended Cab Pickup F-150	2F	WPT-373
1999	Speaker — Rear F250/550SD	2M	WPT-416
1998-92	Speaker — Rear F150/350	2M	WPT-416
2004	Speaker — Subwoofer F-150	10M	WPT-667
2004-99	Speaker — Subwoofer F150 Heritage	2M	WPT-478
	Switch — 4x4 Control F250/550SD	4M	WPT-417
2004-97	Switch — 4x4 Control F-150	4M	WPT-417
1997-95	Switch — 4x4 Control F Super Duty, F-150, F-250, F-350	8M	WPT-313
2004-03	Switch — 4x4 Disconnect F250/550SD	2M	WPT-209
2004-99	Switch — 4x4 Disconnect F150 Heritage	2M	WPT-209
2002	Switch — 4x4 Disconnect Diesel F250/550SD	2M	WPT-209
2001	Switch — 4x4 Disconnect F250/550SD	2M	WPT-209
2000	Switch — 4x4 Disconnect AT F250/550SD	2M	WPT-209
1997-96	Switch — 4x4 Disconnect F-150, F-250	2M	WPT-209
2005-04	Switch — A/C Compressor Clutch Cycling F-150	4F	WPT-169
1995	Switch — A/C Compressor Clutch Cycling F150/350	2M	WPT-438
2003-99	Switch — A/C High Pressure F-150, F-250, F-250 Super Duty	4F	WPT-169
2005-04	Switch — A/C Pressure Cut Off F-150	4F	WPT-169
2004-99	Switch — A/C Pressure Cut Off F-250, F-250 Super Duty, F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	4F	WPT-169
2004-95	Switch — A/C Pressure Cut Off F-150 Heritage, F-250, F-250 Super Duty	4F	WPT-169
1998-95	Switch — A/C Pressure Cut Off F-250	4F	WPT-169
1997-96	Switch — A/C Pressure Cut Off F Super Duty, F-150, F-250, F-350	4F	WPT-169
2003-02	Switch — Adjustable Pedal F250/550SD	7F	WPT-181
2004-02	Switch — Air Cleaner Restrictor F250/550SD	2F	WPT-692

WIRING PIGTAIL KITS

LIGHT TRUCK



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
F Series — Cont'd			
2004-02	Switch — Air Suspension	8M	WPT-199
1999-97	Switch — Air Suspension F-150	3F	WPT-618
2004-99	Switch — Backup Lamp F250/550SD	2F	WPT-826
	Switch — Brake Pressure F150 Heritage	2M	WPT-260
2003-99	Switch — Brake Pressure F-250, F-250 Super Duty, F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	2M	WPT-372
1997-93	Switch — Brake Pressure F150/350	2M	WPT-260
2002-99	Switch — Clutch Pedal Position F250/550SD	6M	WPT-507
2002-98	Switch — Clutch Pedal Position F-150	6M	WPT-507
1997-93	Switch — Clutch Pedal Position F150/350	6M	WPT-507
2003	Switch — Coolant Temperature Sending Unit 5.4L F-150, F-250 Super Duty, F-350 Super Duty	2M	WPT-431
2002-99	Switch — Coolant Temperature Sending Unit 6.8L F250/550SD	2M	WPT-431
1999	Switch — Coolant Temperature Sending Unit 5.4L F-150	2M	WPT-431
1998-97	Switch — Coolant Temperature Sending Unit 4.2L F-150	2M	WPT-431
1996-92	Switch — Coolant Temperature Sending Unit F150/350	1M	WPT-476
1997-92	Switch — Courtesy Lamp Cab & Chassis, Extended Cab Pickup, Standard Cab Pickup F Super Duty, F-150, F-250, F-350	3F	WPT-213
1995-92	Switch — Courtesy Lamp F150/350	2N/A	WPT-471
2004-99	Switch — Door Ajar / Interior Lamp F-150, F-250, F-250 Super Duty, F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	2M	WPT-146
1998	Switch — Door Ajar / Interior Lamp F-150	2M	WPT-146
1997	Switch — Door Ajar / Interior Lamp F Super Duty, F-150, F-250, F-350	2M	WPT-441
1995-94	Switch — Door Cylinder Disarm (Anti-Theft) F150/350	2M	WPT-428
1992	Switch — Door Cylinder Disarm (Anti-Theft) F150/350	2M	WPT-428
2004	Switch — Door Lock (LH) F150 Heritage	8F	WPT-683
	F-150	8F	WPT-485
2004-02	Switch — Door Lock (LH) F250/550SD	8F	WPT-683
2003-02	Switch — Door Lock (LH) F-150	8F	WPT-683
2002-97	Switch — Door Lock (LH) F-150	7F	WPT-400
2001-99	Switch — Door Lock (LH) F250/550SD	7F	WPT-846
1997	Switch — Door Lock (LH) F Super Duty, F-250, F-350	7F	WPT-400
1994-93	Switch — Door Lock (LH) F Super Duty, F-150, F-250, F-350	5M	WPT-792
2004	Switch — Door Lock (RH) F-150	8F	WPT-485
2004-02	Switch — Door Lock (RH) F150 Heritage	8F	WPT-683
	F250/550SD	8F	WPT-683



WIRING PIGTAIL KITS LIGHT TRUCK

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
F Series — Cont'd			
2002-97	Switch — Door Lock (RH) F-150	7F	WPT-400
2001-99	Switch — Door Lock (RH) F250/550SD	7F	WPT-846
1997	Switch — Door Lock (RH) F Super Duty, F-250, F-350	7F	WPT-400
1997-93	Switch — Fog Lamp F Super Duty, F-150, F-250, F-350	3M	WPT-617
2004-03	Switch — Fuel Tank Selector Diesel F250/550SD	6M	WPT-369
2003-02	Switch — Fuel Tank Selector 7.3L Diesel F250/550SD	6M	WPT-369
2000	Switch — Fuel Tank Selector 7.3L Diesel F250/550SD	6M	WPT-369
1997	Switch — Fuel Tank Selector F-150, F-250	6M	WPT-369
1996	Switch — Fuel Tank Selector Diesel F-250	6M	WPT-369
1995	Switch — Fuel Tank Selector F-150, F-250	6M	WPT-369
1994-93	Switch — Fuel Tank Selector 7.3L Diesel F-250	6M	WPT-369
2004-01	Switch — Headlamp F250/550SD	6F	WPT-262
2004-00	Switch — Headlamp F150 Heritage	12F	WPT-396
	F250/550SD	12F	WPT-396
	F-150	6F	WPT-262
2000-99	Switch — Headlamp F-250, F-250 Super Duty, F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	6F	WPT-510
	F250/550SD	6F	WPT-845
1998-97	Switch — Headlamp F-150	6F	WPT-505
1997-96	Switch — Headlamp F Super Duty, F-250, F-350	6F	WPT-510
1995-93	Switch — Headlamp F150/350	9F	WPT-165
2004-01	Switch — Heated Seat — LH — Front F-150	8M	WPT-547
2003-99	Switch — Heated Seat — LH — Front F-250, F-250 Super Duty, F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	8M	WPT-547
2004-01	Switch — Heated Seat — RH — Front F150 Heritage	8M	WPT-547
2003-99	Switch — Heated Seat — RH — Front F-250, F-250 Super Duty, F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	8M	WPT-547
2004	Switch — Heater / A/C Blower (Front) F250/550SD	4M	WPT-103
2003-93	Switch — Heater / A/C Blower (Front) F-150, F-250 Super Duty, F-350, F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	4M	WPT-103
2004-99	Switch — Heater A/C Temp Control F250/550SD	3M	WPT-328
	F-250, F-250 Super Duty, F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	4M	WPT-344
2004-98	Switch — Heater A/C Temp Control F150 Heritage	4M	WPT-448
1998-97	Switch — Heater A/C Temp Control F-150	3M	WPT-328
1997-93	Switch — Heater A/C Temp Control F Super Duty, F-150, F-250, F-350	4M	WPT-344
2004-01	Switch — Hydro-Max Flow F250/550SD	2F	WPT-713

WIRING PIGTAIL KITS

LIGHT TRUCK



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
F Series — Cont'd			
1997-96	Switch — Idle Position Diesel F250/350	2M	WPT-260
2005-04	Switch — Ignition F-150	7M	WPT-804
2004-99	Switch — Ignition F-150, F-250, F-250 Super Duty, F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	16M	WPT-577
2004-97	Switch — Ignition F-150	16M	WPT-577
1997-93	Switch — Ignition F150/350	16M	WPT-577
2004-99	Switch — Inertia F-150, F-250, F-250 Super Duty, F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	3M	WPT-446
2004-97	Switch — Inertia F-150	3M	WPT-446
1997-93	Switch — Inertia F150/350	3M	WPT-446
2004	Switch — Keyless Entry F250/550SD	8F	WPT-833
1997-93	Switch — Low Vacuum Warning Bi-Fuel, Diesel F Super Duty, F-150, F-250, F-350	3M	WPT-350
2004	Switch — Message Center F-150	6F	WPT-586
1994	Switch — Message Center F-150, F-250	1M	WPT-407
2004	Switch — Moon Roof/ Sun Roof F-150	8F	WPT-485
2004-02	Switch — Multi Function F250/550SD	12F 10F	WPT-503 WPT-516
2003-99	Switch — Multi Function F-150	7F	WPT-179
2003-93	Switch — Multi Function F-150	9M	WPT-611
2001-99	Switch — Multi Function F-250, F-250 Super Duty, F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	9M 7F	WPT-607 WPT-179
1998-93	Switch — Multi Function F-150, F-250	7F	WPT-179
1997-93	Switch — Multi Function F Super Duty, F-250, F-350	9M	WPT-611
2004	Switch — Multifunction (Wiper) F-150	6F	WPT-285
2005	Switch — Oil Sending Unit 5.4L F-150	1M	WPT-439
2004-99	Switch — Oil Sending Unit F-250, F-250 Super Duty, F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	1M	WPT-439
2004-98	Switch — Oil Sending Unit F-150	1M	WPT-439
1997	Switch — Oil Sending Unit 5.8L, 7.3L, 7.5L F Super Duty, F-250, F-350	1M	WPT-616
1997-92	Switch — Oil Sending Unit F Super Duty, F-150, F-250, F-350	1M	WPT-616
2004	Switch — Overdrive Cancel F-150	2M	WPT-233
2004-03	Switch — Overdrive Cancel F250/550SD	3M	WPT-753
2004-99	Switch — Overdrive Cancel F250/550SD	3F	WPT-229
2004-98	Switch — Overdrive Cancel F150 Heritage	3F	WPT-229



WIRING PIGTAIL KITS LIGHT TRUCK

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
F Series — Cont'd			
1997-95	Switch — Overdrive Cancel F Super Duty, F-250, F-350	3F	WPT-229
2004	Switch — Park Brake F-150	1F	WPT-434
2002-01	Switch — Park Brake Extended Cab Pickup F-150	1F	WPT-434
2002-99	Switch — Park Brake F-250, F-250 Super Duty, F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	1M	WPT-488
1997	Switch — Park Brake F Super Duty, F-150, F-250, F-350	1M	WPT-488
1995-94	Switch — Park Brake F150/350	1F	WPT-371
1995-93	Switch — Park Brake F150/350; Square Cavity	1M	WPT-488
2004	Switch — Power Mirror F-150	8F	WPT-219
2004-98	Switch — Power Mirror F-150, F-250, F-250 Super Duty, F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	8F	WPT-117
1997-94	Switch — Power Mirror F150/350	8M	WPT-313
1993	Switch — Power Mirror F150/350	8M	WPT-252
2004-00	Switch — Power Sliding Rear Window F-150	7M	WPT-609
2004-97	Switch — Power Steering Pressure F150 Heritage	2M	WPT-372
1997-94	Switch — Power Steering Pressure F Super Duty, F-150, F-250, F-350	2M	WPT-372
1993	Switch — Power Steering Pressure 5.0L F-150, F-250	2M	WPT-372
2004	Switch — Power Window — Driver F-150	8F	WPT-655
2004-02	Switch — Power Window — Driver F150 Heritage	6F	WPT-600
	F250/550SD	6F	WPT-600
2003-02	Switch — Power Window — Driver F-150	8F	WPT-498
2001	Switch — Power Window — Driver F-150	7F	WPT-546
2001-99	Switch — Power Window — Driver F-250, F-250 Super Duty, F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	7F	WPT-606
2000-99	Switch — Power Window — Driver F-150	5F	WPT-816
1996-95	Switch — Power Window — Driver F Super Duty, F-150, F-250, F-350	15M	WPT-656
1994-93	Switch — Power Window — Driver F Super Duty, F-150, F-250, F-350	10M	WPT-787
1997-94	Switch — Power Window — Driver (Lockout) (421) F Super Duty, F-150, F-250, F-350	15M	WPT-656
2004	Switch — Power Window — LH — Rear F-150	8F	WPT-655
2004-02	Switch — Power Window — LH — Rear F250/550SD	6F	WPT-600
2004-01	Switch — Power Window — LH — Rear F150 Heritage	6F	WPT-600
2004	Switch — Power Window — Passenger (Front) F-150	8F	WPT-655
2004-02	Switch — Power Window — Passenger (Front) F250/550SD	6F	WPT-600
2004-01	Switch — Power Window — Passenger (Front) F150 Heritage	6F	WPT-600

WIRING PIGTAIL KITS LIGHT TRUCK



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
F Series — Cont'd			
2004	Switch — Power Window — RH — Rear F-150	8F	WPT-655
2004-02	Switch — Power Window — RH — Rear F250/550SD	6F	WPT-600
2004-01	Switch — Power Window — RH — Rear F150 Heritage	6F	WPT-600
	Switch — Reverse Park Aid F250/550SD	8M	WPT-264
2004	Switch — Seat (Driver) F-150	8M	WPT-399
2004-01	Switch — Seat (Driver) F150 Heritage	8M	WPT-399
	F250/550SD	8M	WPT-399
2004-99	Switch — Seat (Driver) F250/550SD	8F	WPT-379
2004-97	Switch — Seat (Driver) F-150	8F	WPT-379
1997-93	Switch — Seat (Driver) F150/350	8F	WPT-379
2004	Switch — Seat (Passenger) F-150	8M	WPT-399
2004-02	Switch — Seat (Passenger) F250/550SD	8F	WPT-379
1994-93	Switch — Seat Lumbar F150/350; Oval Cavity	2F	WPT-473
2004	Switch — Stop Lamp F-150	6F	WPT-598
2004-01	Switch — Stop Lamp F-150, F250/550SD	5F	WPT-415
1999-98	Switch — Stop Lamp F-150	2M	WPT-197
1997-92	Switch — Stop Lamp F-150, F-250	2M	WPT-197
2004	Terminal — Rear Window Defroster Grid F-150	1F	WPT-434
2004-99	Test Connector — Diagnostic F250/550SD	16F	WPT-615
2004-98	Test Connector — Diagnostic F-150	16F	WPT-615
2003-01	Test Connector — Diagnostic Stripped Chassis F550 Super Duty	16F	WPT-615
1997-94	Test Connector — Diagnostic F Super Duty, F-150, F-250, F-350	16F	WPT-615
2005	Trailer Tow — Vehicle Side F-150; Heavy Duty	4F	WPT-840
2004-02	Trailer Tow — Vehicle Side F250/550SD	7F	WPT-401
2004-99	Trailer Tow — Vehicle Side F150 Heritage	7F	WPT-401
2003-97	Trailer Tow — Vehicle Side F-150	4F	WPT-358
2001-99	Trailer Tow — Vehicle Side F250/550SD	4F	WPT-358
1998-97	Trailer Tow — Vehicle Side 4.2L F-150	7M	WPT-421
1997-96	Trailer Tow — Vehicle Side F150/350	4F	WPT-358
1997-94	Trailer Tow — Vehicle Side F150/350	7M	WPT-421
2004	Transceiver — Passive Anti-Theft (PATS) F-150	4M	WPT-668



WIRING PIGTAIL KITS LIGHT TRUCK

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
F Series — Cont'd			
2004	Transceiver — Passive Anti-Theft (PATS) — Cont'd F150 Heritage	4F	WPT-261
2004-99	Transceiver — Passive Anti-Theft (PATS) F-250, F-250 Super Duty, F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	4M	WPT-293
2004-98	Transceiver — Passive Anti-Theft (PATS) F150 Heritage	4M	WPT-293
1994-93	Transmission 10-Way F150/350	12M	WPT-571
2000-97	Transmission 12-way F-150	12M	WPT-590
2004-00	Valve — Fuel Tank Selector Diesel F250/550SD	6M	WPT-297
1997-94	Valve — Fuel Tank Selector Bi-Fuel, Diesel F Super Duty, F-150, F-250, F-350	6M	WPT-297
1996-93	Valve — Thermactor Air Diverter (TAD) F-150, F-250	2M	WPT-146
2004-99	Valve — Vapor Management 5.4L, 6.8L F-150, F-250, F-250 Super Duty, F-350 Super Duty, F-450 Super Duty, F-550 Super Duty	2M	WPT-545
2002-99	Valve — Vapor Management Stripped Chassis F550 Super Duty	2M	WPT-545
2002-97	Valve — Vapor Management F-150	2M	WPT-545
1997	Valve — Vapor Management 7.5L F Super Duty, F-250, F-350	2M	WPT-545
1997-95	Valve — Vapor Management 5.8L F250/350	2M	WPT-545
1996	Valve — Vapor Management 4.9L, 5.0L F150/350	2M	WPT-545
1996-95	Valve — Vapor Management 5.8L F-150	2M	WPT-545
Ranger			
2002-93	AC Compressor Clutch	2M	WPT-173
2004-00	Actuator — Door Lock — LH — Front	2M	WPT-312
1997-93	Actuator — Door Lock — LH — Front	2M	WPT-312
2004-99	Actuator — Door Lock — LH — Rear	2M	WPT-312
2004-00	Actuator — Door Lock — RH — Front	2M	WPT-312
1997-93	Actuator — Door Lock — RH — Front	2M	WPT-312
2004-01	Actuator — Intake Manifold Valve 2.3L	3F	WPT-560
2003	Actuator — Intake Manifold Valve 3.0L	3F	WPT-560
2004-95	Actuator — Speed Control	10M	WPT-762
2004-98	Alternator 2.5L, 3.0L, 4.0L	1M	WPT-852
1997-96	Alternator	1M	WPT-851
1994-93	Amplifier — Speed Control	6M	WPT-268
1998	CD Changer	12M	WPT-164
1994-93	CD Changer	14M	WPT-296
2004	Capacitor — Ignition / Radio	1M	WPT-352
2004-00	Capacitor — Ignition / Radio 4.0L	1M	WPT-352
2001-00	Capacitor — Ignition / Radio 2.5L	1M	WPT-352
2000-93	Capacitor — Ignition / Radio	1M	WPT-352
2004-00	Cigar Lighter	1M	WPT-476
1997-95	Clock	8F	WPT-100
2004	Coil — Ignition 3.0L	4M	WPT-508
2004-01	Coil — Ignition 4 Cyl. 2.3L	3F	WPT-517

WIRING PIGTAIL KITS

LIGHT TRUCK



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
Ranger — Cont'd			
2004-98	Coil — Ignition 4.0L	4M	WPT-207
2003	Coil — Ignition 6 Cyl. 3.0L	3F	WPT-517
2002-01	Coil — Ignition 3.0L OHV 12 Valve	4M	WPT-508
2001-00	Coil — Ignition 2.5L	4M	WPT-207
2000-98	Coil — Ignition 3.0L	4M	WPT-207
1997-95	Coil — Ignition	4M	WPT-511
1997-93	Coil — Ignition 4.0L	4M	WPT-511
2004-00	Control — Engine Air Shutoff	2F	WPT-349
1998-95	Control Head — Electronic Automatic Temperature (EATC)	13F	WPT-176
2004	Fuel Injector 3.0L	2M	WPT-372
2001	Fuel Injector 2.5L	2M	WPT-260
2000	Fuel Injector 2.5L, 3.0L	2M	WPT-260
1998	Fuel Injector 3.0L	2M	WPT-260
1997-95	Fuel Injector 4.0L Polarity letter not specified; Square; Black	2M	WPT-372
	Polarity letter not specified; Rectangle; Black	2M	WPT-260
1994-93	Fuel Injector 3.0L Spark Plug #1	2M	WPT-372
	3.0L Spark Plug #2-#6	2M	WPT-260
	4.0L	2M	WPT-372
2004	Fuel Pump / Sending Unit	2M	WPT-536
2003	Fuel Pump / Sending Unit Gas Only	4M	WPT-818
	Flex	8M	WPT-737
2002-01	Fuel Pump / Sending Unit 2.3L, 3.0L, 4.0L	4M	WPT-818
2001-00	Fuel Pump / Sending Unit 4 Cyl.	8M	WPT-817
2001-99	Fuel Pump / Sending Unit Flex	8M	WPT-737
1999-98	Fuel Pump / Sending Unit	8M	WPT-817
1997-93	Fuel Pump / Sending Unit	4M	WPT-454
2004-93	Horn	1M	WPT-378
2004-00	Instrument Cluster	16M	WPT-202
2004-95	Instrument Cluster	10M	WPT-676
1997-96	Instrument Cluster	16M	WPT-202
1997-95	Instrument Cluster	12M	WPT-208
1995	Instrument Cluster All	16M	WPT-332
1995-93	Instrument Cluster	14M	WPT-383
1997	Junction Box — Relay	15M	WPT-732
2003-98	Lamp — Ash Tray	2F	WPT-251
2004-95	Lamp — CHMSL (Center High Mount Stop Lamp)	3M	WPT-594
2004	Lamp — Dome	1F	WPT-674
2003-00	Lamp — Dome Polarity letter not specified; Long housing; Black	1F	WPT-265
	Polarity letter not specified; Short housing; Black	1F	WPT-674
2000	Lamp — Dome	1F	WPT-265
	Extended Cab Pickup	1F	WPT-265
1999-95	Lamp — Dome	1F	WPT-674

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
Ranger — Cont'd			
1997-95	Lamp — Dome		
	All	1F	WPT-274
	Lamp — Dome/ Map	1F	WPT-674
2004-03	Lamp — Fog / Driving		
	3.0L, 4.0L	2F	WPT-248
2002-01	Lamp — Fog / Driving	2F	WPT-107
2000	Lamp — Fog / Driving		
	3.0L, 4.0L	2F	WPT-248
1997-95	Lamp — Fog / Driving	4M	WPT-152
2003-98	Lamp — Front Turn	3M	WPT-105
2003	Lamp — Front Turn/Marker	3M	WPT-109
2002	Lamp — Front Turn/Marker	3M	WPT-109
2001-98	Lamp — Front Turn/Marker	3M	WPT-108
1995-93	Lamp — Glove Box	2M	WPT-314
2003-93	Lamp — Headlamp- High/Low Beam	3M	WPT-110
2004-00	Lamp — Instrument	2M	WPT-597
1998-95	Lamp — Instrument	2M	WPT-597
1994-93	Lamp — Instrument	4M	WPT-417
2004-03	Lamp — License	2M	WPT-536
2002	Lamp — License	2F	WPT-150
2001-93	Lamp — License	2N/A	WPT-149
2004-98	Lamp — Map	1F	WPT-674
1996-95	Lamp — Map	1F	WPT-265
2001-98	Lamp — Park/Turn/Stop	3M	WPT-108
2001	Lamp — Rear Turn	3M	WPT-109
2000-98	Lamp — Rear Turn	3M	WPT-105
1997-95	Lamp — Rear Turn	2M	WPT-211
2003-02	Lamp — Reverse	3M	WPT-106
2001	Lamp — Reverse		
	Polarity letter not specified; Oval; Gray	3M	WPT-105
	Polarity letter not specified; Oval; Green	3M	WPT-106
2000-98	Lamp — Reverse	3M	WPT-106
2003-00	Lamp — Side Marker	2F	WPT-150
1998-94	Lamp — Side Marker	2N/A	WPT-149
1998	Lamp — Stop / Park	3M	WPT-108
1996-95	Lamp — Under Hood	2M	WPT-370
2004-93	Mirror — Sideview	3F	WPT-348
1994-93	Mirror — Sideview		
	3.0L	3F	WPT-348
2004-98	Module — Anti-theft	16F	WPT-645
2004-99	Module — Daytime Running Lamp (DRL)	6F	WPT-455
1998-93	Module — Daytime Running Lamp (DRL)	8M	WPT-298
1997-93	Module — Ignition	6M	WPT-514
1994-93	Module — Ignition		
	6 Cyl. 4.0L (245)	12M	WPT-540
1997-95	Module — Radio Power Antenna	8F	WPT-100
2003-95	Module — Transfer Case Shift Control	10M	WPT-504
1994-93	Module — Transfer Case Shift Control		
	Extended Cab Pickup	8M	WPT-366
	5M	WPT-300
2004-00	Module — Warning Chime / Beltminder		
	Left	4F	WPT-582
	Right	4F	WPT-670
1995-93	Module — Warning Chime / Beltminder	7M	WPT-512
2004-01	Motor — EGR Valve	6F	WPT-739
2003	Motor — EGR Valve		
	3.0L	6F	WPT-739
2004-01	Motor — Engine Cooling Fan		
	2.3L	2F	WPT-361
2002-01	Motor — Engine Cooling Fan		
	With A/C	2F	WPT-361

WIRING PIGTAIL KITS

LIGHT TRUCK



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
Ranger — Cont'd			
1998	Motor — Heater A/C Blower (Auxiliary) Oval Cavity	2F	WPT-473
2001-95	Motor — Heater/ AC Blend Door	8F	WPT-100
2004-00	Motor — Idle Air Control	2M	WPT-357
1996	Motor — Idle Air Control	2M	WPT-357
1994-93	Motor — Idle Air Control	2M	WPT-684
1997-95	Motor — Power Seat Track	6F	WPT-599
2004-00	Motor — Power Window — LH — Front Oval Cavity	2F	WPT-473
1997-93	Motor — Power Window — LH — Front Oval Cavity	2F	WPT-473
2004-00	Motor — Power Window — RH — Front Oval Cavity	2F	WPT-473
1997-93	Motor — Power Window — RH — Front Oval Cavity	2F	WPT-473
1997-95	Motor — Seat Lumbar	2M	WPT-374
1994-93	Motor — Seat Lumbar	2M	WPT-478
2004	Motor — Transfer Case Electronic Shift	8F	WPT-174
2001-95	Motor — Transfer Case Electronic Shift	8F	WPT-174
1994-92	Motor — Transfer Case Electronic Shift	10M	WPT-661
2004-00	Motor — Windshield Washer Fluid Pump	2M	WPT-357
1999-97	Motor — Windshield Washer Fluid Pump	2M	WPT-355
1994-93	Motor — Windshield Washer Fluid Pump	2M	WPT-355
2003-98	Motor — Windshield Wiper	5F	WPT-158
1997	Motor — Windshield Wiper	6M	WPT-297
2004-95	Power Point	2M	WPT-355
2003-98	Radio	16F	WPT-186
2003-97	Radio	7M	WPT-154
		8M	WPT-155
2002-98	Radio	8F	WPT-185
2001-98	Radio	20F	WPT-184
1994-93	Radio Polarity letter not specified; Rectangle; Gray	8M	WPT-646
	Polarity letter not specified; Rectangle; Black	8M	WPT-696
2003-02	Radio — Amplifier	10F	WPT-156
		2F	WPT-236
2004-00	Relay — Flasher	5F	WPT-662
1999-98	Relay — Flasher	5F	WPT-802
1997-95	Relay — Flasher	5F	WPT-802
1995	Relay — Oil Level	5M	WPT-524
1999-98	Relay — Starter Motor 3.0L	1M	WPT-616
1997-93	Relay — Starter Motor	1M	WPT-616
2003-93	Resistor — Blower Motor (Front)	4M	WPT-114
2004	Sensor — Air Charge Temperature	2M	WPT-420
2001-95	Sensor — Air Charge Temperature	2M	WPT-420
1994-92	Sensor — Air Charge Temperature	2M	WPT-428
2004-95	Sensor — Anti-theft Ignition Tamper All	2N/A	WPT-471
2003-98	Sensor — Brake Fluid Level	3M	WPT-118
1997-95	Sensor — Brake Fluid Level	3M	WPT-4591
2004-03	Sensor — Cam Shaft Position 4.0L	2M	WPT-551
	2.3L, 3.0L	2M	WPT-231
2004-01	Sensor — Cam Shaft Position 3.0L	2F	WPT-759
2002	Sensor — Cam Shaft Position	2M	WPT-552
2001	Sensor — Cam Shaft Position	2F	WPT-579
1999-98	Sensor — Cam Shaft Position 4.0L	3M	WPT-196

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
Ranger — Cont'd			
1997-96	Sensor — Cam Shaft Position 3.0L, 4.0L	3M	WPT-196
1995	Sensor — Cam Shaft Position 3.0L	3M	WPT-196
	4.0L OHV	3M	WPT-681
1994-93	Sensor — Cam Shaft Position	4M	WPT-324
2003-01	Sensor — Catalyst Monitor	4M	WPT-112
2000-99	Sensor — Catalyst Monitor 3.0L	4M	WPT-807
2004-00	Sensor — Coolant Temperature 3.0L, 4.0L	2M	WPT-206
2001-00	Sensor — Coolant Temperature 2.5L	2M	WPT-206
1997-94	Sensor — Coolant Temperature	2M	WPT-206
1993	Sensor — Coolant Temperature 4.0L	2M	WPT-437
	3.0L	2M	WPT-437
2004-01	Sensor — Crank Shaft Position	2M	WPT-231
	3.0L	2F	WPT-759
2001-00	Sensor — Crank Shaft Position 2.5L	2F	WPT-579
2000	Sensor — Crank Shaft Position	2M	WPT-531
	3.0L	2F	WPT-579
1997-95	Sensor — Crank Shaft Position 2.3L, 3.0L, 4.0L	2F	WPT-579
1994-93	Sensor — Crank Shaft Position 4.0L	2M	WPT-372
2004-03	Sensor — Cylinder Head Temperature	2M	WPT-338
2002-01	Sensor — Cylinder Head Temperature 2.3L	2M	WPT-338
1999-98	Sensor — Delta Pressure Feedback EGR	3F	WPT-188
1994	Sensor — Delta Pressure Feedback EGR 2.3L	3M	WPT-458
1994-93	Sensor — Delta Pressure Feedback EGR	3M	WPT-458
2003	Sensor — Fuel Tank Pressure Transducer Extended Cab Pickup	3F	WPT-393
2003-02	Sensor — Fuel Tank Pressure Transducer 4WD Standard Cab Pickup	3F	WPT-393
2001	Sensor — Fuel Tank Pressure Transducer	3F	WPT-393
2004-01	Sensor — Heated Thermostat	2F	WPT-273
1998	Sensor — Intake Manifold Runner Control	2M	WPT-146
2004-03	Sensor — Knock 4.0L	2M	WPT-351
2003-01	Sensor — Knock 2.3L	2M	WPT-418
2004-01	Sensor — Manifold Absolute Pressure (MAP) 2.3L	4F	WPT-205
2003-97	Sensor — Mass Air Flow	6M	WPT-102
1996-95	Sensor — Mass Air Flow 2.3L, 3.0L, 4.0L	4F	WPT-256
1994-93	Sensor — Mass Air Flow 2.3L, 3.0L	4F	WPT-256
	4.0L	4M	WPT-511
2004-01	Sensor — O ₂ (HEGO/EGO) 3.0L, 4.0L	4M	WPT-807
2003-98	Sensor — O ₂ (HEGO/EGO) Gold Terminals / B Polarity	4M	WPT-111
1998	Sensor — O ₂ (HEGO/EGO) Gold Terminals / A Polarity	4M	WPT-112
1997	Sensor — O ₂ (HEGO/EGO) 2.3L Gold Terminals / A Polarity	4M	WPT-112

WIRING PIGTAIL KITS

LIGHT TRUCK



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
Ranger — Cont'd			
1996-95	Sensor — O2 (HEGO/EGO)		
	Gold Terminals / A Polarity	4M	WPT-112
	Gold Terminals / B Polarity	4M	WPT-111
1992-91	Sensor — O2 (HEGO/EGO)		
	3.0L	4M	WPT-807
1999-98	Sensor — Oil Level	3M	WPT-235
1997-93	Sensor — Oil Level	1M	WPT-237
2004	Sensor — Steering Rotation	4M	WPT-417
2003-01	Sensor — Throttle Position	3F	WPT-170
1995-93	Sensor — Throttle Position	3M	WPT-445
2004-97	Sensor — Transmission Range		
	AT	12M	WPT-806
1996-95	Sensor — Transmission Range	8M	WPT-389
2004-95	Solenoid — Brake Shift Park Interlock	3M	WPT-210
2002	Solenoid — Canister Vent	2M	WPT-322
1999-93	Solenoid — Canister Vent	2M	WPT-441
2004-98	Solenoid — EGR Vacuum Regulator	2M	WPT-359
1997-95	Solenoid — Pulse Vacuum 4x2 Hub (PVH)	2M	WPT-146
2004-98	Solenoid — Pulse Vacuum 4x4 Hub (PVH)		
	Tin Terminal	3F	WPT-754
2000	Solenoid — Pulse Vacuum 4x4 Hub (PVH)		
	Gold Terminal	3F	WPT-170
2004	Speaker — Door (Front)	2F	WPT-373
2003-02	Speaker — Door (Front)		
	Extended Cab Pickup	2F	WPT-373
2001-00	Speaker — Door (Front)	2F	WPT-373
1999-93	Speaker — Door (Front)	2M	WPT-416
2003	Speaker — Door (Rear)	2F	WPT-373
2002-01	Speaker — Door (Rear)		
	Extended Cab Pickup	2F	WPT-373
2002-00	Speaker — Door (Rear)		
	Standard Cab Pickup	2F	WPT-373
1999	Speaker — Door (Rear)	2F	WPT-373
2004	Speaker — Front	2F	WPT-373
2003	Speaker — Front		
	Extended Cab Pickup	2F	WPT-373
2002-00	Speaker — Front	2F	WPT-373
1998-95	Speaker — Front	2M	WPT-416
2004	Speaker — Rear	2F	WPT-373
2003-00	Speaker — Rear		
	Extended Cab Pickup	2F	WPT-373
1997-95	Speaker — Rear	2M	WPT-416
1994-93	Speaker — Rear		
	Standard Cab Pickup	2M	WPT-416
2004-98	Speaker — Subwoofer	10M	WPT-667
1997-95	Speaker — Subwoofer	14M	WPT-296
1998-95	Switch — 4x4 Control	4M	WPT-417
2003-98	Switch — A/C Compressor Clutch Cycling	4F	WPT-169
1997-94	Switch — A/C Compressor Clutch Cycling	2M	WPT-438
2001-98	Switch — A/C High Pressure	4F	WPT-169
2003-95	Switch — A/C Pressure Cut Off	4F	WPT-169
2004-95	Switch — Brake Pressure	2M	WPT-260
2004-00	Switch — Clutch Pedal Position	6M	WPT-518
1998	Switch — Clutch Pedal Position	6M	WPT-518
1997-93	Switch — Clutch Pedal Position	6M	WPT-507
2002-00	Switch — Coolant Temperature Sending Unit	1M	WPT-476
1997	Switch — Coolant Temperature Sending Unit		
	2.3L	2M	WPT-431
1997-93	Switch — Coolant Temperature Sending Unit	1M	WPT-476
1998-95	Switch — Courtesy Lamp	2M	WPT-441
1994-93	Switch — Courtesy Lamp	3F	WPT-213



WIRING PIGTAIL KITS LIGHT TRUCK

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
Ranger — Cont'd			
2004-00	Switch — Dimmer	4M	WPT-556
1997	Switch — Dimmer	4M	WPT-556
1996-95	Switch — Dimmer	6M	WPT-449
2003-95	Switch — Door Ajar / Interior Lamp	2M	WPT-146
2004-00	Switch — Door Lock (LH)	5M	WPT-527
1997-95	Switch — Door Lock (LH)	5M	WPT-527
1994-93	Switch — Door Lock (LH)	5M	WPT-385
2004-95	Switch — Door Lock (RH)	5M	WPT-780
1994-93	Switch — Door Lock (RH)	5M	WPT-555
2004-00	Switch — Fog Lamp	6M	WPT-259
1997-95	Switch — Fog Lamp	6M	WPT-259
2003-95	Switch — Headlamp	11F	WPT-187
1995-93	Switch — Headlamp Dimmer	4M	WPT-453
2004-95	Switch — Heater / A/C Blower (Front)	4M	WPT-103
2001-98	Switch — Heater A/C Blower (Rear)	8F	WPT-117
2004-00	Switch — Heater A/C Temp Control	4M	WPT-448
2004-95	Switch — Heater A/C Temp Control w/AC	3M	WPT-328
1997-95	Switch — Heater A/C Temp Control	4M	WPT-344
1999-95	Switch — Hood Ajar	4M	WPT-152
2004-00	Switch — Ignition	15M	WPT-475
1997-95	Switch — Ignition	16M	WPT-577
2004-00	Switch — Inertia	3M	WPT-446
1998-93	Switch — Inertia	3M	WPT-446
1997-95	Switch — Message Center	8F	WPT-100
2003-00	Switch — Multi Function	9M	WPT-611
2001-95	Switch — Multi Function	7F	WPT-179
1997-95	Switch — Multi Function	9M	WPT-611
2001-98	Switch — Neutral Tow	1F	WPT-309
2004	Switch — Oil Sending Unit	1M	WPT-439
2003-01	Switch — Oil Sending Unit	1M	WPT-439
1997-93	Switch — Oil Sending Unit	1M	WPT-616
2004-95	Switch — Overdrive Cancel	2F	WPT-226
2002-01	Switch — Park Brake	1M	WPT-488
2000	Switch — Park Brake	2N/A	WPT-471
1997-95	Switch — Park Brake	1M	WPT-488
2004-95	Switch — Power Mirror	8M	WPT-313
2003-01	Switch — Power Steering Pressure 2.3L, 3.0L	2M	WPT-372
2001-00	Switch — Power Steering Pressure 2.5L	2M	WPT-372
1998-95	Switch — Power Steering Pressure	2M	WPT-372
2004-95	Switch — Power Window — Driver	6M	WPT-388
1994-93	Switch — Power Window — Driver	6M	WPT-323
2004-00	Switch — Power Window — LH — Rear	10M	WPT-424
	Switch — Power Window — Passenger (Front)	5M	WPT-523
1997-95	Switch — Power Window — Passenger (Front)	5M	WPT-523
1994-93	Switch — Power Window — Passenger (Front)	5M	WPT-315
2004-03	Switch — Power Window — RH — Rear	7M	WPT-578
1998	Switch — Service Interval Reset	8F	WPT-100
2004-00	Switch — Stop Lamp	5F	WPT-415
1997-93	Switch — Stop Lamp	2M	WPT-197
1995	Switch — Turn Signal	9M	WPT-611
1994-93	Switch — Turn Signal / Windshield Wiper / Washer	9M	WPT-472
2004-98	Switch — Wiper Washer — Rear	6M	WPT-246
2004-00	Test Connector — Diagnostic	16F	WPT-615
1997-95	Test Connector — Diagnostic	16F	WPT-615
1999-98	Test Connector — Tachometer	2F	WPT-497
1997-93	Test Connector — Tachometer	2F	WPT-353
2004-98	Trailer Tow — Vehicle Side	4F	WPT-358
2002-01	Transceiver — Passive Anti-Theft (PATS)	4F	WPT-467

WIRING PIGTAIL KITS LIGHT TRUCK



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
Ranger — Cont'd			
2000-98	Transceiver — Passive Anti-Theft (PATS)	4M	WPT-293
2003-01	Valve — Vapor Management		
	2.3L	2M	WPT-545
2003-00	Valve — Vapor Management		
	3.0L, 4.0L	2M	WPT-545
2001-00	Valve — Vapor Management		
	2.5L	2M	WPT-545
Windstar			
2001-95	AC Compressor Clutch	2M	WPT-173
2003-95	Actuator — Door Lock	2M	WPT-312
	Actuator — Door Lock — Decklid/Liftgate	2M	WPT-312
2003-99	Actuator — Door Lock — LH — Sliding Door	2M	WPT-312
2002-95	Actuator — Speed Control	10M	WPT-762
2001-99	Alternator	3M	WPT-118
1998-95	Alternator	3M	WPT-119
2003-95	Bulkhead — Transmission — In-line (Female)	9F	WPT-570
2001-99	CD Changer	12M	WPT-164
1998-95	CD Changer	14M	WPT-296
1998	Capacitor — Ignition / Radio		
	3.8L	1M	WPT-352
1998-95	Capacitor — Ignition / Radio		
	3.0L	1M	WPT-352
2003-99	Cigar Lighter	3F	WPT-329
2003-95	Cigar Lighter		
	Round Cavity	1M	WPT-476
	Square Cavity	1M	WPT-488
2003-01	Coil — Ignition		
	3.8L	4M	WPT-508
2000-99	Coil — Ignition		
	3.8L	4M	WPT-207
1997-95	Coil — Ignition		
	3.0L, 3.8L	4M	WPT-511
2003-95	Control — Electronic Brake (Trailer Tow)	6F	WPT-587
2003-99	Control Head — Electronic Automatic Temperature (EATC)	12F	WPT-673
2003-01	Element — Heated Seat	4M	WPT-307
	2M	WPT-548
	Floor Console — Inline (Male)	4M	WPT-542
	16M	WPT-650
2003-02	Fuel Injector		
	3.8L	2M	WPT-372
2001-99	Fuel Injector		
	3.8L	2F	WPT-159
2000-95	Fuel Injector		
	3.0L	2M	WPT-260
1998-95	Fuel Injector		
	3.8L	2M	WPT-372
2003-98	Fuel Pump / Sending Unit	8M	WPT-817
2003-99	Fuse Box — Instrument Panel (7-Pin)	7F	WPT-606
1998-95	Horn	1M	WPT-378
1998	Instrument Cluster	16M	WPT-202
1995	Instrument Cluster	16M	WPT-341
2003-00	Junction Box — Relay	6F	WPT-600
2003-99	Junction Box — Relay	10F	WPT-516
1995	Lamp — Ash Tray	2F	WPT-251
2003-99	Lamp — CHMSL (Center High Mount Stop Lamp)	3F	WPT-723
2003-95	Lamp — CHMSL (Center High Mount Stop Lamp)	2N/A	WPT-471
	Lamp — Courtesy — Door	2F	WPT-356
	Lamp — Courtesy — Footwell	2M	WPT-370
	2F	WPT-356
	Lamp — Courtesy — Reading (Rear)	2M	WPT-267

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
Windstar — Cont'd			
2003-95	Lamp — Courtesy — Reading (Rear) — Cont'd	1F	WPT-674
1998-95	Lamp — Dimmer Switch	2F	WPT-342
2003-99	Lamp — Dome	3F	WPT-723
2003-95	Lamp — Dome	1F	WPT-274
1998-97	Lamp — Fog / Driving	2M	WPT-122
1996-95	Lamp — Fog / Driving	4M	WPT-152
2003-95	Lamp — Front Cornering / Turn	3M	WPT-105
2002-01	Lamp — Front Turn	2M	WPT-536
1998-95	Lamp — Front Turn	3M	WPT-105
2003-95	Lamp — Front Turn/Marker	3M	WPT-109
	Lamp — Glove Box	2M	WPT-314
1998-95	Lamp — Headlamp Switch	2F	WPT-342
2003-95	Lamp — Headlamp- High/Low Beam	3M	WPT-110
	Lamp — Instrument	2M	WPT-597
	Lamp — License	2N/A	WPT-471
2002-99	Lamp — Rear Turn	3M	WPT-105
1996-95	Lamp — Rear Turn	3M	WPT-105
2002-95	Lamp — Reverse	3M	WPT-106
2002-99	Lamp — Side Marker	2N/A	WPT-471
1998	Lamp — Side Marker	2M	WPT-536
1998-95	Lamp — Side Marker	2N/A	WPT-149
2002-95	Lamp — Stop / Park	3M	WPT-108
2003-00	Lamp — Storage Compartment — Cargo	3F	WPT-203
2003-95	Lamp — Storage Compartment — Cargo	2M	WPT-267
	Lamp — Under Hood	2M	WPT-370
2003-99	Mirror — Rearview (Electrochromatic)	6M	WPT-193
1998-95	Mirror — Rearview (Electrochromatic)	6M	WPT-563
2003-01	Mirror — Sideview	8M	WPT-337
2002-98	Mirror — Sideview	3F	WPT-348
1998-95	Mirror — Sideview	6F	WPT-599
1997-96	Mirror — Sideview / Heated	6F	WPT-599
2003-95	Mirror — Vanity	1F	WPT-562
1999-98	Module — Anti-theft		
	Left	13M	WPT-610
	Right	13M	WPT-627
2003-99	Module — Auto Lamps	6M	WPT-246
2003-95	Module — Daytime Running Lamp (DRL)	8M	WPT-298
2003-01	Module — Heated Seat (Drivers)	10F	WPT-156
1997-96	Module — Ignition		
	6 Cyl. 3.0L	12M	WPT-540
1995	Module — Ignition	12M	WPT-540
2003-98	Module — Lighting Control	4F	WPT-408
2003-99	Module — Power Sliding Door — LH	4F	WPT-411
	12F	WPT-673
	Module — Power Sliding Door — RH	4F	WPT-411
	12F	WPT-673
	Module — Remote Keyless Entry	12F	WPT-673
1997-95	Module — Remote Keyless Entry	8F	WPT-679
1996-95	Module — Remote Keyless Entry		
	Left	13M	WPT-612
	Right	13M	WPT-625
	16M	WPT-632
2003-01	Module — Seat Memory	2M	WPT-374
	Polarity letter not specified; Square; Black	16M	WPT-242
	Polarity letter not specified; Rectangle; Black	16M	WPT-632
2000	Module — Seat Memory		
	16 Cavity; Rear	16M	WPT-242
	2 Cavity	2M	WPT-374
	16 Cavity; Front	16M	WPT-632
2002-01	Monitor — Video/DVD	6M	WPT-246
2003-98	Motor — Adjustable Pedal	2F	WPT-544

WIRING PIGTAIL KITS

LIGHT TRUCK



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
Windstar — Cont'd			
1997-95	Motor — Air Suspension Compressor	4F	WPT-171
2003-98	Motor — Engine Cooling Fan	3F	WPT-168
2002-96	Motor — Engine Cooling Fan 3.8L Right	3M	WPT-362
2000-95	Motor — Engine Cooling Fan 3.0L Right	3M	WPT-362
2003-95	Motor — Heater A/C Blower (Auxiliary)	2M	WPT-104
2001-95	Motor — Heater/ AC Blend Door	8F	WPT-100
2003-96	Motor — Idle Air Control 3.8L	2M	WPT-357
1999-98	Motor — Idle Air Control 3.0L	2M	WPT-357
1997-96	Motor — Idle Air Control 3.0L	2M	WPT-684
1995	Motor — Idle Air Control	2M	WPT-684
2003-99	Motor — Power Seat Track Driver and Passenger Captain Chair	2F	WPT-405
2003-95	Motor — Power Window — LH — Front	2M	WPT-345
	Motor — Power Window — RH — Front	2M	WPT-345
	Motor — Rear Quarter Flip Window	2M	WPT-314
	Motor — Rear Window Washer Fluid Pump	2M	WPT-355
2003-99	Motor — Rear Window Wiper	3M	WPT-419
1998-95	Motor — Rear Window Wiper	3M	WPT-446
2003-95	Motor — Seat Lumbar Oval Cavity	2F	WPT-473
2001-97	Motor — Windshield Wiper	5F	WPT-158
1996-95	Motor — Windshield Wiper	6M	WPT-297
2003-99	Overhead Console — In-line (Female)	8F	WPT-665
1998	Overhead Console — In-line (Female)	14M	WPT-666
2003-01	Power Point	3F	WPT-682
1998	Power Point	3F	WPT-682
1997-95	Power Point	2M	WPT-355
2003-02	Radio	8M	WPT-696
2003-99	Radio	20F	WPT-184
	16F	WPT-186
2001-99	Radio	7M	WPT-154
	8M	WPT-155
1998-96	Radio	8M	WPT-696
1998-95	Radio	2M	WPT-247
2003-02	Radio — Amplifier	3F	WPT-348
2003-95	Radio — Amplifier	8M	WPT-215
1998	Radio — Amplifier	14M	WPT-296
1996-95	Radio — Rear Audio Control	14M	WPT-296
2003-99	Radio — Rear Audio Control	16M	WPT-332
1998	Radio — Rear Audio Control	16M	WPT-198
2003-95	Relay — Air Suspension Compressor Rear Air Suspension; Standard Duty Rear Suspension	4M	WPT-831
2002-96	Relay — Load Level 3.8L	4M	WPT-392
2000-95	Relay — Load Level 3.0L	4M	WPT-392
2003-95	Relay — Starter Motor 3.8L	1F	WPT-371
2000-95	Relay — Starter Motor 3.0L	1F	WPT-371
2003-95	Resistor — Blower Motor (Auxiliary)	4F	WPT-115
2003-02	Resistor — Blower Motor (Front)	4M	WPT-114
2003-95	Resistor — Fan Dropping	2F	WPT-361
1995	Seat — Power Connection (Driver)	2M	WPT-113
2003-99	Sensor — Air Charge Temperature	2M	WPT-420



WIRING PIGTAIL KITS LIGHT TRUCK

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
Windstar — Cont'd			
1998-95	Sensor — Air Charge Temperature 3.0L	2M	WPT-420
2002-97	Sensor — Ambient Temp	2M	WPT-437
2003-99	Sensor — Brake Fluid Level	3M	WPT-118
1998-95	Sensor — Brake Fluid Level 12 and 18 Gauge	3M	WPT-4591
1998	Sensor — Cam Shaft Position 3.0L, 3.8L	3M	WPT-196
1997-95	Sensor — Cam Shaft Position 3.0L	3M	WPT-196
1995	Sensor — Cam Shaft Position 3.8L	4M	WPT-511
2003-96	Sensor — Coolant Temperature	2M	WPT-206
1995	Sensor — Coolant Temperature 3.0L	2M	WPT-206
2003-01	Sensor — Crank Shaft Position	2F	WPT-759
2000-95	Sensor — Crank Shaft Position	2F	WPT-579
2003-95	Sensor — Delta Pressure Feedback EGR 3.8L Rectangular Cavity	3F	WPT-393
2000-95	Sensor — Delta Pressure Feedback EGR Round Cavity	3F	WPT-188
2003-99	Sensor — Intake Manifold Runner Control	4F	WPT-347
1998-96	Sensor — Intake Manifold Runner Control	2M	WPT-146
1995	Sensor — Intake Manifold Runner Control	3F	WPT-573
2002-01	Sensor — Mass Air Flow	6M	WPT-102
1999-95	Sensor — Mass Air Flow	6M	WPT-102
1997-96	Sensor — Mass Air Flow	4F	WPT-225
2003-99	Sensor — Mass Air Flow — In-line (Female)	8F	WPT-712
	Sensor — O ₂ (HEGO/EGO) 3.8L	4M	WPT-807
2001	Sensor — O ₂ (HEGO/EGO)	4M	WPT-112
1998-95	Sensor — O ₂ (HEGO/EGO) Polarity A; Round; Blue	4M	WPT-112
2003-95	Sensor — Oil Level	1M	WPT-237
2003-99	Sensor — Reverse Park Aid (RPA)	3F	WPT-223
2003	Sensor — Seat Track Position	2F	WPT-490
2002-97	Sensor — Throttle Position	3F	WPT-170
2003-99	Sensor — Transmission Range	12M	WPT-803
2003-95	Sensor — Washer Fluid Level	2M	WPT-684
	Solenoid — Brake Shift Park Interlock	3M	WPT-210
2003-98	Solenoid — Canister Vent	2M	WPT-322
2003-96	Solenoid — EGR Vacuum Regulator	2M	WPT-359
1997-95	Solenoid — EGR Vacuum Regulator 3.0L	2M	WPT-374
2003-00	Speaker — Door (Front)	2F	WPT-373
1999-95	Speaker — Door (Front)	2M	WPT-416
2003-99	Speaker — Rear	2F	WPT-373
1998-95	Speaker — Rear	2M	WPT-416
2003-95	Speaker — Subwoofer	2M	WPT-478
2003	Switch — A/C Compressor Clutch Cycling	4F	WPT-169
1998	Switch — A/C Compressor Clutch Cycling	4F	WPT-169
1995	Switch — A/C Compressor Clutch Cycling	2M	WPT-438
1998-96	Switch — A/C High Pressure	4M	WPT-303
1995	Switch — A/C Pressure Cut Off	4M	WPT-303
2003-01	Switch — Adjustable Pedal	8F	WPT-683
2003-95	Switch — Air Suspension	3M	WPT-617
	Switch — Brake Pressure	2M	WPT-260
	Switch — Coolant Temperature Sending Unit	1M	WPT-476
2003-99	Switch — Courtesy Lamp — Sliding Door	2F	WPT-349
1998-95	Switch — Courtesy Lamp — Sliding Door	2M	WPT-146
2003-95	Switch — Deck Lid / Lift Gate Ajar	2M	WPT-146

WIRING PIGTAIL KITS

LIGHT TRUCK



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
Windstar — Cont'd			
2003-99	Switch — Dimmer	4M	WPT-293
1998-95	Switch — Dimmer	6M	WPT-449
2003-99	Switch — Door Ajar / Interior Lamp	2M	WPT-441
1998-95	Switch — Door Ajar / Interior Lamp	2M	WPT-146
2003-00	Switch — Door Lock (LH)	8F	WPT-683
1998	Switch — Door Lock (LH)	5M	WPT-527
1996-95	Switch — Door Lock (LH)	5M	WPT-527
2003-95	Switch — Door Lock (RH)	7F	WPT-400
1998	Switch — Fog Lamp	6M	WPT-258
1997-95	Switch — Fog Lamp	6M	WPT-259
1998-95	Switch — Gear Shift Select / Neutral Safety	8M	WPT-389
2003-99	Switch — Headlamp	8F	WPT-299
1998	Switch — Headlamp	8M	WPT-532
1997-95	Switch — Headlamp	8M	WPT-534
1998-95	Switch — Heated Back Light (Rear Defrost)	5M	WPT-377
2003-00	Switch — Heated Seat — LH — Front	8M	WPT-547
2003-01	Switch — Heated Seat — RH — Front	8M	WPT-547
2003-95	Switch — Heater / A/C Blower (Front)	4M	WPT-103
1998-95	Switch — Heater A/C Blower (Rear)	6M	WPT-369
2003-99	Switch — Heater A/C Temp Control	4M	WPT-448
1998-95	Switch — Heater A/C Temp Control	3M	WPT-328
2003-95	Switch — Ignition	15M	WPT-475
	Switch — Inertia	3M	WPT-446
2000-99	Switch — Multi Function	10F	WPT-156
1998-95	Switch — Multi Function	7F	WPT-179
	9M	WPT-611
2003-99	Switch — Oil Sending Unit	1M	WPT-413
1998-95	Switch — Oil Sending Unit	1M	WPT-616
2003-99	Switch — Overdrive Cancel	2M	WPT-233
1998-95	Switch — Overdrive Cancel	3M	WPT-214
2003	Switch — Park Brake	2F	WPT-479
2002-95	Switch — Park Brake	1M	WPT-488
2002-97	Switch — Power Mirror	8F	WPT-117
1996-95	Switch — Power Mirror	8M	WPT-313
2003-99	Switch — Power Sliding Door — RH	6F	WPT-285
	Switch — Power Steering Pressure		
	3.8L	2M	WPT-260
2000-98	Switch — Power Window — Driver	7F	WPT-496
1997-95	Switch — Power Window — Driver	14F	WPT-339
2003-01	Switch — Power Window — Passenger (Front)	6F	WPT-600
2000-95	Switch — Power Window — Passenger (Front)		WPT-799
2003-98	Switch — Power Window — Quarter Glass	7F	WPT-426
2003-95	Switch — Power Window — Quarter Glass	6F	WPT-695
2003-99	Switch — Reverse Park Aid	6F	WPT-285
2003-00	Switch — Seat (Driver)		
	Captain Chair	8F	WPT-384
1999	Switch — Seat (Driver)		
	Seat-Captain Chair	8F	WPT-384
2003-00	Switch — Seat Lumbar		
	Captain Chair	2F	WPT-364
1999	Switch — Seat Lumbar		
	Seat-Captain Chair	2F	WPT-364
1998-95	Switch — Seat Lumbar	2F	WPT-364
1996	Switch — Side Door Ajar	2M	WPT-146
2003	Switch — Sliding Door Contact	7F	WPT-468
	4M	WPT-508
2002-98	Switch — Sliding Door Contact	8F	WPT-299
1998-95	Switch — Sliding Door Contact	4M	WPT-654
2003-99	Switch — Stop Lamp	2F	WPT-373
2003-95	Switch — Stop Lamp	2M	WPT-197
1998	Switch — Traction Control	7M	WPT-578

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
Windstar — Cont'd			
2003-01	Switch — Traction Control/Reverse Park Aid (RPA) High Output AC, Manual AC	6F	WPT-285
2000-99	Switch — Traction Control/Reverse Park Aid (RPA)	6F	WPT-285
2003-95	Switch — Wiper Washer — Rear	8M	WPT-245
	Terminal — Rear Window Defroster Grid	1F	WPT-371
	Test Connector — Diagnostic	16F	WPT-615
	Trailer Tow — Vehicle Side	2M	WPT-428
2002-95	Trailer Tow — Vehicle Side	4F	WPT-171
2003-98	Transceiver — Passive Anti-Theft (PATS)	4M	WPT-293
	Valve — Vapor Management Round Cavity	2M	WPT-545
1997-95	Valve — Vapor Management 3.0L Rectangular Cavity	2M	WPT-260
LINCOLN TRUCK			
Aviator			
2004	AC Compressor Clutch	2F	WPT-159
2004-03	Actuator — Door Lock — Decklid/Liftgate	2F	WPT-373
	Actuator — Door Lock — LH — Rear	2F	WPT-292
	Actuator — Door Lock — RH — Rear	2F	WPT-292
	Actuator — Speed Control	6F	WPT-271
2003	Capacitor — Ignition / Radio	1M	WPT-352
2004-03	Cigar Lighter	3F	WPT-329
	Clock	6M	WPT-276
	Junction Box — Relay	15M	WPT-732
2003	Junction Box — Relay	10F	WPT-516
	16F	WPT-645
2004-03	Lamp — CHMSL (Center High Mount Stop Lamp)	2F	WPT-195
	2M	WPT-720
	Lamp — Courtesy — Footwell	2F	WPT-356
	Lamp — Dome	3F	WPT-203
	Lamp — Glove Box	2M	WPT-314
2003	Lamp — Headlamp Switch	2F	WPT-294
2004-03	Lamp — Overhead Console	4F	WPT-582
	Lamp — Reverse	2M	WPT-211
	Lamp — Storage Compartment — Cargo	2F	WPT-316
	Mirror — Rearview (Electrochromatic)	6M	WPT-193
2003	Mirror — Sideview / Heated	12M	WPT-541
2004-03	Mirror — Vanity	2F	WPT-479
2003	Module — Anti-theft	4M	WPT-668
	14F	WPT-728
	Module — Auto Lamps	6F	WPT-502
2004-03	Module — Daytime Running Lamp (DRL)	6F	WPT-455
	Module — EGR System	6F	WPT-436
2003	Module — Electronic Automatic Temperature Control (EATC)	16F	WPT-725
	Module — Isolator Antenna	1M	WPT-700
2004-03	Module — Power Moonroof	8M	WPT-624
2003	Module — Remote Keyless Entry	2M	WPT-714
2004-03	Module — Seat Memory	2F	WPT-236
	20F	WPT-255
	10F	WPT-559
2003	Module — Tire Pressure	16F	WPT-581
	Module — Variable Assist Power Steering (VAPS) Left	13M	WPT-610
	Right	13M	WPT-627
2005-03	Module — Variable Speed Blower Controller For A/C With ATC	5F	WPT-153
2004-03	Monitor — Video/DVD	20F	WPT-255
	Motor — Engine Cooling Fan	2F	WPT-698
	Motor — Heater / AC Blower (Rear)	4M	WPT-222

WIRING PIGTAIL KITS

LIGHT TRUCK



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
LINCOLN TRUCK — Cont'd			
Aviator — Cont'd			
2003	Motor — Idle Air Control	2M	WPT-357
2004-03	Motor — Power Seat Track	8F	WPT-643
	Motor — Power Seat Track with Memory	8F	WPT-643
	Motor — Power Window — LH — Front	8F	WPT-521
	Motor — Power Window — LH — Rear	2F	WPT-292
	Motor — Power Window — RH — Front	2F	WPT-605
	Motor — Power Window — RH — Rear	2F	WPT-605
	Motor — Rear Window Washer Fluid Pump	2M	WPT-357
	Motor — Rear Window Wiper	8F	WPT-310
	Motor — Transfer Case Electronic Shift	2M	WPT-536
	Motor — Windshield Washer Fluid Pump	2M	WPT-357
	Motor — Windshield Wiper	12F	WPT-850
	Power Point	3F	WPT-682
2003	Radio	16F	WPT-186
2004-03	Radio — Amplifier	16F	WPT-645
	Resistor — Blower Motor (Auxiliary)	4F	WPT-726
	Sensor — Adjustable Pedal	3M	WPT-241
	Sensor — Ambient Temp	2M	WPT-437
	Sensor — Brake Pressure	3F	WPT-230
	Sensor — Coolant Temperature	2M	WPT-284
2003	Sensor — Crank Shaft Position	2F	WPT-759
2004-03	Sensor — Cylinder Head Temperature	2M	WPT-338
	Sensor — EATC In Car Temperature	2F	WPT-294
2003	Sensor — Intake Manifold Runner Control	4M	WPT-509
2004-03	Sensor — Knock	4F	WPT-225
	Sensor — Reverse Park Aid (RPA)	3F	WPT-223
2004	Sensor — Sunload	6F	WPT-502
	Sensor — Throttle Position	3F	WPT-170
2004-03	Sensor — Transmission Range	12M	WPT-806
	Sensor — Washer Fluid Level	2M	WPT-684
	Solenoid — Canister Vent	2M	WPT-322
2003	Solenoid — Electronic Automatic Temperature Control (EATC)	8F	WPT-275
2004-03	Speaker — Door (Front)	2F	WPT-373
	Speaker — Door (Rear)	2F	WPT-373
2003	Speaker — Rear	2F	WPT-373
2004-03	Speaker — Subwoofer	2F	WPT-195
	Switch — A/C Pressure Cut Off	4F	WPT-735
	Switch — Adjustable Pedal	8F	WPT-204
	Switch — Brake Pressure	2M	WPT-260
	Switch — Deck Lid / Lift Gate Ajar	2M	WPT-146
	Switch — Dimmer	6F	WPT-262
	Switch — Door Ajar / Interior Lamp	2F	WPT-489
2003	Switch — Door Lock (LH)	8F	WPT-554
	Switch — Door Lock (RH)	8F	WPT-554
2004-03	Switch — Headlamp/Foglamp	12F	WPT-396
	Switch — Heated Seat — LH — Front	10F	WPT-559
	Switch — Heated Seat — RH — Front	10F	WPT-559
	Switch — Heater / A/C Blower (Front)	6M	WPT-363
	Switch — Heater A/C Blower (Rear)	6M	WPT-363
2003	Switch — Ignition	7M	WPT-804
2004-03	Switch — Inertia	3M	WPT-446
	Switch — Lift Gate Glass Ajar	2M	WPT-146
	Switch — Message Center	6F	WPT-586
	Switch — Moon Roof/ Sun Roof	8F	WPT-204
	Switch — Multifunction (Turn)		
	Right	8F	WPT-310
	Left	8F	WPT-500
	Switch — Oil Sending Unit	1M	WPT-439
2003	Switch — Park Brake	1M	WPT-488
2004-03	Switch — Power Mirror	8M	WPT-240
	Switch — Power Steering Pressure	2M	WPT-372

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
LINCOLN TRUCK — Cont'd			
Aviator — Cont'd			
2004-03	Switch — Power Window — Driver	6F	WPT-600
	Switch — Power Window — LH — Rear	8F	WPT-655
	Switch — Seat (Driver)	10F	WPT-785
	Switch — Seat (Passenger)	10F	WPT-785
2003	Switch — Seat Memory	8F	WPT-699
2004-03	Switch — Speed Control Deactivation	2F	WPT-195
	Switch — Stop Lamp	2F	WPT-373
	Terminal — Rear Window Defroster Grid	1F	WPT-371
	Trailer Tow — Vehicle Side	7F	WPT-401
	Transceiver — Passive Anti-Theft (PATS)	4M	WPT-668
	Valve — Vapor Management	2M	WPT-545
Blackwood			
2002	AC Compressor Clutch	1M	WPT-439
	Actuator — Door Lock — LH — Front	2M	WPT-312
	Actuator — Door Lock — LH — Rear	2M	WPT-312
	Actuator — Door Lock — RH — Front	2M	WPT-312
	Actuator — Door Lock — RH — Rear	2M	WPT-312
	Actuator — Speed Control	10M	WPT-762
	Alternator	3M	WPT-118
	Capacitor — Ignition / Radio	1M	WPT-352
	Cigar Lighter	3F	WPT-329
	Control — Navigation Display	12F	WPT-673
	Element — Heated Seat	2M	WPT-548
	Fuel Pump / Sending Unit	4M	WPT-152
	Lamp — Ash Tray	2M	WPT-370
	Lamp — CHMSL (Center High Mount Stop Lamp)	2F	WPT-530
	Lamp — Glove Box	2M	WPT-314
	Lamp — Side Marker	2F	WPT-316
	Lamp — Under Hood	2M	WPT-370
	Mirror — Rearview (Electrochromatic)	6M	WPT-193
	Mirror — Sideview / Heated	12M	WPT-657
	Mirror — Sideview with Memory	12M	WPT-657
	Mirror — Vanity	2F	WPT-479
	Module — Air Suspension	16M	WPT-644
	Module — Auto Lamps	5M	WPT-300
	Module — Power Moonroof	6M	WPT-375
	Module — Power Tonneau	12F	WPT-396
	Module — Seat Memory	2M	WPT-374
	16M	WPT-242
	Module — Variable Speed Blower Controller	2M	WPT-727
	Motor — Adjustable Pedal	6M	WPT-444
	Motor — Idle Air Control	2M	WPT-357
	Motor — Power Seat Track	6F	WPT-599
	Motor — Power Window — LH — Front Oval Cavity	2F	WPT-473
	Motor — Power Window — LH — Rear	2F	WPT-473
	Motor — Power Window — RH — Front	2F	WPT-473
	Motor — Power Window — RH — Rear	2F	WPT-473
	Motor — Seat Lumbar	2F	WPT-687
	Motor — Windshield Washer Fluid Pump	2M	WPT-357
	Relay — Air Suspension Compressor	4M	WPT-392
	Relay — Flasher	10F	WPT-367
	Resistor — Blower Motor (Rear)	4F	WPT-755
	Sensor — Air Charge Temperature	2M	WPT-420
	Sensor — Ambient Temp	2M	WPT-437
Sensor — Coolant Temperature	2M	WPT-206	
Sensor — Crank Shaft Position	2F	WPT-759	
Sensor — Cylinder Head Temperature	2M	WPT-338	
Sensor — EATC In Car Temperature	2M	WPT-486	
Sensor — Fuel Tank Pressure Transducer	3M	WPT-777	

WIRING PIGTAIL KITS

LIGHT TRUCK



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
LINCOLN TRUCK — Cont'd			
Blackwood — Cont'd			
2002	Sensor — Intake Manifold Runner Control	2M	WPT-545
	Sensor — Knock	2M	WPT-351
	Sensor — Mass Air Flow	6M	WPT-102
	Sensor — Memory Seat Track Position Driver and Passenger Captain Chair	3M	WPT-241
	Sensor — Reverse Park Aid (RPA) Crew Cab Pickup	3F	WPT-223
	Sensor — Steering Rotation	4M	WPT-703
	Sensor — Sunload	2M	WPT-314
	Sensor — Transmission Range AT 4 Spd 4R100	12M	WPT-806
	Sensor — Washer Fluid Level	2M	WPT-684
	Solenoid — Brake Shift Park Interlock	3M	WPT-210
	Solenoid — EGR Vacuum Regulator	2M	WPT-359
	Speaker — Door (Rear)	2F	WPT-815
	Speaker — Reverse Park Aid (RPA)	2M	WPT-675
	Speaker — Subwoofer	10M	WPT-667
	Switch — Brake Pressure	2M	WPT-260
	Switch — Door Ajar / Interior Lamp	2M	WPT-146
	Switch — Door Lock (LH)	7F	WPT-400
	Switch — Door Lock (RH)	7F	WPT-400
	Switch — Headlamp	12F	WPT-396
	6F	WPT-262
	Switch — Heated Back Light (Rear Defrost)	6M	WPT-258
	Switch — Heated Seat — LH — Front	8M	WPT-547
	Switch — Ignition	16M	WPT-577
	Switch — Inertia	3M	WPT-446
	Switch — Moon Roof/ Sun Roof	7F	WPT-846
	Switch — Overdrive Cancel	3F	WPT-229
	Switch — Power Mirror	10M	WPT-782
	Switch — Power Window — Driver Lower	7F	WPT-426
	Upper	7F	WPT-546
	Switch — Reverse Park Aid	8M	WPT-264
	Switch — Stop Lamp	5F	WPT-415
	Switch — Tonneau Cover (Pinch Strip)	2M	WPT-722
	Switch — Traction Control	8M	WPT-464
	Terminal — Rear Window Defroster Grid		WPT-797
	Test Connector — Diagnostic	16F	WPT-615
	Trailer Tow — Vehicle Side	7F	WPT-401
	Transceiver — Passive Anti-Theft (PATS)	4M	WPT-293
	Valve — Vapor Management	2M	WPT-545
Navigator			
2001-99	AC Compressor Clutch	2M	WPT-173
2002-98	Actuator — Door Lock	2M	WPT-312
2004-98	Actuator — Door Lock — Decklid/Liftgate	2M	WPT-312
	Actuator — Door Lock — LH — Front	2M	WPT-312
	Actuator — Door Lock — LH — Rear	2M	WPT-312
	Actuator — Door Lock — RH — Front	2M	WPT-312
	Actuator — Door Lock — RH — Rear	2M	WPT-312
2001-99	Actuator — Electronic Variable Orifice (EVO)	2M	WPT-146
2004-03	Actuator — Liftgate Glass	4F	WPT-576
2003	Actuator — Speed Control	6F	WPT-271
2002-98	Actuator — Speed Control	10M	WPT-762
2003-02	Alternator	3M	WPT-118
2001-98	Alternator	1M	WPT-851
2000-99	Alternator	3M	WPT-119
2002-99	CD Changer	12M	WPT-164
1998	CD Changer	14M	WPT-296
2003-98	Capacitor — Ignition / Radio	1M	WPT-352

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
LINCOLN TRUCK — Cont'd			
Navigator — Cont'd			
2004-98	Cigar Lighter	3F	WPT-329
2002	Cigar Lighter	1F	WPT-371
2002-99	Clock	8F	WPT-100
2004-03	Control — Auxiliary A/C — Front	10F	WPT-575
	Control — Auxiliary A/C — Rear	10F	WPT-575
2002-98	Control — Navigation Display	12F	WPT-673
2002-99	Control Head — Electronic Automatic Temperature (EATC)	13F	WPT-176
2002-98	Element — Heated Seat	4M	WPT-307
1998	Fuel Injector	2M	WPT-372
2002-98	Fuel Pump / Sending Unit	8M	WPT-817
1999-98	Horn	1M	WPT-378
1998	Instrument Cluster	16M	WPT-202
	12M	WPT-208
2004-03	Junction Box — Relay	15F	WPT-791
2003	Junction Box — Relay Polarity A; Rectangle-Vertical; Black	12F	WPT-591
	4F	WPT-629
	Polarity A; Rectangle-Horizontal; Black	12F	WPT-691
	8F	WPT-643
2004-98	Lamp — Ash Tray	2M	WPT-370
2003	Lamp — CHMSL (Center High Mount Stop Lamp)	2F	WPT-195
2002-00	Lamp — CHMSL (Center High Mount Stop Lamp)	2N/A	WPT-471
2000-99	Lamp — CHMSL (Center High Mount Stop Lamp)	2M	WPT-113
1999	Lamp — CHMSL (Center High Mount Stop Lamp)	3F	WPT-474
1998	Lamp — CHMSL (Center High Mount Stop Lamp)	2N/A	WPT-471
2004-03	Lamp — Courtesy — Door	3M	WPT-419
2002-01	Lamp — Courtesy — Door	2M	WPT-838
2002-98	Lamp — Courtesy — Door	2F	WPT-212
2004-03	Lamp — Dome/ Map	3F	WPT-203
2002-98	Lamp — Dome/ Map	3M	WPT-4591
2002-99	Lamp — Fog / Driving	2M	WPT-122
2002	Lamp — Front Turn	3M	WPT-109
2002-98	Lamp — Front Turn/Marker	3M	WPT-109
2004-98	Lamp — Glove Box	2M	WPT-314
2004-03	Lamp — Headlamp — High/Low Beam — In-Line (Female)	7F	WPT-249
2003	Lamp — Headlamp High Beam	2M	WPT-148
2004-03	Lamp — Headlamp Low Beam	2F	WPT-248
	Lamp — Headlamp Switch	2F	WPT-294
2002-98	Lamp — Instrument	2M	WPT-597
2003	Lamp — License	4F	WPT-457
2003-99	Lamp — Park/Turn/Stop	3M	WPT-108
2002-99	Lamp — Rear Park	2M	WPT-536
2003	Lamp — Reverse	3M	WPT-108
2002-98	Lamp — Running Board	2M	WPT-432
	Lamp — Side Marker	2F	WPT-316
2004-03	Lamp — Storage Compartment — Cargo	3F	WPT-203
2002-98	Lamp — Storage Compartment — Cargo	3M	WPT-4591
	Lamp — Under Hood	2M	WPT-370
2003	Liftgate/Tailgate Jumper — In-Line (Female)	8F	WPT-642
2004-98	Mirror — Rearview (Electrochromatic)	6M	WPT-193
2003	Mirror — Sideview / Heated	16M	WPT-701
2001-98	Mirror — Sideview / Heated	10F	WPT-568
2002-00	Mirror — Sideview with Memory	12M	WPT-657
2002-98	Mirror — Sideview with Memory	10F	WPT-825
2002-00	Mirror — Sideview with Power Fold	2M	WPT-529
2004-98	Mirror — Vanity	2F	WPT-479
2003	Module — Air Suspension	13F	WPT-176
2002-98	Module — Air Suspension	16M	WPT-644
2003	Module — Anti-theft	14F	WPT-728
2002-98	Module — Anti-theft	16M	WPT-632
	Module — Auto Lamps	5M	WPT-300

WIRING PIGTAIL KITS

LIGHT TRUCK



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
LINCOLN TRUCK — Cont'd			
Navigator — Cont'd			
2002-00	Module — Climate Control Seat (CCS)	4M	WPT-766
	Module — Daytime Running Lamp (DRL)	2M	WPT-322
2002-99	Module — Daytime Running Lamp (DRL)	8F	WPT-174
1999	Module — Heated Seat (Drivers)	10F	WPT-156
2003	Module — Isolator Antenna	1M	WPT-700
2004	Module — Liftgate	4F	WPT-408
2003	Module — Liftgate		
	Polarity B; Square; Black	4F	WPT-411
	Polarity A; Square; Natural	4F	WPT-408
2002-98	Module — Power Moonroof	6M	WPT-375
2005-04	Module — Remote Keyless Entry	6M	WPT-855
2003	Module — Remote Keyless Entry	14F	WPT-741
2002-99	Module — Remote Keyless Entry	8M	WPT-737
2003	Module — Reverse Park Aid (RPA)	12F	WPT-673
2004-03	Module — Seat Memory	2F	WPT-236
	6M	WPT-246
	Seat - Captain Chair	20F	WPT-255
2002-98	Module — Seat Memory	2M	WPT-374
	16M	WPT-242
2003	Module — Tire Pressure	16F	WPT-645
2002-98	Module — Transfer Case Shift Control	10M	WPT-667
2002	Module — Variable Speed Blower Controller	5F	WPT-153
2002-98	Module — Variable Speed Blower Controller	2M	WPT-727
1998	Module — Variable Speed Blower Controller	5M	WPT-566
2002-01	Module — Warning Chime / Beltminder		
	Polarity A	4F	WPT-582
	Polarity B	4F	WPT-670
2000	Module — Warning Chime / Beltminder	4F	WPT-670
2003	Monitor — Video/DVD	12F	WPT-760
2002-01	Monitor — Video/DVD	16M	WPT-332
	4F	WPT-582
2004-03	Motor — Adjustable Pedal	2M	WPT-370
2002-00	Motor — Adjustable Pedal	6M	WPT-444
1999	Motor — Adjustable Pedal	2F	WPT-544
2002-99	Motor — Air Suspension Compressor	4F	WPT-171
2002	Motor — Deck Lid / Lift Gate	2F	WPT-161
2001-99	Motor — Heater / AC Blower (Rear)	2M	WPT-113
2004-98	Motor — Heater A/C Blower (Auxiliary)	2M	WPT-104
2003-99	Motor — Heater / AC Blend Door	8F	WPT-100
2003-98	Motor — Idle Air Control	2M	WPT-357
2004-03	Motor — Moon Roof / Sun Roof	6M	WPT-375
	Motor — Power Seat Track	2F	WPT-404
2002-98	Motor — Power Seat Track	6F	WPT-599
2004-03	Motor — Power Window — LH — Front	8F	WPT-521
2002-98	Motor — Power Window — LH — Front	2F	WPT-473
	Motor — Power Window — LH — Rear	2F	WPT-473
2004-03	Motor — Power Window — RH — Front	2F	WPT-605
2002-98	Motor — Power Window — RH — Front	2F	WPT-473
2004-03	Motor — Power Window — RH — Rear	2F	WPT-605
2002-98	Motor — Power Window — RH — Rear	2F	WPT-473
2004-98	Motor — Rear Quarter Flip Window	2M	WPT-314
	Motor — Rear Window Washer Fluid Pump		
	From 8/5/97	2M	WPT-357
2004-03	Motor — Rear Window Wiper	8F	WPT-310
	Motor — Recline (Third Row)	2F	WPT-404
2003	Motor — Running Board (LH)	4F	WPT-764
	Motor — Running Board (RH)	4F	WPT-764
2004-00	Motor — Seat Lumbar	2F	WPT-687
2002-00	Motor — Seat Lumbar	4M	WPT-542
2004-03	Motor — Seat Recline	3F	WPT-740
2004	Motor — Transfer Case Electronic Shift	8F	WPT-174

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
LINCOLN TRUCK — Cont'd			
Navigator — Cont'd			
2002	Motor — Transfer Case Electronic Shift 8 Cavity	8F	WPT-174
2002-98	Motor — Transfer Case Electronic Shift 16 Cavity Inline	16M	WPT-326
2003-98	Motor — Windshield Washer Fluid Pump	2M	WPT-357
2005-03	Motor — Windshield Wiper	12F	WPT-850
2002-99	Motor — Windshield Wiper	5F	WPT-158
2005	Power Point	3F	WPT-682
1999-98	Power Point	2M	WPT-355
2004-03	Radio	12F	WPT-647
2003	Radio	18M	WPT-279
	14M	WPT-287
2003-99	Radio	20F	WPT-184
	8F	WPT-185
	16F	WPT-186
2002	Radio	7M	WPT-154
	8M	WPT-155
	17F	WPT-157
1998	Radio	12M	WPT-613
2005-03	Radio — Amplifier	16F	WPT-645
2002-98	Radio — Amplifier	16M	WPT-332
1998	Radio — Amplifier	8M	WPT-215
	2M	WPT-478
2004-99	Radio — Rear Audio Control	16M	WPT-332
2003-98	Relay — Air Suspension Compressor	4M	WPT-831
1998-97	Relay — All Wheel Drive Clutch	4M	WPT-831
2002-98	Relay — Blower Motor	10F	WPT-367
2002-99	Relay — Clutch	5F	WPT-738
2005-03	Relay — Flasher	15M	WPT-732
2002-98	Relay — Flasher	10F	WPT-367
	Relay — Starter Motor	1M	WPT-616
	Resistor — Blower Motor (Auxiliary)	4F	WPT-115
	Resistor — Blower Motor (Rear)	4F	WPT-755
2002-99	Resistor — Daytime Running Lamp (DRL)	2M	WPT-322
2003	Sensor — A/C Temperature Control	3M	WPT-493
2004-03	Sensor — Adjustable Pedal	3M	WPT-241
2004-98	Sensor — Air Charge Temperature	2M	WPT-420
2004-03	Sensor — Air Suspension — LH — Front	3F	WPT-525
2002-00	Sensor — Air Suspension — LH — Rear	3F	WPT-525
2004-03	Sensor — Air Suspension — RH — Front	3F	WPT-525
2002-00	Sensor — Air Suspension — RH — Rear	3F	WPT-525
2003-98	Sensor — Ambient Temp	2M	WPT-437
2002-00	Sensor — Brake Fluid Level	3M	WPT-118
1999-98	Sensor — Brake Fluid Level	3M	WPT-4591
2004-03	Sensor — Brake Pressure	3F	WPT-230
2002-01	Sensor — Cam Shaft Position	2F	WPT-759
2000-99	Sensor — Cam Shaft Position 8 Cyl. 5.4L	2F	WPT-579
2003-99	Sensor — Coolant Temperature	2M	WPT-206
2004-01	Sensor — Crank Shaft Position	2F	WPT-759
2000-98	Sensor — Crank Shaft Position 5.4L	2F	WPT-579
2004-98	Sensor — Cylinder Head Temperature	2M	WPT-338
2003-98	Sensor — Delta Pressure Feedback EGR	3F	WPT-188
2004-03	Sensor — EATC In Car Temperature	4F	WPT-582
2002-98	Sensor — EATC In Car Temperature	2M	WPT-486
2003-98	Sensor — Intake Manifold Runner Control	2M	WPT-545
2004-99	Sensor — Knock	2M	WPT-351
2004-98	Sensor — Mass Air Flow	6M	WPT-102
2002-98	Sensor — Memory Seat Track Position	3M	WPT-241
2004-00	Sensor — Reverse Park Aid (RPA)	3F	WPT-223

WIRING PIGTAIL KITS

LIGHT TRUCK



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
LINCOLN TRUCK — Cont'd			
Navigator — Cont'd			
2004-03	Sensor — Steering Rotation	4M	WPT-417
2002-00	Sensor — Steering Rotation	4M	WPT-703
1999-98	Sensor — Steering Rotation	4M	WPT-417
2004-03	Sensor — Sunload	6F	WPT-502
2002-98	Sensor — Sunload	2M	WPT-314
2001-99	Sensor — Throttle Position	3F	WPT-170
2004-98	Sensor — Transmission Range	12M	WPT-806
2003-98	Sensor — Washer Fluid Level	2M	WPT-684
2003	Sensor — Yaw	6F	WPT-774
2004-98	Solenoid — Air Suspension (Front)	2M	WPT-589
2004-03	Solenoid — Air Suspension (Rear)	2M	WPT-589
	Solenoid — Brake Shift Park Interlock	2M	WPT-312
2002-98	Solenoid — Brake Shift Park Interlock	3M	WPT-210
2003-98	Solenoid — Canister Vent	2M	WPT-322
2005-98	Solenoid — EGR Vacuum Regulator	2M	WPT-359
2004-03	Solenoid — Electronic Automatic Temperature Control (EATC)	8F	WPT-275
1999	Solenoid — Pulse Vacuum 4x4 Hub (PVH)	2M	WPT-441
2002-98	Speaker — Door (Front)	2M	WPT-416
	Speaker — Door (Rear)	2M	WPT-416
1999	Speaker — Rear	2F	WPT-159
2005	Speaker — Subwoofer	4F	WPT-467
2004-03	Speaker — Subwoofer	2F	WPT-195
2002-99	Speaker — Subwoofer	10M	WPT-667
2004-03	Switch — 4x4 Control	4F	WPT-465
2002-98	Switch — 4x4 Control	4M	WPT-417
1998	Switch — A/C Compressor Clutch Cycling	4F	WPT-169
2002-99	Switch — A/C High Pressure	4F	WPT-169
	Switch — A/C Pressure Cut Off	4F	WPT-169
2004-03	Switch — Adjustable Pedal	8F	WPT-204
2002-99	Switch — Adjustable Pedal	7F	WPT-181
2002-98	Switch — Brake Pressure	2M	WPT-260
1999-98	Switch — Coolant Temperature Sending Unit	2M	WPT-431
2004-03	Switch — Deck Lid / Lift Gate Ajar	8F	WPT-354
2003	Switch — Deck Lid / Lift Gate Ajar	4M	WPT-704
2002-98	Switch — Deck Lid / Lift Gate Ajar	2M	WPT-146
2003-98	Switch — Door Ajar / Interior Lamp	2M	WPT-146
2003	Switch — Door Lock (LH)	8F	WPT-554
2002-98	Switch — Door Lock (LH)	7F	WPT-400
2003	Switch — Door Lock (RH)	8F	WPT-554
2002-98	Switch — Door Lock (RH)	7F	WPT-400
2003-02	Switch — Gear Shift Select / Neutral Safety	10F	WPT-156
2004-03	Switch — Headlamp	8F	WPT-506
2004-00	Switch — Headlamp	12F	WPT-396
2002-00	Switch — Headlamp	6F	WPT-262
1999	Switch — Headlamp	4M	WPT-417
1998	Switch — Headlamp	6F	WPT-510
	6F	WPT-845
2002-98	Switch — Heated Back Light (Rear Defrost)	6M	WPT-258
2004-03	Switch — Heated Seat — LH — Front	10F	WPT-559
2002-98	Switch — Heated Seat — LH — Front	8M	WPT-547
2004-03	Switch — Heater / A/C Blower (Front)	6M	WPT-363
2002-98	Switch — Heater / A/C Blower (Front)	6M	WPT-369
2004-03	Switch — Heater A/C Blower (Rear)	6M	WPT-363
2002-98	Switch — Heater A/C Blower (Rear)	6M	WPT-369
	Switch — Heater A/C Temp Control	3F	WPT-447
2005-03	Switch — Ignition	7M	WPT-804
2002-98	Switch — Ignition	16M	WPT-577
2004-98	Switch — Inertia	3M	WPT-446
2002-98	Switch — Lift Gate Glass Ajar	2M	WPT-146
2004-03	Switch — Message Center	6F	WPT-586
	Switch — Moon Roof/ Sun Roof	8F	WPT-204

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
LINCOLN TRUCK — Cont'd			
Navigator — Cont'd			
2002-98	Switch — Moon Roof/ Sun Roof	7F	WPT-846
2003	Switch — Multi Function	10F	WPT-156
2002-98	Switch — Multi Function 9 Cavity	9M	WPT-611
2000	Switch — Multi Function 7 Cavity	7F	WPT-179
2004-03	Switch — Multifunction (Turn)	8F	WPT-310
2005-04	Switch — Oil Sending Unit 5.4L	1M	WPT-439
2003-98	Switch — Oil Sending Unit	1M	WPT-439
2002-98	Switch — Overdrive Cancel	3F	WPT-229
2003	Switch — Park Brake	2F	WPT-479
2002-98	Switch — Park Brake	1F	WPT-434
2003	Switch — Power Mirror	10M	WPT-782
2002-00	Switch — Power Mirror	8F	WPT-117
1999-98	Switch — Power Steering Pressure	2M	WPT-372
2004-03	Switch — Power Window — Driver	6F	WPT-600
2002-00	Switch — Power Window — Driver Lower	7F	WPT-426
2002-98	Switch — Power Window — Driver Upper	7F	WPT-546
2004-03	Switch — Power Window — LH — Rear	8F	WPT-655
	Switch — Power Window — Quarter Glass	8F	WPT-554
2002-98	Switch — Power Window — Quarter Glass	7F	WPT-814
2004-03	Switch — Power Window — RH — Rear	8F	WPT-655
2002-00	Switch — Reverse Park Aid	8M	WPT-264
2004-03	Switch — Seat (Driver)	10F	WPT-559
	12F	WPT-659
2002-00	Switch — Seat (Driver) Less Temperature Control Driver Seat	8M	WPT-399
2002-98	Switch — Seat (Driver)	8F	WPT-379
2004-03	Switch — Seat (Passenger)	10F	WPT-604
2002-98	Switch — Seat (Passenger)	8F	WPT-379
2003	Switch — Seat Memory	8F	WPT-699
	Switch — Speed Control Deactivation	2F	WPT-195
2004-03	Switch — Stop Lamp	6F	WPT-598
2002-99	Switch — Stop Lamp	5F	WPT-415
1998	Switch — Stop Lamp	2M	WPT-197
2003	Switch — Third Row Power Folding Seat (Front RH)	8F	WPT-680
	Switch — Third Row Power Folding Seat (Rear LH)	8F	WPT-680
2004-03	Switch — Traction Control	8M	WPT-220
2002-98	Terminal — Rear Window Defroster Grid	1F	WPT-371
2004-98	Test Connector — Diagnostic	16F	WPT-615
2004-03	Trailer Tow — Vehicle Side	4F	WPT-358
2002-99	Trailer Tow — Vehicle Side	7F	WPT-401
1998	Trailer Tow — Vehicle Side	7M	WPT-421
2005-03	Transceiver — Passive Anti-Theft (PATS)	4M	WPT-668
2002-98	Transceiver — Passive Anti-Theft (PATS)	4M	WPT-293
2000-98	Transmission 12-way	12M	WPT-590
2003-98	Valve — Vapor Management	2M	WPT-545
MERCURY TRUCK			
Monterey			
2003-00	Sensor — O2 (HEGO/EGO)	4M	WPT-807
2005-04	Sensor — Transmission Range	12M	WPT-803
2004	Switch — Door Lock (Cargo)	8F	WPT-683
	Switch — Door Lock (RH)	8F	WPT-683
	Switch — Seat (Driver)	8F	WPT-731

WIRING PIGTAIL KITS LIGHT TRUCK



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
MERCURY TRUCK — Cont'd			
Mountaineer			
2004-03	AC Compressor Clutch	2F	WPT-159
2001-97	AC Compressor Clutch	2M	WPT-173
2004-02	Actuator — Door Lock	2F	WPT-292
2004	Actuator — Door Lock — Decklid/Liftgate	2F	WPT-373
2001-97	Actuator — Door Lock — Decklid/Liftgate	2M	WPT-312
	Actuator — Door Lock — LH — Front	2M	WPT-312
2004-02	Actuator — Door Lock — LH — Rear	2F	WPT-292
2001-97	Actuator — Door Lock — LH — Rear	2M	WPT-312
	Actuator — Door Lock — RH — Front	2M	WPT-312
2004-02	Actuator — Door Lock — RH — Rear	2F	WPT-292
2001-97	Actuator — Door Lock — RH — Rear	2M	WPT-312
2004	Actuator — Liftgate Glass	2F	WPT-373
2004-02	Actuator — Speed Control	6F	WPT-271
2001-97	Actuator — Speed Control	10M	WPT-762
2000-99	Alternator	3M	WPT-119
2001-97	Bulkhead — Transmission — In-line (Female)	9F	WPT-570
2001-98	Bulkhead — Transmission — In-line (Male)	7F	WPT-567
2001-97	CD Changer	14M	WPT-296
2000-97	CD Changer	12M	WPT-164
2001-97	Capacitor — Ignition / Radio	1M	WPT-352
1997	Cell Phone/Cell Phone Antenna — inline	12M	WPT-641
2004-02	Cigar Lighter	3F	WPT-329
2001-97	Cigar Lighter	1M	WPT-476
1997	Clock	8F	WPT-100
2002	Coil — Ignition	4M	WPT-511
2001-98	Coil — Ignition 4.0L	4M	WPT-207
2001-97	Coil — Ignition 5.0L	3M	WPT-526
2003-02	Control — Auxiliary A/C — Front	10F	WPT-575
	Control — Auxiliary A/C — Rear	10F	WPT-575
2000-97	Control Head — Electronic Automatic Temperature (EATC)	13F	WPT-176
2004-98	Element — Heated Seat	4M	WPT-307
2001-99	Element — Heated Seat	2M	WPT-548
2002	Fuel Injector	2M	WPT-372
1998-97	Fuel Injector	2M	WPT-372
2003-02	Fuel Pump / Sending Unit	8M	WPT-817
2001-97	Fuel Pump / Sending Unit	8M	WPT-817
1999	Fuel Pump / Sending Unit Ethanol Fuel Only	4M	WPT-742
2001-97	Horn	1M	WPT-378
2004	Instrument Cluster	10M	WPT-676
2001-98	Instrument Cluster	12M	WPT-208
2001-97	Instrument Cluster	16M	WPT-202
	10M	WPT-676
2004-03	Junction Box — Relay	16F	WPT-645
2002	Junction Box — Relay	10F	WPT-516
	15M	WPT-732
	Polarity B; Square; Blue	16F	WPT-736
	Polarity A; Square; Green	16F	WPT-645
2001-97	Lamp — Ash Tray	2F	WPT-251
2004-99	Lamp — CHMSL (Center High Mount Stop Lamp)	2M	WPT-548
2001-97	Lamp — Courtesy — Door	2F	WPT-212
2001-99	Lamp — Courtesy — Reading (Rear)	1F	WPT-674
2004-02	Lamp — Dome	1F	WPT-674
2001	Lamp — Dome	1F	WPT-265
2000-97	Lamp — Dome Polarity letter not specified; Long housing; Black	1F	WPT-265
	Polarity letter not specified; Short housing; Black	1F	WPT-674
2002	Lamp — Fog / Driving	2M	WPT-148

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
MERCURY TRUCK — Cont'd			
Mountaineer — Cont'd			
2001-98	Lamp — Fog / Driving	2M	WPT-536
1997	Lamp — Fog / Driving	4M	WPT-152
2001-98	Lamp — Front Cornering / Turn	3M	WPT-108
2001-99	Lamp — Front Turn	2M	WPT-536
1998	Lamp — Front Turn	3M	WPT-108
2001-98	Lamp — Front Turn/Marker	3M	WPT-108
2004-02	Lamp — Glove Box	2M	WPT-841
2001	Lamp — Headlamp High Beam	2M	WPT-148
2004-02	Lamp — Headlamp Low Beam	2M	WPT-772
2001-97	Lamp — Headlamp- High/Low Beam	3M	WPT-110
2004-97	Lamp — Instrument	2M	WPT-597
2004-98	Lamp — License	2N/A	WPT-471
1997	Lamp — License	2N/A	WPT-149
2004-97	Lamp — Map	1F	WPT-674
2004-02	Lamp — Overhead Console	4F	WPT-582
2001-98	Lamp — Park/Turn/Stop	3M	WPT-108
2004-02	Lamp — Park/Turn/Stop/Reverse — Inline (Male)	8M	WPT-631
2001-97	Lamp — Rear Turn	2M	WPT-211
	Lamp — Reverse	3M	WPT-106
2001-99	Lamp — Running Board	2M	WPT-432
2002-01	Lamp — Side Marker	2F	WPT-150
2000-97	Lamp — Side Marker	2N/A	WPT-149
2004-02	Lamp — Storage Compartment — Cargo	3F	WPT-203
2002	Lamp — Under Hood	2M	WPT-4951
1997	Lamp — Under Hood	2M	WPT-370
2001-97	Message Center (16 Way)	16M	WPT-341
2004-02	Mirror — Rearview (Electrochromatic)	6M	WPT-193
2001-97	Mirror — Rearview (Electrochromatic)	6M	WPT-563
2001-98	Mirror — Sideview	8M	WPT-382
2001-97	Mirror — Vanity	1F	WPT-562
2004-02	Module — Anti-theft	14F	WPT-728
2003-01	Module — Anti-theft	10F	WPT-156
2002	Module — Anti-theft	4M	WPT-668
2001-98	Module — Anti-theft	16F	WPT-645
2004-03	Module — Auto Lamps	6M	WPT-563
2002	Module — Auto Lamps	6F	WPT-502
2001-98	Module — Auto Lamps	6M	WPT-563
2004-99	Module — Daytime Running Lamp (DRL)	6F	WPT-455
1998-97	Module — Daytime Running Lamp (DRL)	8M	WPT-298
2004	Module — EGR System	6F	WPT-435
2002	Module — Electronic Automatic Temperature Control (EATC)	16F	WPT-725
2001-99	Module — Heated Seat (Drivers)	10F	WPT-156
1999	Module — Heated Seat (Passenger)	10F	WPT-156
1997	Module — Instrument Panel Dimmer	6M	WPT-450
2004-02	Module — Power Moonroof	8M	WPT-624
1997	Module — Radio Power Antenna	8F	WPT-100
2004-02	Module — Remote Keyless Entry	14F	WPT-741
2001-97	Module — Remote Keyless Entry	8M	WPT-737
2004-02	Module — Seat Memory	2F	WPT-236
2003-02	Module — Seat Memory	10F	WPT-559
2002-98	Module — Seat Memory	16M	WPT-632
2001-98	Module — Seat Memory	2M	WPT-374
	Premium Package	16M	WPT-242
1997	Module — Seat Memory	4M	WPT-376
	9M	WPT-708
2002	Module — Tire Pressure	16F	WPT-581
2004-02	Module — Transfer Case Shift Control	10M	WPT-667
2004-01	Module — Variable Speed Blower Controller w/Dual Zone Automatic Temperature Control A/C	5F	WPT-153
2001-97	Module — Warning	12M	WPT-613

WIRING PIGTAIL KITS

LIGHT TRUCK



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
MERCURY TRUCK — Cont'd			
Mountaineer — Cont'd			
2001-00	Module — Warning Chime / Beltminder		
	Polarity A	4F	WPT-582
	Polarity B	4F	WPT-670
2004-98	Motor — Air Suspension Compressor	4F	WPT-756
2004	Motor — Electronic Throttle Control		
	4.0L SOHC	2F	WPT-837
1997	Motor — Heater / AC Blower (Rear)	2M	WPT-113
2004-02	Motor — Heater A/C Blower (Auxiliary)	2M	WPT-104
2001-98	Motor — Heater A/C Blower (Auxiliary)		
	Oval Cavity	2F	WPT-473
1999-97	Motor — Heater A/C Blower (Auxiliary)	2M	WPT-113
2001-97	Motor — Heater / AC Blend Door	8F	WPT-100
2001-98	Motor — Idle Air Control	2M	WPT-357
2004-98	Motor — Moon Roof / Sun Roof	8M	WPT-624
2004-02	Motor — Power Seat Track with Memory	8F	WPT-643
2001-97	Motor — Power Seat Track with Memory	8M	WPT-724
2004-02	Motor — Power Window — LH — Front	2F	WPT-605
2001-97	Motor — Power Window — LH — Front	2F	WPT-473
2004-97	Motor — Power Window — LH — Rear	2M	WPT-428
2004-02	Motor — Power Window — RH — Front	2F	WPT-605
2001-97	Motor — Power Window — RH — Front	2F	WPT-473
2004-02	Motor — Power Window — RH — Rear	2F	WPT-605
2001-97	Motor — Power Window — RH — Rear	2M	WPT-428
2004-98	Motor — Rear Window Washer Fluid Pump	2M	WPT-357
1997	Motor — Rear Window Washer Fluid Pump	2M	WPT-355
2002	Motor — Rear Window Wiper	3F	WPT-740
1997	Motor — Rear Window Wiper	8F	WPT-257
2001-97	Motor — Seat Lumbar	2M	WPT-374
2001-98	Motor — Transfer Case Electronic Shift		
	4WD	16M	WPT-326
1998	Motor — Transfer Case Electronic Shift	8F	WPT-174
1997	Motor — Transfer Case Electronic Shift	16M	WPT-326
2001-98	Motor — Windshield Washer Fluid Pump	2M	WPT-357
1997	Motor — Windshield Washer Fluid Pump	2M	WPT-355
2004-02	Motor — Windshield Wiper	12F	WPT-850
2001-98	Motor — Windshield Wiper	5F	WPT-158
1997	Motor — Windshield Wiper	6M	WPT-297
2001-99	Motor — Windshield Wiper (Inline)	8M	WPT-172
2004-02	Power Point	3F	WPT-682
2001-97	Power Point	2M	WPT-355
2001	Radio	17F	WPT-157
2001-98	Radio	16F	WPT-186
	8F	WPT-185
	20F	WPT-184
	6M	WPT-614
2001-97	Radio	7M	WPT-154
	8M	WPT-155
	16M	WPT-198
2004-02	Radio — Amplifier	10M	WPT-667
2001-97	Radio — Amplifier	8M	WPT-215
1997	Radio — Amplifier	2M	WPT-478
2001-99	Radio — Rear Audio Control	14M	WPT-296
2001-97	Radio — Rear Audio Control	16M	WPT-332
	Relay — Flasher	5F	WPT-802
2004-02	Relay — Heated Windshield	10M	WPT-784
2000-97	Relay — Park Lamp	3M	WPT-108
2001-98	Relay — Starter Motor		
	4.0L	1M	WPT-616
1997	Relay — Starter Motor		
	5.0L	1M	WPT-616
2001-98	Relay — Torque on Demand (TOD)	5F	WPT-738

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
MERCURY TRUCK — Cont'd			
Mountaineer — Cont'd			
1997	Relay — Torque on Demand (TOD)		
	Standard Duty Suspension; Auto Adjustable Suspension	4M	WPT-831
2002	Relay — Trailer Tow	15M	WPT-732
2004-02	Resistor — Blower Motor (Auxiliary)	4F	WPT-726
2003-02	Resistor — Blower Motor (Front)	4F	WPT-726
2001-97	Resistor — Blower Motor (Front)	4M	WPT-114
	5M	WPT-635
	Resistor — Blower Motor (Rear)	4F	WPT-755
2003-02	Sensor — Adjustable Pedal	3M	WPT-241
2004-97	Sensor — Air Charge Temperature	2M	WPT-420
1997	Sensor — Air Suspension — LH — Front	4M	WPT-152
2004-97	Sensor — Ambient Temp		
	16 Gauge	2M	WPT-437
2000-98	Sensor — Ambient Temp		
	12 Gauge	2M	WPT-433
2001-97	Sensor — Anti-theft Ignition Tamper	2N/A	WPT-471
2002-98	Sensor — Brake Fluid Level	3M	WPT-118
2001-99	Sensor — Cam Shaft Position		
	5.0L	2F	WPT-579
1998-97	Sensor — Cam Shaft Position		
	5.0L	3M	WPT-196
2001-00	Sensor — Catalyst Monitor	4M	WPT-112
2001-97	Sensor — Coolant Temperature	2M	WPT-206
2002	Sensor — Crank Shaft Position		
	4.6L	2F	WPT-759
2001-98	Sensor — Crank Shaft Position	2M	WPT-531
2004-03	Sensor — Cylinder Head Temperature	2M	WPT-338
	Sensor — Delta Pressure Feedback EGR	3F	WPT-393
2001-97	Sensor — EATC In Car Temperature	2M	WPT-486
	Sensor — EGR Valve Position	3F	WPT-427
1998-97	Sensor — Intake Manifold Runner Control	2M	WPT-146
2004	Sensor — Knock	2M	WPT-351
2001-99	Sensor — Knock	2M	WPT-351
2001-97	Sensor — Low Coolant	2M	WPT-684
2002-97	Sensor — Mass Air Flow	6M	WPT-102
2001-98	Sensor — Mass Air Flow — In-line (Male)		
	4.0L	4F	WPT-330
2001-97	Sensor — Mass Air Flow — In-line (Male)		
	5.0L	4F	WPT-330
2001-98	Sensor — O2 (HEGO/EGO)		
	4.0L	4M	WPT-807
1997	Sensor — O2 (HEGO/EGO)		
	A Polarity	4M	WPT-112
2001-97	Sensor — Oil Level	3M	WPT-235
2001-99	Sensor — Reverse Park Aid (RPA)	3F	WPT-223
2004-02	Sensor — Seat Track Position	2F	WPT-490
2001-98	Sensor — Steering Rotation	4M	WPT-417
2001-97	Sensor — Throttle Position	3F	WPT-170
2004-97	Sensor — Transmission Range		
	AT	12M	WPT-806
2001-97	Sensor — Transmission Range		
	5.0L	8M	WPT-389
2004-97	Sensor — Washer Fluid Level	2M	WPT-684
	Solenoid — Air Suspension (Front)	2M	WPT-589
2001-97	Solenoid — Canister Vent	2M	WPT-322
2003-97	Solenoid — EGR Vacuum Regulator	2M	WPT-359
1997	Solenoid — Pulse Vacuum 4x2 Hub (PVH)	2M	WPT-146
1999-98	Solenoid — Pulse Vacuum 4x4 Hub (PVH)	3F	WPT-754
2004-99	Speaker — Door (Front)	2F	WPT-373
1998-97	Speaker — Door (Front)	2M	WPT-416
2004-99	Speaker — Door (Rear)	2F	WPT-373

WIRING PIGTAIL KITS

LIGHT TRUCK



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
MERCURY TRUCK — Cont'd			
Mountaineer — Cont'd			
1998-97	Speaker — Door (Rear)	2M	WPT-416
2002	Speaker — Rear	2F	WPT-373
2001-99	Speaker — Reverse Park Aid (RPA)	2M	WPT-675
2004-02	Speaker — Subwoofer	10M	WPT-667
2001-97	Switch — 4x4 Control	4M	WPT-417
2002-97	Switch — A/C Compressor Clutch Cycling	4F	WPT-169
2000-98	Switch — A/C High Pressure	4F	WPT-169
2002	Switch — A/C Pressure Cut Off	4F	WPT-735
2001-98	Switch — A/C Pressure Cut Off	4F	WPT-169
2001-97	Switch — Air Suspension	3M	WPT-617
2004-97	Switch — Brake Pressure	2M	WPT-260
2001-98	Switch — Coolant Temperature Sending Unit	1M	WPT-476
1997	Switch — Coolant Temperature Sending Unit		
	Before 7/29/96	2M	WPT-431
	From 7/29/96	1M	WPT-476
2004-03	Switch — Deck Lid / Lift Gate Ajar	2F	WPT-489
2002	Switch — Deck Lid / Lift Gate Ajar	2M	WPT-146
2001-99	Switch — Deck Lid / Lift Gate Ajar	2M	WPT-441
1998-97	Switch — Deck Lid / Lift Gate Ajar	2M	WPT-146
2001-98	Switch — Dimmer	9M	WPT-238
1997	Switch — Dimmer	4M	WPT-556
2002	Switch — Door Ajar / Interior Lamp	2F	WPT-489
2001-97	Switch — Door Ajar / Interior Lamp	1F	WPT-499
2004-02	Switch — Door Lock (Cargo)	8F	WPT-683
	Switch — Door Lock (LH)	8F	WPT-683
2001-98	Switch — Door Lock (LH)	7F	WPT-325
1997	Switch — Door Lock (LH)	5M	WPT-527
2004-02	Switch — Door Lock (RH)	8F	WPT-683
2001-98	Switch — Door Lock (RH)	7F	WPT-321
2001-97	Switch — Fog Lamp	6M	WPT-259
	Switch — Headlamp	11F	WPT-187
	Switch — Heated Back Light (Rear Defrost)	6M	WPT-258
2004	Switch — Heated Seat — LH — Front	8M	WPT-547
2002-99	Switch — Heated Seat — LH — Front	8M	WPT-547
2001-99	Switch — Heated Seat — RH — Front	8M	WPT-547
2001-98	Switch — Heater / A/C Blower (Front)	4M	WPT-103
1999-98	Switch — Heater A/C Blower (Rear)	8F	WPT-117
2001-97	Switch — Heater A/C Temp Control	3M	WPT-328
		4M	WPT-448
1999-97	Switch — Hood Ajar	4M	WPT-152
2004-02	Switch — Ignition	7M	WPT-804
2001-98	Switch — Ignition	15M	WPT-475
1997	Switch — Ignition	11M	WPT-491
2004-97	Switch — Inertia	3M	WPT-446
2004-02	Switch — Lift Gate Glass Ajar	2M	WPT-146
2001-97	Switch — Lift Gate Glass Ajar	2M	WPT-441
2002	Switch — Message Center	6F	WPT-586
2001-98	Switch — Message Center	12M	WPT-613
2001-97	Switch — Message Center	8F	WPT-100
2004-02	Switch — Moon Roof/ Sun Roof	6F	WPT-600
2001-97	Switch — Moon Roof/ Sun Roof	5M	WPT-527
2003-02	Switch — Multi Function	10F	WPT-156
2002	Switch — Multi Function	8F	WPT-500
2001-98	Switch — Multi Function	7F	WPT-179
2001-97	Switch — Multi Function	9M	WPT-611
1999	Switch — Multi Function	11M	WPT-178
2004-02	Switch — Multifunction (Turn)	8F	WPT-500
2001-97	Switch — Neutral Tow		
	With A/C	1F	WPT-309
2004-02	Switch — Oil Sending Unit	1M	WPT-439
1998-97	Switch — Oil Sending Unit	1M	WPT-616



WIRING PIGTAIL KITS LIGHT TRUCK

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
MERCURY TRUCK — Cont'd			
Mountaineer — Cont'd			
2004-97	Switch — Overdrive Cancel	2F	WPT-226
2002	Switch — Park Brake	1M	WPT-488
2001-97	Switch — Park Brake	1F	WPT-434
	Switch — Power Mirror	8M	WPT-313
2004-02	Switch — Power Window — Driver	8F	WPT-498
	6F	WPT-600
2001-97	Switch — Power Window — Driver		WPT-558
2004-02	Switch — Power Window — LH — Rear	6F	WPT-600
	Switch — Power Window — Passenger (Front)	8F	WPT-498
	6F	WPT-600
2001-97	Switch — Power Window — Passenger (Front)	7F	WPT-325
2002	Switch — Power Window — Quarter Glass	6F	WPT-600
2004-02	Switch — Power Window — RH — Rear	6F	WPT-600
2001-97	Switch — Power Window — RH — Rear 4 Door	7F	WPT-321
1999-98	Switch — Service Interval Reset	8F	WPT-100
2001-97	Switch — Stop Lamp	2M	WPT-197
	Switch — Wiper Washer — Rear	6M	WPT-246
2004-97	Terminal — Rear Window Defroster Grid	1F	WPT-371
	Test Connector — Diagnostic	16F	WPT-615
1997	Test Connector — Tachometer 8 Cyl. 5.0L (302)	2F	WPT-497
2004	Trailer Tow — Vehicle Side	8M	WPT-737
2001-97	Trailer Tow — Vehicle Side	4F	WPT-358
2004-03	Transceiver — Passive Anti-Theft (PATS)	4F	WPT-261
2002-98	Transceiver — Passive Anti-Theft (PATS)	4M	WPT-293
2004-97	Valve — Vapor Management	2M	WPT-545
Villager			
1999	Lamp — Headlamp- High/Low Beam	3M	WPT-101
2002	Switch — Door Lock (Cargo)	8F	WPT-683
	Switch — Door Lock (RH)	8F	WPT-683

WIRING PIGTAIL KITS

MEDIUM/HEAVY TRUCK



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK			
F SERIES			
2004-00	Air Dryer F650/F750	2M	WPT-775
1999	Air Dryer F700/F800	2M	WPT-775
	Alternator F700/800 Black; 4 Open Cavities		WPT-395
	F700/F800 Gray; 3 Open Cavities		WPT-403
2004-00	Element — Heated Seat F650/F750	2M	WPT-548
	Fuel Pump / Sending Unit	2M	WPT-536
2002-00	Junction Box — Relay F650/F750	15F	WPT-791
2003-00	Lamp — Air Pressure Gauge F650/F750	2M	WPT-789
1999	Lamp — Air Pressure Gauge F700/F800	2M	WPT-789
2002-00	Lamp — Front Turn F650/F750	2M	WPT-536
2004-00	Lamp — Instrument F650/F750	2M	WPT-597
1999	Lamp — Instrument F700/F800	2F	WPT-779
	Lamp — Park/Turn/Stop	4F	WPT-335
2004-00	Lamp — Roof Marker F650/F750	3M	WPT-550
2000	Lamp — Side Marker F650/F750 Regular Cab	3M	WPT-718
1999	Lamp — Sideview Mirror F700/F800	1F	WPT-648
	Motor — Heater / AC Blower (Front) F700/F800 Deluxe Heater	4M	WPT-114
2002-00	Motor — Power Window — LH — Front F650/F750	2F	WPT-698
	Motor — Power Window — RH — Front	2F	WPT-698
1999	Motor — Windshield Washer Fluid Pump F700/F800	2M	WPT-690
	Radio	8M	WPT-646
	Relay — Flasher	2M	WPT-710
2004-00	Relay — Starter Motor F650/F750	1M	WPT-616
1999	Relay — Starter Motor F700/F800	1M	WPT-616
2003-01	Sensor — Low Coolant F650/F750	3M	WPT-763
1999	Sensor — Throttle Position F700/F800		WPT-406
	F700/F800 5.9L Diesel	6M	WPT-733
2002-00	Sensor — Water in Fuel F650/F750	2M	WPT-751
1999	Sensor — Water in Fuel F700/F800	2M	WPT-751
1999-92	Solenoid — Fuel Shut-Off F700/F800		WPT-318
2004-00	Speaker — Door (Front) F650/F750	2M	WPT-719
2004-01	Switch — Air Cleaner Restrictor F650/F750	2M	WPT-536
2000	Switch — Clutch Pedal Position F650/F750	6M	WPT-518



WIRING PIGTAIL KITS MEDIUM/HEAVY TRUCK

YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
F SERIES — Cont'd			
1999	Switch — Coolant Temperature Sending Unit F700/F800	1M	WPT-476
2004-00	Switch — Gear Shift Select / Neutral Safety F650/F750	2F	WPT-781
1999	Switch — Gear Shift Select / Neutral Safety F700/F800	2F	WPT-781
2003-00	Switch — Headlamp F650/F750	6F	WPT-505
	6F	WPT-845
1999-92	Switch — Headlamp F700/F800		WPT-317
1999-90	Switch — Heater / A/C Blower (Front) F700/F800	5F	WPT-319
2004-00	Switch — Heater A/C Temp Control F650/F750	4M	WPT-448
	Switch — Hydro-Max Flow	2F	WPT-713
1999-90	Switch — Ignition F700/F800	3M	WPT-320
2003-01	Switch — Low Air Pressure 7.3L F650/F750	4M	WPT-685
2003-00	Switch — Low Air Pressure F650/F750 All w/Air Brake System; All 5.9L Diesel	4M	WPT-685
2001	Switch — Low Air Pressure F650/750 All Allison MD3000, Hydraulic-Split Brake System	4M	WPT-685
2003-00	Switch — Multifunction (Turn) F650/750	9M	WPT-611
1999	Switch — Oil Sending Unit F700/F800	1M	WPT-616
2004-00	Switch — Park Brake F650/F750	1M	WPT-488
	Switch — Reverse Park Aid	2F	WPT-564
1999	Switch — Stop Lamp F700/F800	1M	WPT-616
F & B SERIES			
1998-95	Air Dryer F & B Series	2M	WPT-775
1998-90	Alternator F & B Series Black; 4 Open Cavities		WPT-395
	F & B Series Gray; 3 Open Cavities		WPT-403
1998	Coil — Ignition	2M	WPT-595
1998-90	Lamp — Air Pressure Gauge F & B Series	2M	WPT-789
1998	Lamp — Instrument F & B Series	2F	WPT-779
1998-95	Lamp — Park/Turn/Stop F & B Series	4F	WPT-335
1998	Lamp — Sideview Mirror F & B Series	1F	WPT-648
	Module — Ignition	3M	WPT-601
1998-90	Motor — Heater / AC Blower (Front) F & B Series Standard Heater	2M	WPT-104
	F & B Series Deluxe Heater	4M	WPT-114
1998-95	Motor — Windshield Washer Fluid Pump F & B Series	2M	WPT-690
1998	Relay — Flasher F & B Series	2M	WPT-710
1998-95	Sensor — Low Coolant	2M	WPT-433
1998-90	Sensor — Throttle Position		WPT-406
	Solenoid — Fuel Shut-Off		WPT-318

WIRING PIGTAIL KITS MEDIUM/HEAVY TRUCK



YEAR	CONTACT POINT	LEADS/ GENDER	PART NO.
FORD TRUCK — Cont'd			
F & B SERIES — Cont'd			
1998-95	Switch — Gear Shift Select / Neutral Safety		
	F & B Series	2F	WPT-781
1998-90	Switch — Headlamp		WPT-317
	Switch — Heater / A/C Blower (Front)		
	F & B Series	5F	WPT-319
	Switch — Ignition	3M	WPT-320